



Chapter 2. Machine Instructions and Programs



Objectives

- Machine instructions and program execution, including branching and subroutine call and return operations.
- Number representation and addition/subtraction in the 2's-complement system.
- Addressing methods for accessing register and memory operands.
- Assembly language for representing machine instructions, data, and programs.
- Program-controlled Input/output operations.



Number, Arithmetic Operations, and Characters




Signed Integer

- 3 major representations:
 - Sign and magnitude
 - One's complement
 - Two's complement
- Assumptions:
 - 4-bit machine word
 - 16 different values can be represented
 - Roughly half are positive, half are negative




Sign and Magnitude Representation

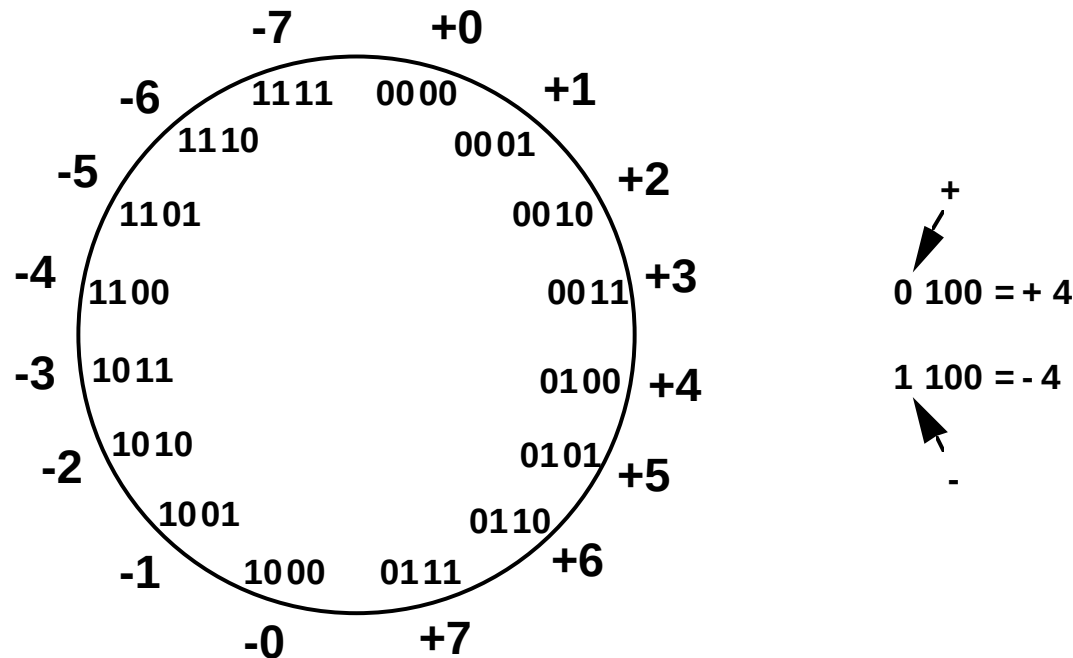

- High order bit is sign: 0 = positive (or zero), 1 = negative
- Three low order bits is the magnitude:
0 (000) thru 7 (111)
- Number range for n bits = $(+/-) 2^{n-1} - 1$
- Two representations for 0



One's Complement Representation

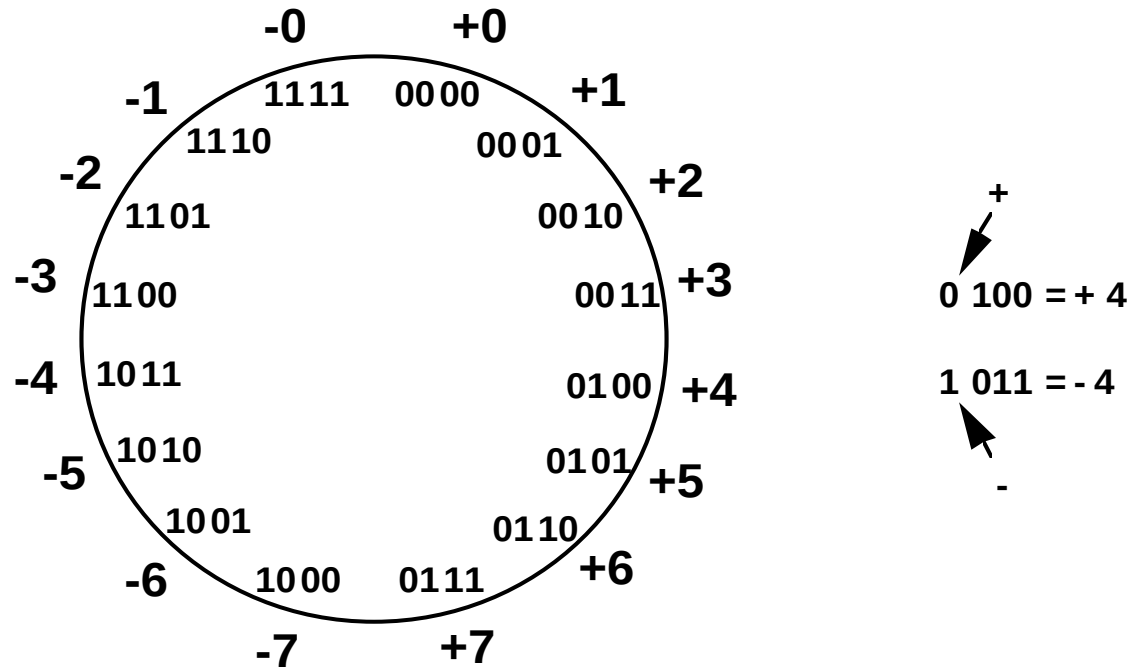


- Subtraction implemented by addition & 1's complement
- Still two representations of 0! This causes some problems
- Some complexities in addition
perform binary addition, then add in an end-around carry value.



Two's Complement Representation

*like 1's comp
except
shifted
one position
clockwise*

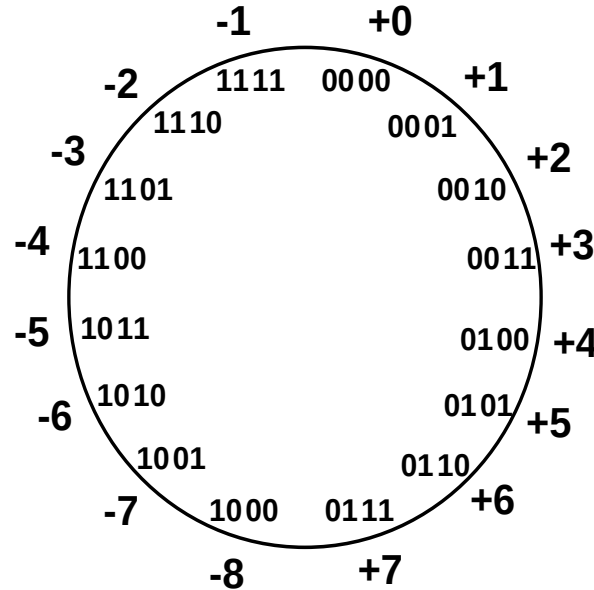

$\begin{matrix} + \\ \swarrow \\ 0\ 100 = +4 \end{matrix}$
 $\begin{matrix} \nwarrow \\ 1\ 100 = -4 \\ \downarrow \\ - \end{matrix}$

Notation	Min	Max
Unsigned:	0	255
One's Comp:	-127	+127
Two's Comp:	-128	+127

- Only one representation for 0
- One more negative number than positive number



Binary, Signed-Integer Representations

B	Values represented		
$b_3b_2b_1b_0$	Sign and magnitude	1's complement	2's complement
0 1 1 1	+ 7	+ 7	+ 7
0 1 1 0	+ 6	+ 6	+ 6
0 1 0 1	+ 5	+ 5	+ 5
0 1 0 0	+ 4	+ 4	+ 4
0 0 1 1	+ 3	+ 3	+ 3
0 0 1 0	+ 2	+ 2	+ 2
0 0 0 1	+ 1	+ 1	+ 1
0 0 0 0	+ 0	+ 0	+ 0
1 0 0 0	- 0	- 7	- 8
1 0 0 1	- 1	- 6	- 7
1 0 1 0	- 2	- 5	- 6
1 0 1 1	- 3	- 4	- 5
1 1 0 0	- 4	- 3	- 4
1 1 0 1	- 5	- 2	- 3
1 1 1 0	- 6	- 1	- 2
1 1 1 1	- 7	- 0	- 1

Figure 2.1. Binary, signed-integer representations.



Addition and Subtraction - 2's Complement

If carry-in to the high order bit = carry-out then ignore carry
if carry-in differs from carry-out then overflow

$$\begin{array}{r} 4 \quad 0100 \\ + 3 \quad 0011 \\ \hline \end{array}$$

$$7 \quad 0111$$

$$\begin{array}{r} 4 \quad 0100 \\ - 3 \quad 1101 \\ \hline \end{array}$$

$$1 \quad 10001$$

$$\begin{array}{r} -4 \quad 1100 \\ + (-3) \quad 1101 \\ \hline \end{array}$$

$$-7 \quad 11001$$

$$\begin{array}{r} -4 \quad 1100 \\ + 3 \quad 0011 \\ \hline \end{array}$$

$$-1 \quad 1111$$

Simpler addition scheme makes twos complement the most common choice for integer number systems within digital systems



2's-Complement Add and Subtract Operations



(a)	$\begin{array}{r} 0010 \\ + 0011 \\ \hline 0101 \end{array}$	$\begin{array}{l} (+2) \\ (+3) \\ (+5) \end{array}$	(b)	$\begin{array}{r} 0100 \\ + 1010 \\ \hline 1110 \end{array}$	$\begin{array}{l} (+4) \\ (-6) \\ (-2) \end{array}$
(c)	$\begin{array}{r} 1011 \\ + 1110 \\ \hline 1001 \end{array}$	$\begin{array}{l} (-5) \\ (-2) \\ (-7) \end{array}$	(d)	$\begin{array}{r} 0111 \\ + 1101 \\ \hline 0100 \end{array}$	$\begin{array}{l} (+7) \\ (-3) \\ (+4) \end{array}$
(e)	$\begin{array}{r} 1101 \\ - 1001 \\ \hline \end{array}$	$\begin{array}{l} (-3) \\ (-7) \end{array}$	$\Rightarrow$	$\begin{array}{r} 1101 \\ + 0111 \\ \hline 0100 \end{array}$	$\begin{array}{l} (+4) \\ (+4) \end{array}$
(f)	$\begin{array}{r} 0010 \\ - 0100 \\ \hline \end{array}$	$\begin{array}{l} (+2) \\ (+4) \end{array}$	$\Rightarrow$	$\begin{array}{r} 0010 \\ + 1100 \\ \hline 1110 \end{array}$	$\begin{array}{l} (-2) \\ (-2) \end{array}$
(g)	$\begin{array}{r} 0110 \\ - 0011 \\ \hline \end{array}$	$\begin{array}{l} (+6) \\ (+3) \end{array}$	$\Rightarrow$	$\begin{array}{r} 0110 \\ + 1101 \\ \hline 0011 \end{array}$	$\begin{array}{l} (+3) \\ (+3) \end{array}$
(h)	$\begin{array}{r} 1001 \\ - 1011 \\ \hline \end{array}$	$\begin{array}{l} (-7) \\ (-5) \end{array}$	$\Rightarrow$	$\begin{array}{r} 1001 \\ + 0101 \\ \hline 1110 \end{array}$	$\begin{array}{l} (-2) \\ (-2) \end{array}$
(i)	$\begin{array}{r} 1001 \\ - 0001 \\ \hline \end{array}$	$\begin{array}{l} (-7) \\ (+1) \end{array}$	$\Rightarrow$	$\begin{array}{r} 1001 \\ + 1111 \\ \hline 1000 \end{array}$	$\begin{array}{l} (-8) \\ (-8) \end{array}$
(j)	$\begin{array}{r} 0010 \\ - 1101 \\ \hline \end{array}$	$\begin{array}{l} (+2) \\ (-3) \end{array}$	$\Rightarrow$	$\begin{array}{r} 0010 \\ + 0011 \\ \hline 0101 \end{array}$	$\begin{array}{l} (+5) \\ (+5) \end{array}$

Figure 2.4. 2's-complement Add and Subtract operations.



Overflow in 2's-Complement Addition

Overflow - Add two positive numbers to get a negative number or two negative numbers to get a positive number

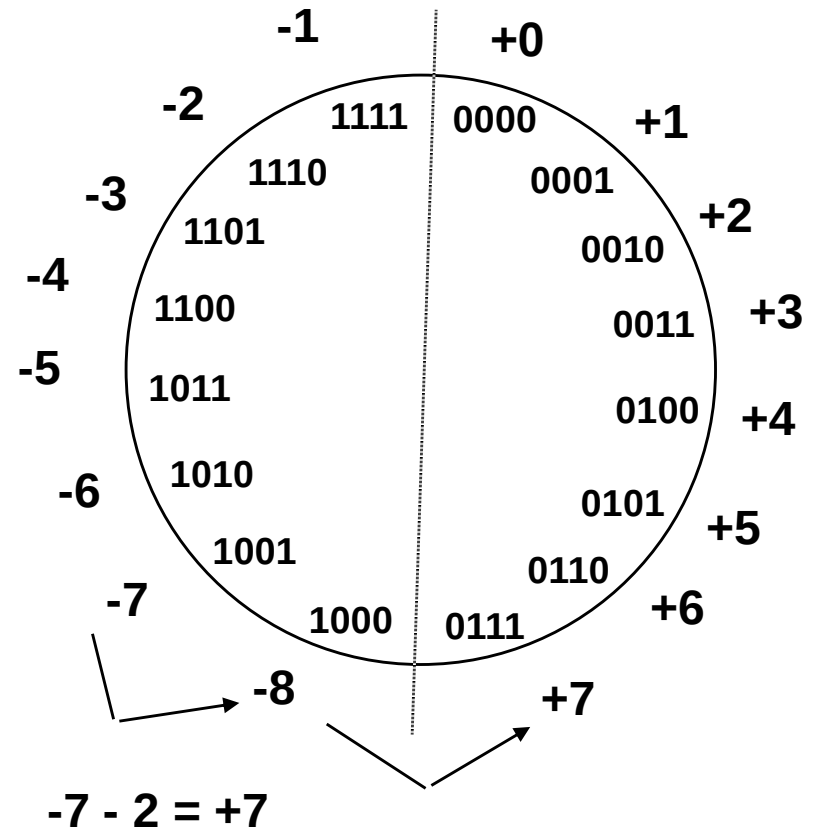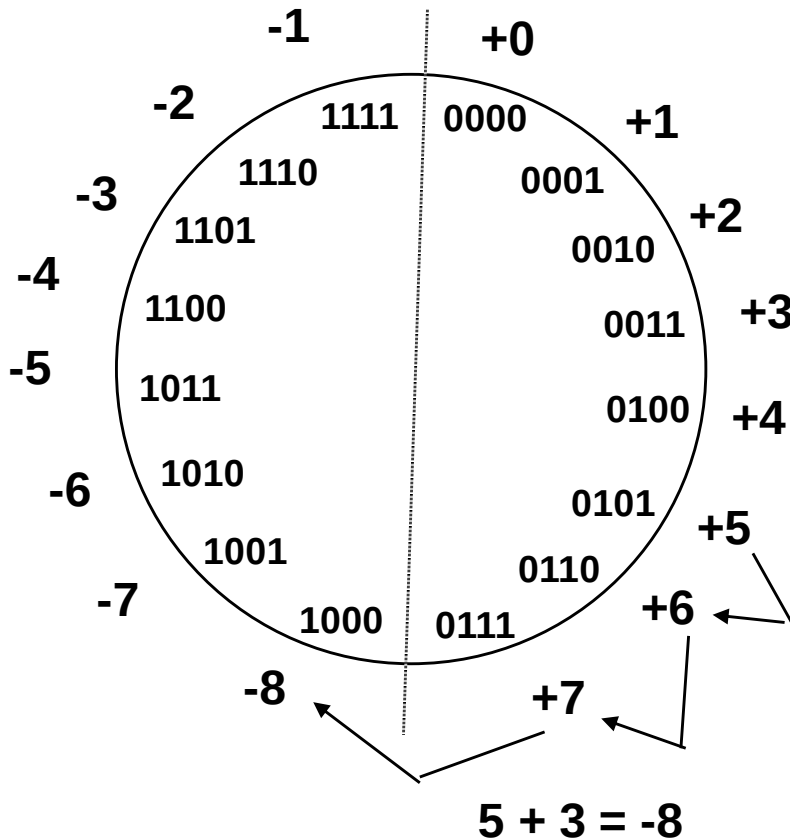



Overflow Conditions

5 0 1 1 1
 0 1 0 1

3 0 0 1 1

-8 1 0 0 0

Overflow

5 0 0 0 0
 0 1 0 1

2 0 0 1 0

7 0 1 1 1

No overflow

-7 1 0 0 0
 1 0 0 1

-2 1 1 0 0

7 1 0 1 1 1

Overflow

-3 1 1 1 1
 1 1 0 1

-5 1 0 1 1

-8 1 1 0 0 0

No overflow

Overflow when carry-in to the high-order bit does not equal carry out



2's-Complement Addition-examples 1

$\begin{array}{r} 1001 = -7 \\ +0101 = 5 \\ \hline 1110 = -2 \end{array}$ (a) $(-7) + (+5)$	$\begin{array}{r} 1100 = -4 \\ +0100 = 4 \\ \hline 10000 = 0 \end{array}$ (b) $(-4) + (+4)$
$\begin{array}{r} 0011 = 3 \\ +0100 = 4 \\ \hline 0111 = 7 \end{array}$ (c) $(+3) + (+4)$	$\begin{array}{r} 1100 = -4 \\ +1111 = -1 \\ \hline 11011 = -5 \end{array}$ (d) $(-4) + (-1)$
$\begin{array}{r} 0101 = 5 \\ +0100 = 4 \\ \hline 1001 = \text{Overflow} \end{array}$ (e) $(+5) + (+4)$	$\begin{array}{r} 1001 = -7 \\ +1010 = -6 \\ \hline 10011 = \text{Overflow} \end{array}$ (f) $(-7) + (-6)$



www.JntukMaterials.com

2's-Complement Addition-examples 2

$\begin{array}{r} 0010 = 2 \\ +1001 = -7 \\ \hline 1011 = -5 \end{array}$ (a) M = 2 = 0010 S = 7 = 0111 -S = 1001	$\begin{array}{r} 0101 = 5 \\ +1110 = -2 \\ \hline 10011 = 3 \end{array}$ (b) M = 5 = 0101 S = 2 = 0010 -S = 1110
$\begin{array}{r} 1011 = -5 \\ +1110 = -2 \\ \hline 11001 = -7 \end{array}$ (c) M = -5 = 1011 S = 2 = 0010 -S = 1110	$\begin{array}{r} 0101 = 5 \\ +0010 = 2 \\ \hline 0111 = 7 \end{array}$ (d) M = 5 = 0101 S = -2 = 1110 -S = 0010
$\begin{array}{r} 0111 = 7 \\ +0111 = 7 \\ \hline 1110 = \text{Overflow} \end{array}$ (e) M = 7 = 0111 S = -7 = 1001 -S = 0111	$\begin{array}{r} 1010 = -6 \\ +1100 = -4 \\ \hline 10110 = \text{Overflow} \end{array}$ (f) M = -6 = 1010 S = 4 = 0100 -S = 1100




Sign Extension

Task:

- ◆ Given w -bit signed integer x
- ◆ Convert it to $w+k$ -bit integer with same value

Rule:

- ◆ Make k copies of sign bit:
- ◆ $X \llcorner = x_{w-1}, \dots, x_{w-1}, x_{w-1}, x_{w-2}, \dots, x_0$

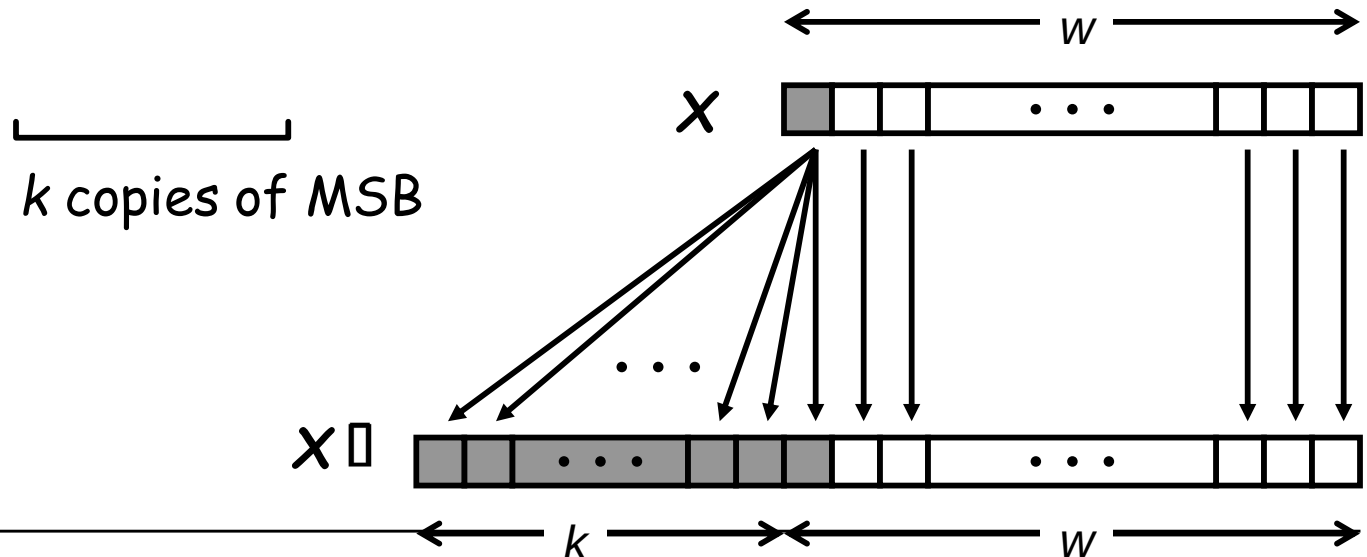



Sign Extension Example

```
short int x = 15213;
int      ix = (int) x;
short int y = -15213;
int      iy = (int) y;
```

	Decimal	Hex	Binary
x	15213	3B 6D	00111011 01101101
ix	15213	00 00 C4 92	00000000 00000000 00111011 01101101
y	-15213	C4 93	11000100 10010011
iy	-15213	FF FF C4 93	11111111 11111111 11000100 10010011



Memory Locations, Addresses, and Operations



Memory Location, Addresses, and Operation

- Memory consists of many millions of storage cells, each of which can store 1 bit.
- Data is usually accessed in n -bit groups. n is called word length.


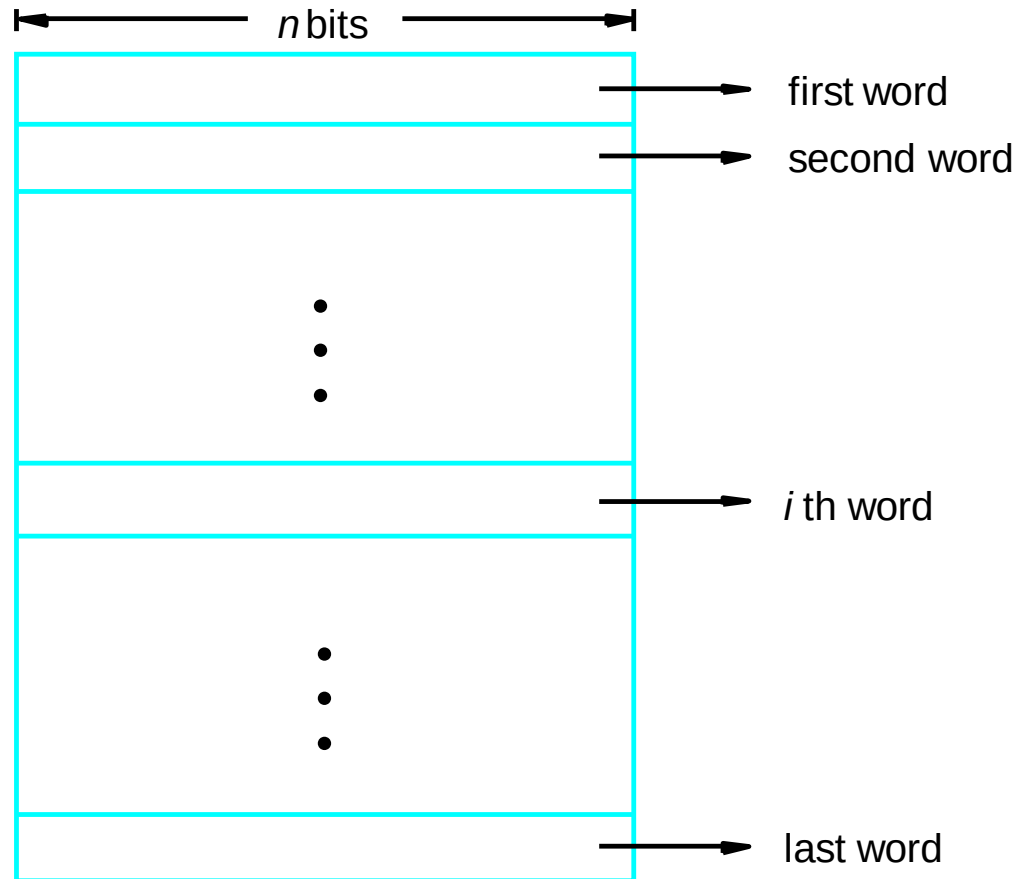


Figure 2.5. Memory words.




Memory Location, Addresses, and Operation

□ 32-bit word length example

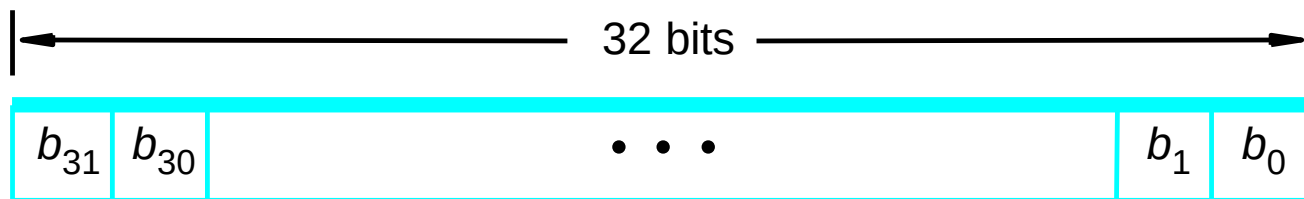

↑ Sign bit: $b_{31} = 0$ for positive numbers
 $b_{31} = 1$ for negative numbers

(a) A signed integer

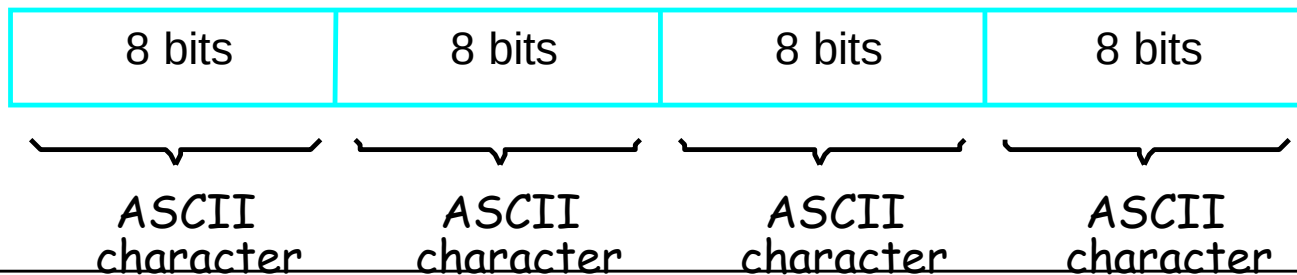

(b) Four characters



Memory Location, Addresses, and Operation

- To retrieve information from memory, either for one word or one byte (8-bit), addresses for each location are needed.
- A k -bit address memory has 2^k memory locations, namely 0 to $(2^k - 1)$, called memory space.
- 24-bit memory: $2^{24} = 16,777,216 = 16\text{M}$ ($1\text{M} = 2^{20}$)
- 32-bit memory: $2^{32} = 4\text{G}$ ($1\text{G} = 2^{30}$)
- 1K (kilo) = 2^{10}
- 1T (tera) = 2^{40}
- 1P (peta) = 2^{50}



Memory Location, Addresses, and Operation

- It is impractical to assign distinct addresses to individual bit locations in the memory.
- The most practical assignment is to have successive addresses refer to successive byte locations in the memory - byte-addressable memory.
- Byte locations have addresses 0, 1, 2, ... If word length is 32 bits, they successive words are located at addresses 0, 4, 8,...



Big-Endian and Little-Endian Assignments

Big-Endian: lower byte addresses are used for the most significant bytes of the word

Little-Endian: opposite ordering. lower byte addresses are used for the less significant bytes of the word

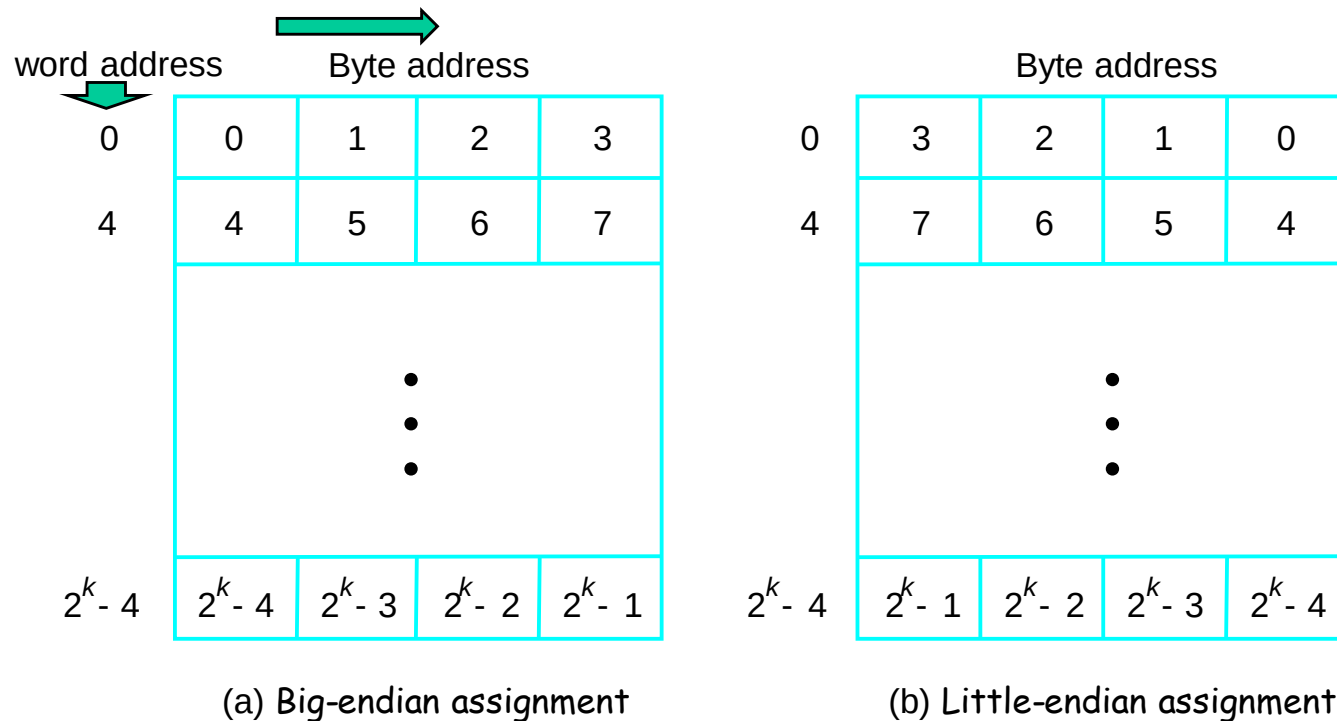


Figure 2.7. Byte and word addressing.



Memory Location, Addresses, and Operation

- Address ordering of bytes
- Word alignment
 - ◆ Words are said to be aligned in memory if they begin at a byte addr. that is a multiple of the num of bytes in a word.
 - 16-bit word: word addresses: 0, 2, 4,....
 - 32-bit word: word addresses: 0, 4, 8,....
 - 64-bit word: word addresses: 0, 8, 16,....
- Access numbers, characters, and character strings



Memory Operation

☐ Load (or Read or Fetch)

- Copy the content. The memory content doesn't change.
- Address - Load
- Registers can be used

☐ Store (or Write)

- Overwrite the content in memory
- Address and Data - Store
- Registers can be used



Instructions and Instruction Sequencing



"Must-Perform" Operations

- Task carried out by a computer program consists of a sequence of small steps :
 - Data transfers between the memory and the processor registers
 - Load and store
 - Arithmetic and logic operations on data
 - adding two numbers , complementing a number
 - Program sequencing and control
 - testing a particular condition ,transfer control
 - I/O transfers
 - Reading a character from the key board
 - Sending a character to be displayed on a display screen



Register Transfer Notation


- ❑ A symbolic notation to describe the microoperation transfers among registers.
- register transfer language (RTL) is a kind of intermediate representation (IR) that is very close to assembly language, such as that which is used in a compiler.
- It is used to describe data flow at the register-transfer level of an architecture.
- Identify a location by a symbolic name standing for its hardware binary address (LOC, R0,...)
- Contents of a location are denoted by placing square brackets around the name of the location
$$(R1 \leftarrow [LOC], R3 \leftarrow [R1] + [R2])$$
- ❑ Representation of a (conditional) transfer
P: $R2 \leftarrow R1$
- Register Transfer Notation (RTN)




Register Transfer

Hardware implementation of a controlled transfer: $P: R2 \leftarrow R1$

Block diagram:

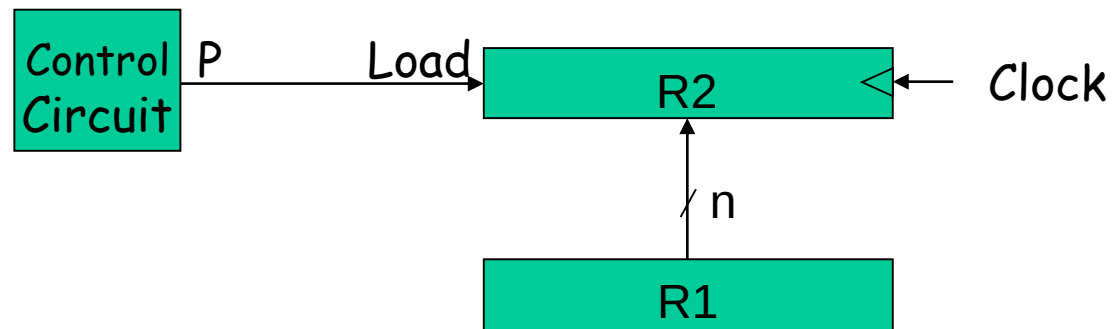

Timing diagram

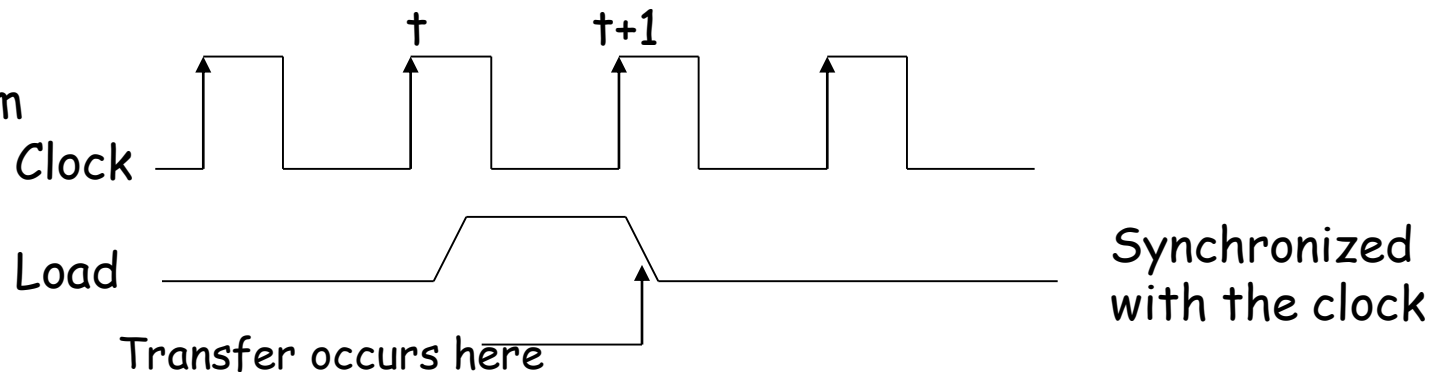



Assembly Language Notation

- Represent machine instructions and programs.
- Move LOC, R1 = $R1 \leftarrow [LOC]$
- Add R1, R2, R3 = $R3 \leftarrow [R1] + [R2]$



CPU Organization

- Single Accumulator
 - Result usually goes to the Accumulator
 - Accumulator has to be saved to memory quite often

- General Register
 - Registers hold operands thus reduce memory traffic
 - Register bookkeeping

- Stack
 - Operands and result are always in the stack





Instruction Formats

- Three-Address Instructions
 - ADD R1, R2, R3 $R1 \leftarrow R2 + R3$
- Two-Address Instructions
 - ADD R1, R2 $R1 \leftarrow R1 + R2$
- One-Address Instructions
 - ADD M $AC \leftarrow AC + M[AR]$
- Zero-Address Instructions
 - ADD $TOS \leftarrow TOS + (TOS - 1)$
- RISC Instructions
 - Lots of registers.
 - Memory is restricted to Load & Store





three address instruction

- Three explicit operands per instruction



$$D = A+B+C$$



- Operands specify source, destination, and result

- Directly operate on memory variables or registers

- Use Temp variables
- Operations are with the memory variables/two (one) memory variable(s) and one (two) register(s)

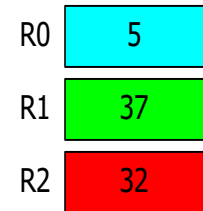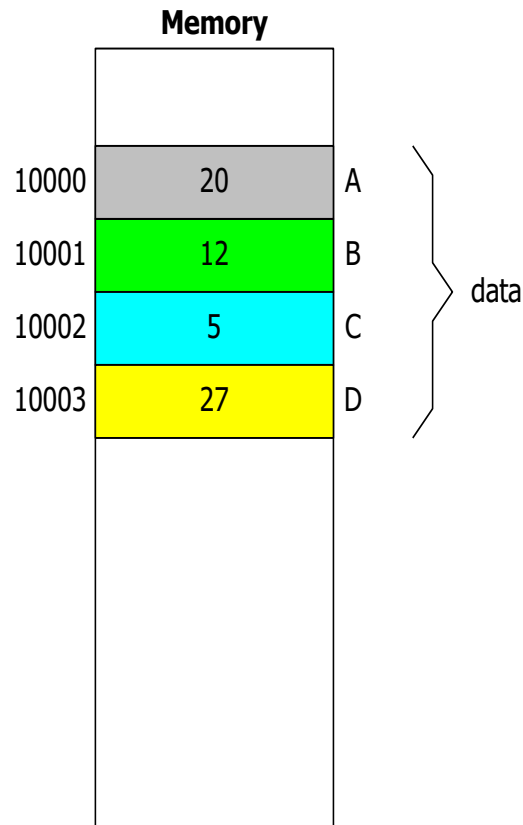




Note : $ADD\ R2, R0, R1$ means $R2 = R0 + R1$



two address instruction

- Two explicit operands per instruction
- Result overwrites one of the operands
- Operands known as source and destination
- Works well for instructions such as memory copy
- Uses Move (MOV) instruction
- MOV instruction transfers the operands between memory and processor registers
- Operations are in the registers / one in register and one in memory

$$D = A + B + C$$

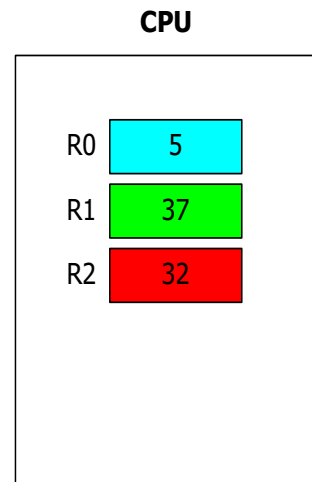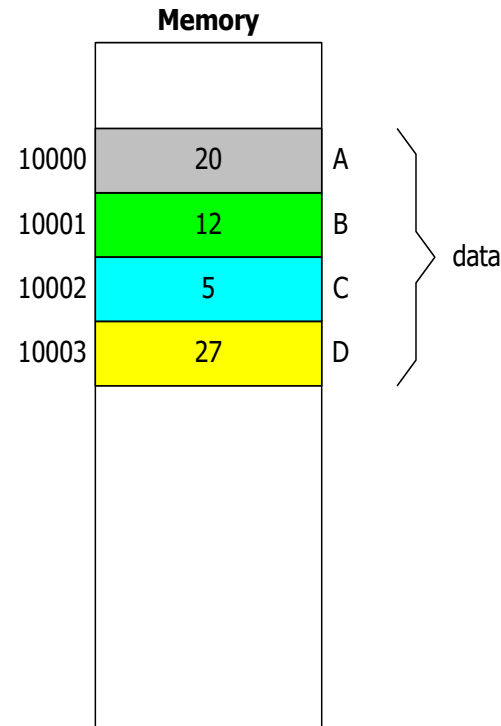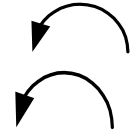


Note : *ADD R0,R1 means R0 = R0+R1*



One address instruction

- One explicit operand per instruction
- Second operand is implicit
 - Always found in hardware register - Known as accumulator (reg A)
- AC contains the result of all operations.
- Uses Load (LDA) and Store (STA) to access memory
- Operations are in the registers/ one can be in memory

$$D = A + B + C$$

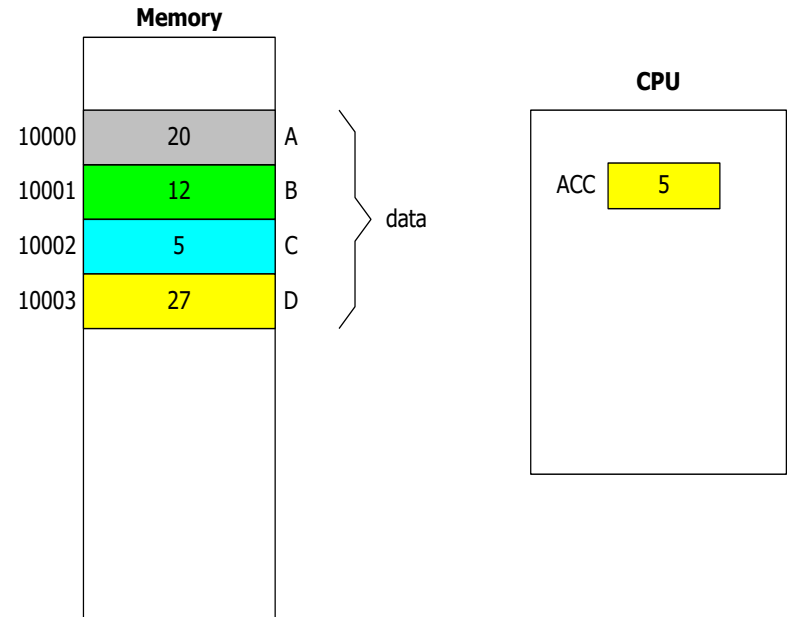

Note : ADD [10001] means Acc = Acc + [10001]

Example: Evaluate $(A+B) * (C+D)$

1.	ADD	R1, A, B	; $R1 \leftarrow M[A] + M[B]$
2.	ADD	R2, C, D	; $R2 \leftarrow M[C] + M[D]$
3.	MUL	X, R1, R2	; $M[X] \leftarrow R1 * R2$

- Three-address instruction formats can use each address field to specify either a processor register or a memory operand.
- It is assumed that the computer has two processor registers, R1 and R2. The symbol $M[A]$ denotes the operand at memory address symbolized by A.
- The advantage of the three-address format is that it results in short programs when evaluating arithmetic expressions.
- The disadvantage is that the binary-coded instructions require too many bits to specify three addresses.



Instruction Formats

Example: Evaluate $(A+B) * (C+D)$

□ Two-Address

- | | | | |
|----|-----|--------|-----------------------------|
| 1. | MOV | R1, A | ; $R1 \leftarrow M[A]$ |
| 2. | ADD | R1, B | ; $R1 \leftarrow R1 + M[B]$ |
| 3. | MOV | R2, C | ; $R2 \leftarrow M[C]$ |
| 4. | ADD | R2, D | ; $R2 \leftarrow R2 + M[D]$ |
| 5. | MUL | R1, R2 | ; $R1 \leftarrow R1 * R2$ |
| 6. | MOV | X, R1 | ; $M[X] \leftarrow R1$ |
- each address field can specify either a processor register or a memory word.
 - MOV instruction moves or transfers the operands to and from memory and processor registers .
 - The first symbol listed in an instruction is assumed to be both a source and the destination





Instruction Formats

Example: Evaluate $(A+B) * (C+D)$

□ One-Address

- | | | |
|----------|---|-----------------------------|
| 1. LOAD | A | ; $AC \leftarrow M[A]$ |
| 2. ADD | B | ; $AC \leftarrow AC + M[B]$ |
| 3. STORE | T | ; $M[T] \leftarrow AC$ |
| 4. LOAD | C | ; $AC \leftarrow M[C]$ |
| 5. ADD | D | ; $AC \leftarrow AC + M[D]$ |
| 6. MUL | T | ; $AC \leftarrow AC * M[T]$ |
| 7. STORE | X | ; $M[X] \leftarrow AC$ |

- One-address instructions use an implied accumulator (AC) register for all data manipulation.
- All operations are done between the AC register and a memory operand
- Uses LOAD and STORE instructions to transfer the operands between memory and processor registers.





Instruction Formats

Example: Evaluate $(A+B) * (C+D)$

❑ Zero-Address

- | | | | |
|----|------|---|--------------------------------|
| 1. | PUSH | A | ; TOS $\leftarrow$ A |
| 2. | PUSH | B | ; TOS $\leftarrow$ B |
| 3. | ADD | | ; TOS $\leftarrow$ (A + B) |
| 4. | PUSH | C | ; TOS $\leftarrow$ C |
| 5. | PUSH | D | ; TOS $\leftarrow$ D |
| 6. | ADD | | ; TOS $\leftarrow$ (C + D) |
| 7. | MUL | | ; TOS $\leftarrow$ (C+D)*(A+B) |
| 8. | POP | X | ; M[X] $\leftarrow$ TOS |

- A stack-organized computer does not use an address field for the instructions ADD and MUL.
- The PUSH and POP instructions, need an address field to specify the operand that communicates with the stack.





Instruction Formats

Example: Evaluate $(A+B) * (C+D)$

□ RISC

- | | | | |
|----|-------|------------|---------------------------|
| 1. | LOAD | R1, A | ; $R1 \leftarrow M[A]$ |
| 2. | LOAD | R2, B | ; $R2 \leftarrow M[B]$ |
| 3. | LOAD | R3, C | ; $R3 \leftarrow M[C]$ |
| 4. | LOAD | R4, D | ; $R4 \leftarrow M[D]$ |
| 5. | ADD | R1, R1, R2 | ; $R1 \leftarrow R1 + R2$ |
| 6. | ADD | R3, R3, R4 | ; $R3 \leftarrow R3 + R4$ |
| 7. | MUL | R1, R1, R3 | ; $R1 \leftarrow R1 * R3$ |
| 8. | STORE | X, R1 | ; $M[X] \leftarrow R1$ |

- Uses registers for all operations
- Uses LOAD and STORE instructions for operand transfer.





Practice on the following expression
$$Y = (A - B) / (C + D \times E)$$



Example: $Y = (A - B) / (C + D \times E)$

Three

Addresses:

SUB Y, A, B
MPY T, D, E
ADD T, T, C
DIV Y, Y, T

One Addresses:

LOAD D
MPY E
ADD C
STOR Y
LOAD A
SUB B
DIV Y

Two Addresses

MOV Y, A
SUB Y, B
MOV T, D
MPY T, E
ADD T, C
DIV Y, T

Stack (0 address)

Push A
Push B
SUB
Push C
Push D
Push E
MPY
ADD
DIV
Pop Y



Using Registers

- Registers are faster
- Shorter instructions
 - The number of registers is smaller (e.g. 32 registers need 5 bits)
- Potential speedup
- Minimize the frequency with which data is moved back and forth between the memory and processor registers.



Instruction Execution and Straight-Line Sequencing

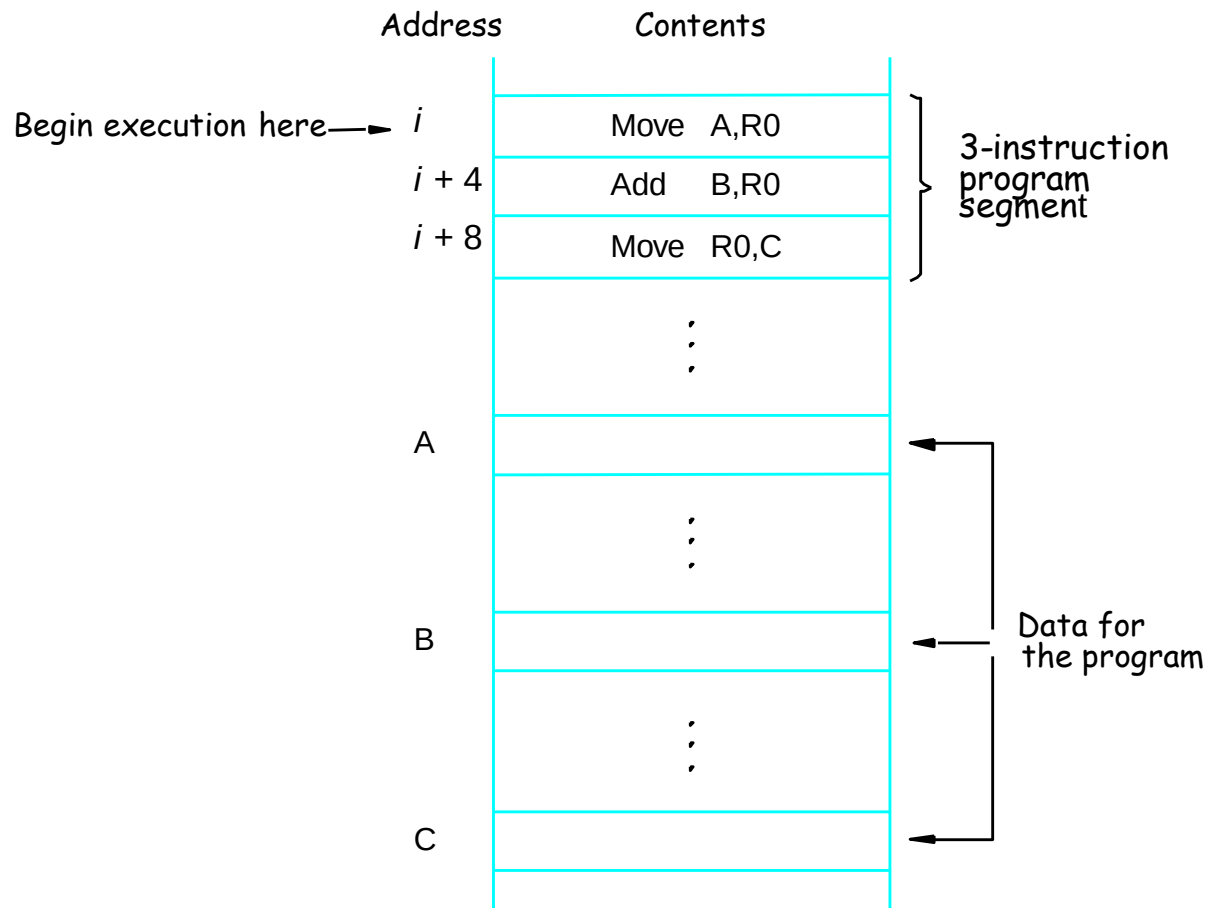


Figure 2.8. A program for $C \leftarrow [A] + [B]$.

Assumptions:

- One memory operand per instruction
- 32-bit word length
- Memory is byte addressable
- Full memory address can be directly specified in a single-word instruction

Two-phase procedure

- Instruction fetch
- Instruction execute



Branching

i	Move NUM1,R0
$i + 4$	Add NUM2,R0
$i + 8$	Add NUM3,R0
	⋮
$i + 4n - 4$	Add NUM $_n$, R0
$i + 4n$	Move R0,SUM
	⋮
SUM	
NUM1	
NUM2	
	⋮
NUM $_n$	

Figure 2.9. A straight-line program for adding n numbers.

Branching

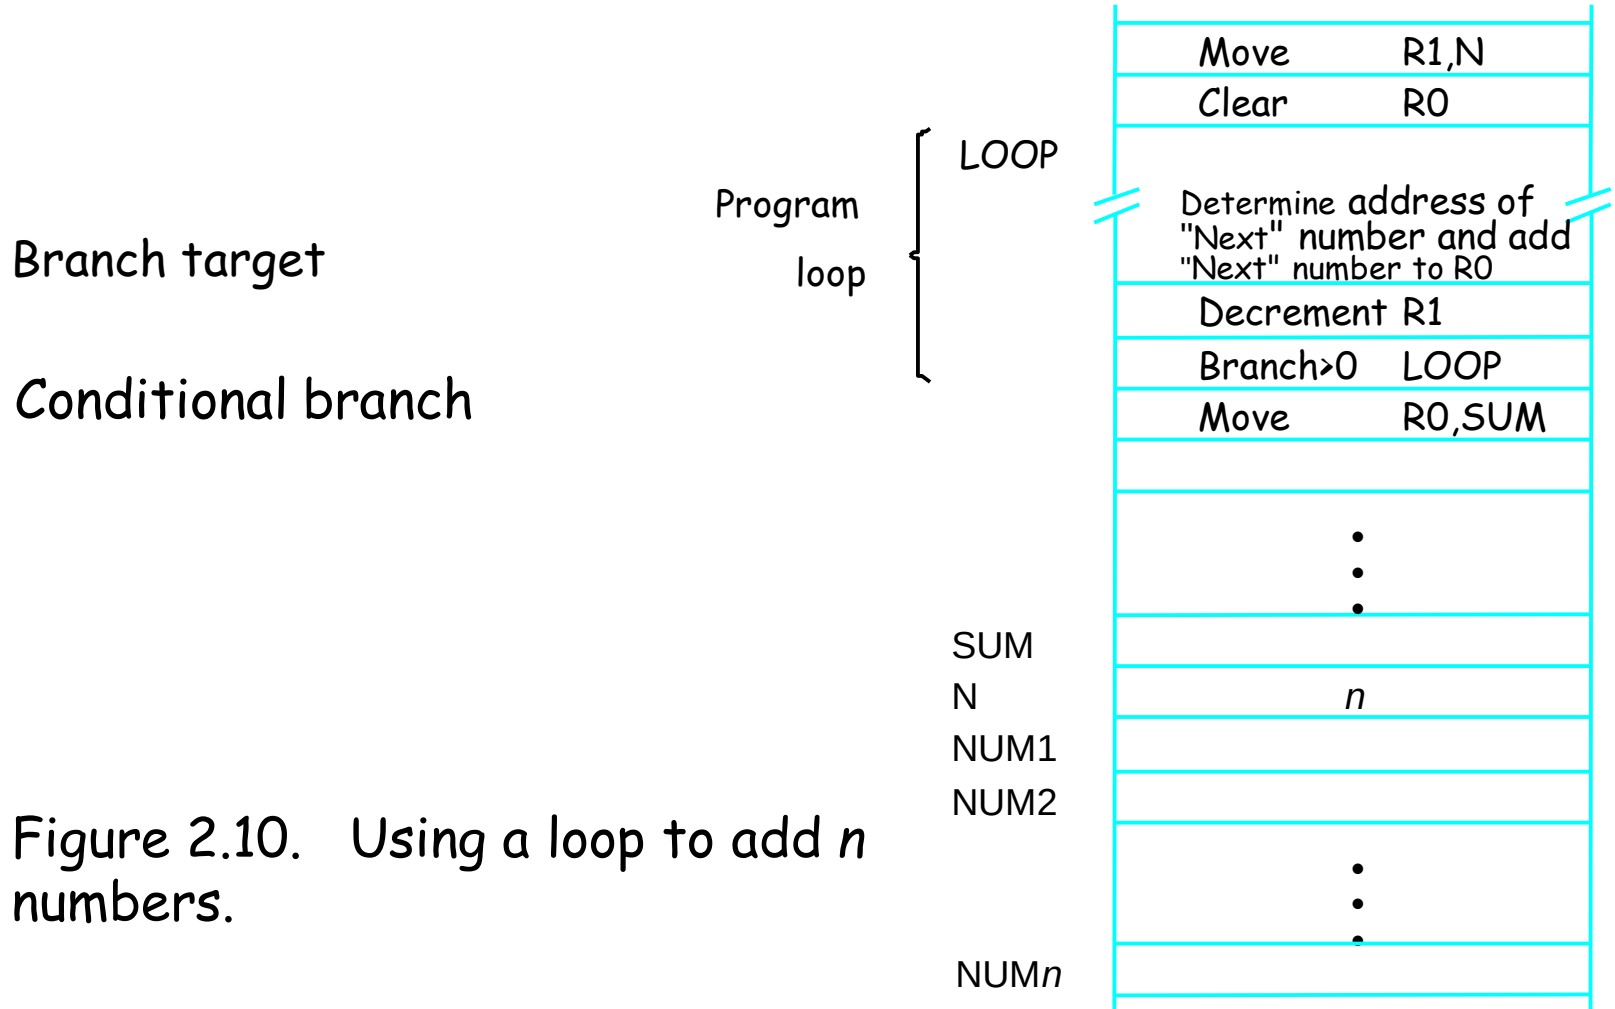


Figure 2.10. Using a loop to add *n* numbers.



Status flags (CF, PF, AF, ZF, SF, OF)

Set to represent the result of certain operations

Used to control conditional jump instructions

Different instructions affect different flags

❖ Condition code flags

➤ N / SF (negative/sign)

➤ ZF (zero)

➤ VF (overflow)

➤ CF (carry)

➤ PF (Parity Flag)

➤ AF (Auxiliary Flag)

❖ Condition code register / status register



Condition Codes/Flags

Status Flags

Carry (CF) : carry or borrow at MSB in add or subtract
last bit shifted out

Parity (PF) : low byte of result has even parity (PF)

Auxiliary (AF) : carry or borrow at bit 3

Zero (ZF): result is 0

Sign (SF): result is negative

Overflow (OF/VF): signed overflow occurred during add or subtract

1) CF = 1 if there is a carry out from the MSB on addition, or there is a borrow into the MSB on subtraction

CF = 0 otherwise

CF is also affected by shift and rotate instructions

2) PF = 1 if the low byte of a result has an even number of ones (even parity)

PF = 0 otherwise (odd parity)

3) AF = 1 if there is a carry out from bit 3 on addition, or there is a borrow into the bit 3 on subtraction

AF = 0 otherwise

AF is used in binary-coded decimal (BCD) operations.



4) ZF = 1 for a zero result

ZF = 0 for a non-zero result

5) SF = 1 if the MSB of a result is 1; it means the result is negative if you are giving a signed interpretation

SF = 0 if the MSB is 0

6) OF/VF = 1 if signed overflow occurred

OF/VF = 0 otherwise

(Signed) Overflow Can only occur when adding numbers of the same sign (subtracting with different signs)

Detected when carry into MSB is not equal to carry out of MSB

Easily detected because this implies the result has a different sign than the sign of the operands.

Programs can ignore the Flags!



Signed Overflow (Example)

Example 1

$$\begin{array}{r} 10010110 \\ + 10100011 \\ \hline 00111001 \end{array}$$

Carry in = 0, Carry out = 1

Neg+Neg=Pos

Signed overflow occurred : OF/VF= 1 (set)

Example 2

$$\begin{array}{r} 00110110 \\ + 01100011 \\ \hline 10011001 \end{array}$$

Carry in = 1, Carry out = 0

Pos+Pos=Neg

Signed overflow occurred : OF/VF = 1 (set)



Examples of No Signed Overflow

Example 3

$$\begin{array}{r} 10010110 \\ + 01100011 \\ \hline 11111001 \end{array}$$

Carry in = 0, Carry out = 0

Neg+Pos=Neg

No Signed overflow occurred: OF /VF= 0 (clear)

Example 4

$$\begin{array}{r} 10010110 \\ + 11110011 \\ \hline 10001001 \end{array}$$

Carry in = 1, Carry out = 1

Neg+Neg=Neg

No Signed overflow occurred: OF /VF= 0 (clear)



Unsigned Overflow (Example)

Example 5

The carry flag is used to indicate if an unsigned operation overflowed

- The processor only adds or subtracts - it does not care if the data is signed or unsigned!

$$\begin{array}{r} 10010110 \\ + 11110011 \\ \hline 10001001 \end{array}$$

Carry out = 1

Unsigned overflow occurred : CF = 1 (set)



Conditional Branch Instructions


□ Example:

◆ A: 1 1 1 1 0 0 0 0


◆ B: 0 0 0 1 0 1 0 0

A: 1 1 1 1 0 0 0 0

+(-B): 1 1 1 0 1 1 0 0

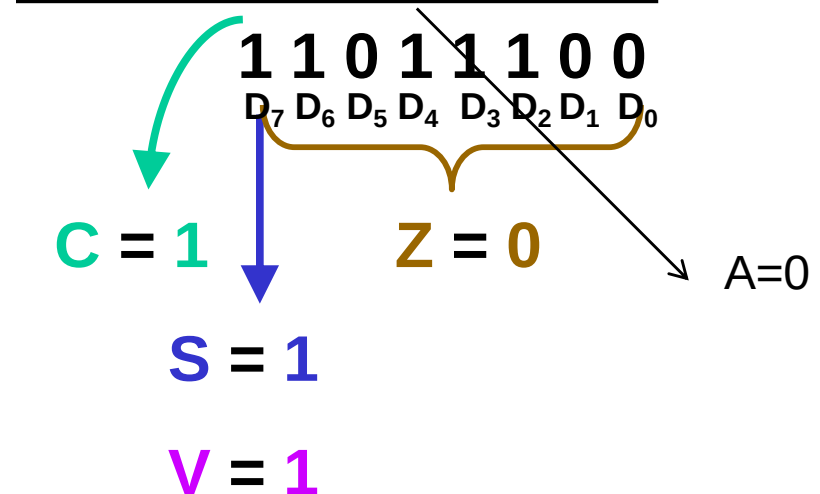

ADD and SUB - all flags affected
INC and DEC - all except CF

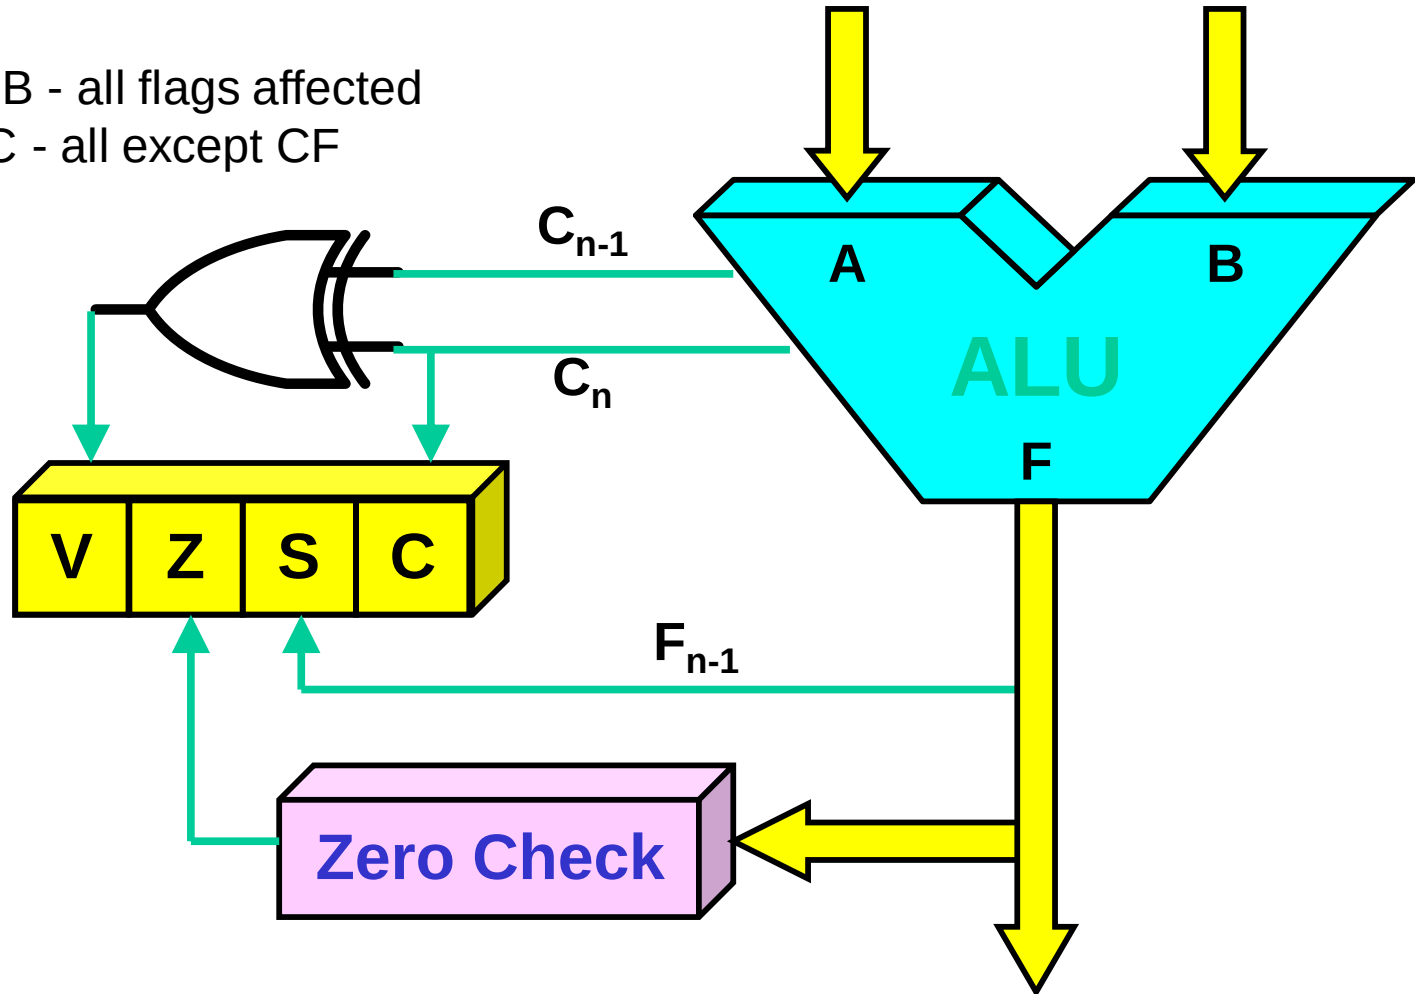



Addressing Modes

The different ways in which the operand address (registers/memory) is specified in an instruction are referred to as addressing modes.

Why use of use addressing mode techniques ?

- To give programming versatility to the user by providing such facilities as pointers to Memory, counters for loop control, indexing of data, and program relocation .
- To reduce the number of bits in the addressing field of the instruction.
- The availability of the addressing modes gives the experienced assembly language programmer flexibility for writing programs that are more efficient with respect to the number of instructions and execution time.



Generating Memory Addresses

- How to specify the address of branch target?
- Can we give the memory operand address directly in a single Add instruction in the loop?
- Use a register to hold the address of NUM1; then increment by 4 on each pass through the loop.



Addressing Modes



- Implied
 - AC is implied in "ADD M[AR]" in "One-Address" instr.
 - TOS is implied in "ADD" in "Zero-Address" instr.
- Immediate
 - The operand is given explicitly in the instruction
 - The use of a constant in "MOV R1, 5", i.e. $R1 \leftarrow 5$
- Register
 - Indicate which register holds the operand
 - The operand is the contents of a processor register; the name (address) of the register is given in the instruction.
 - Effective address (EA) = R
- - MOV R1, R2





❑ Register Indirect

- ◆ Indicate the register that holds the number of the register that holds the operand


MOV R1, (R2) or MOV R1, (LOC)

❑ Autoincrement / Autodecrement

- ◆ Access & update in 1 instr.

❑ Direct Address (ABSOLUTE MODE)

- ◆ Use the given address to access a
- ◆ memory location.

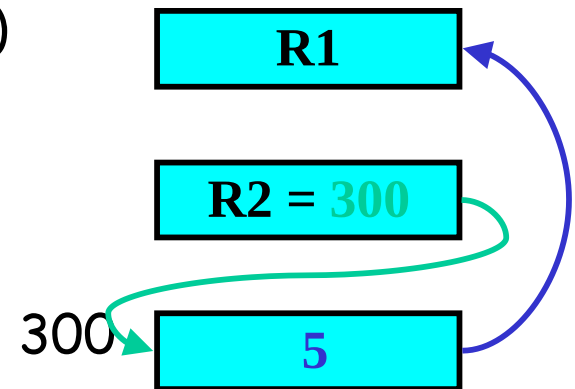

Effective address (EA) = address field (A)

The operand is in a memory location;
the address of this location is given explicitly in the
instruction

e.g. ADD A




Addressing Modes

❑ Indirect Address

The effective address of the operand is the contents of a **register or memory** location whose address appears in the instruction.

- Indicate the memory location that holds the address of the memory location that holds the data
- The register or memory location that contains the address of an operand is called a *pointer*.
- $EA = \text{pointer}$
- $EA = (A)$

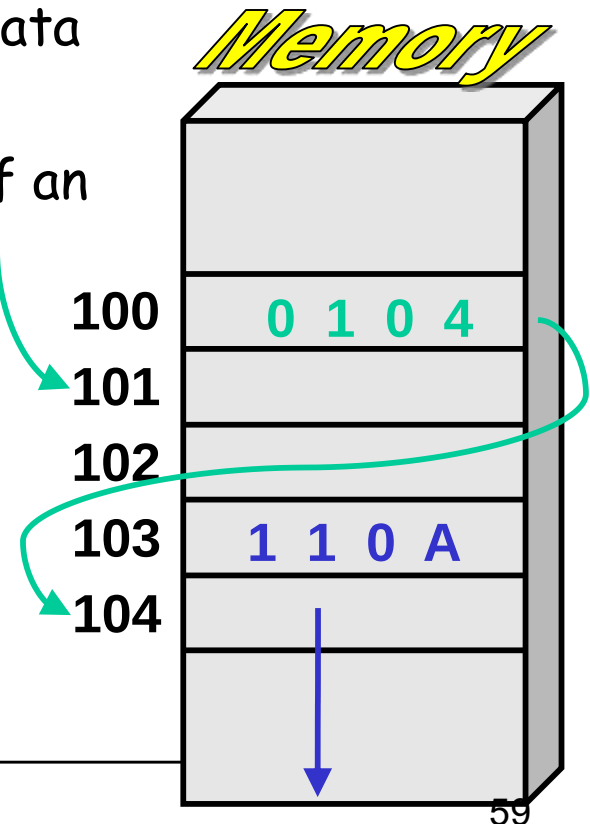




Addressing Modes

❑ Relative Address

◆ $EA = PC + \text{Relative Addr}$

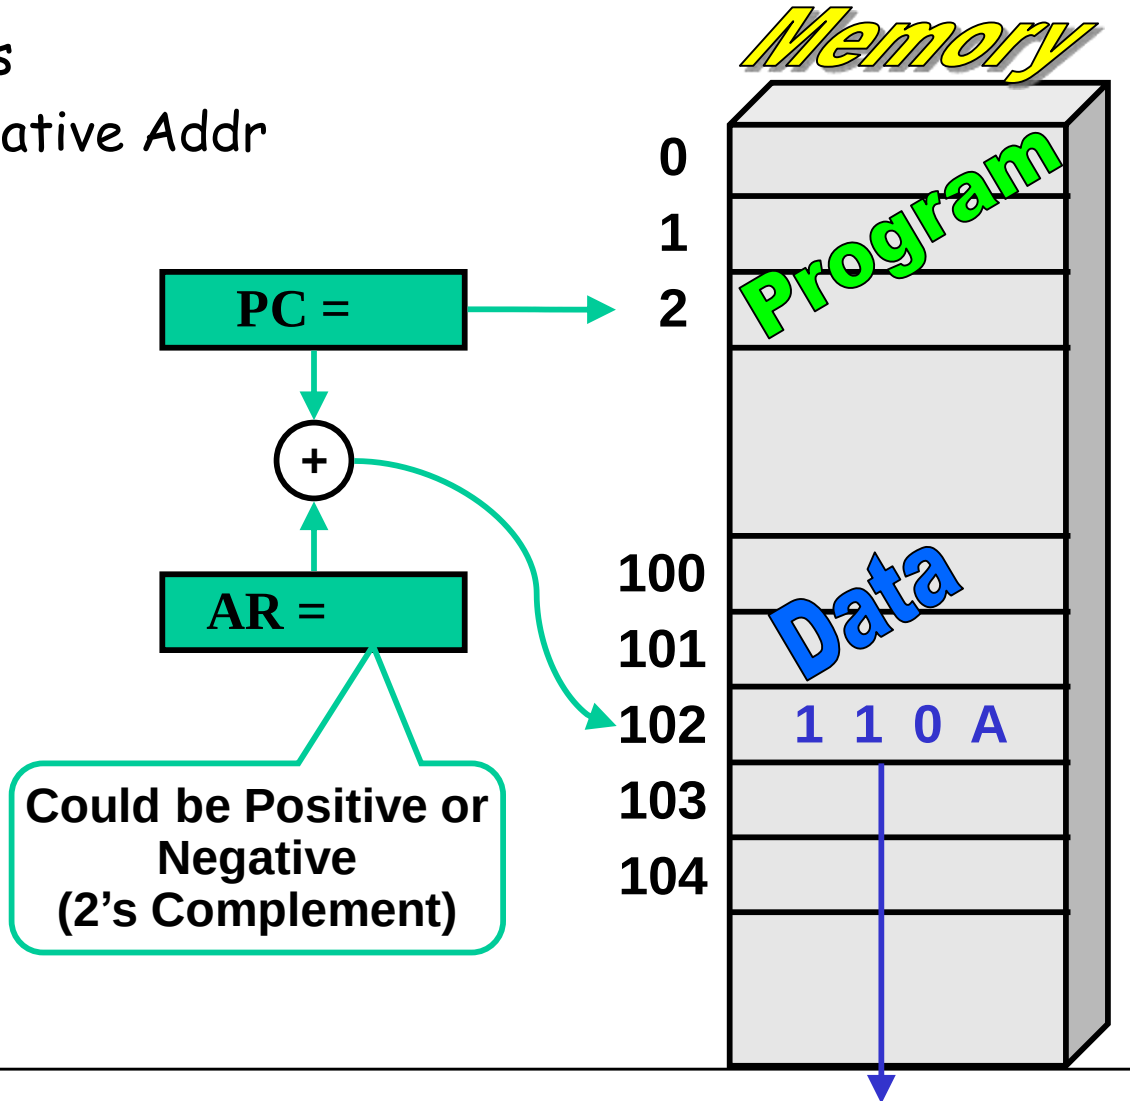




Addressing Modes

Indexed

◆ $EA = \text{Index Register} + \text{Relative Addr}$

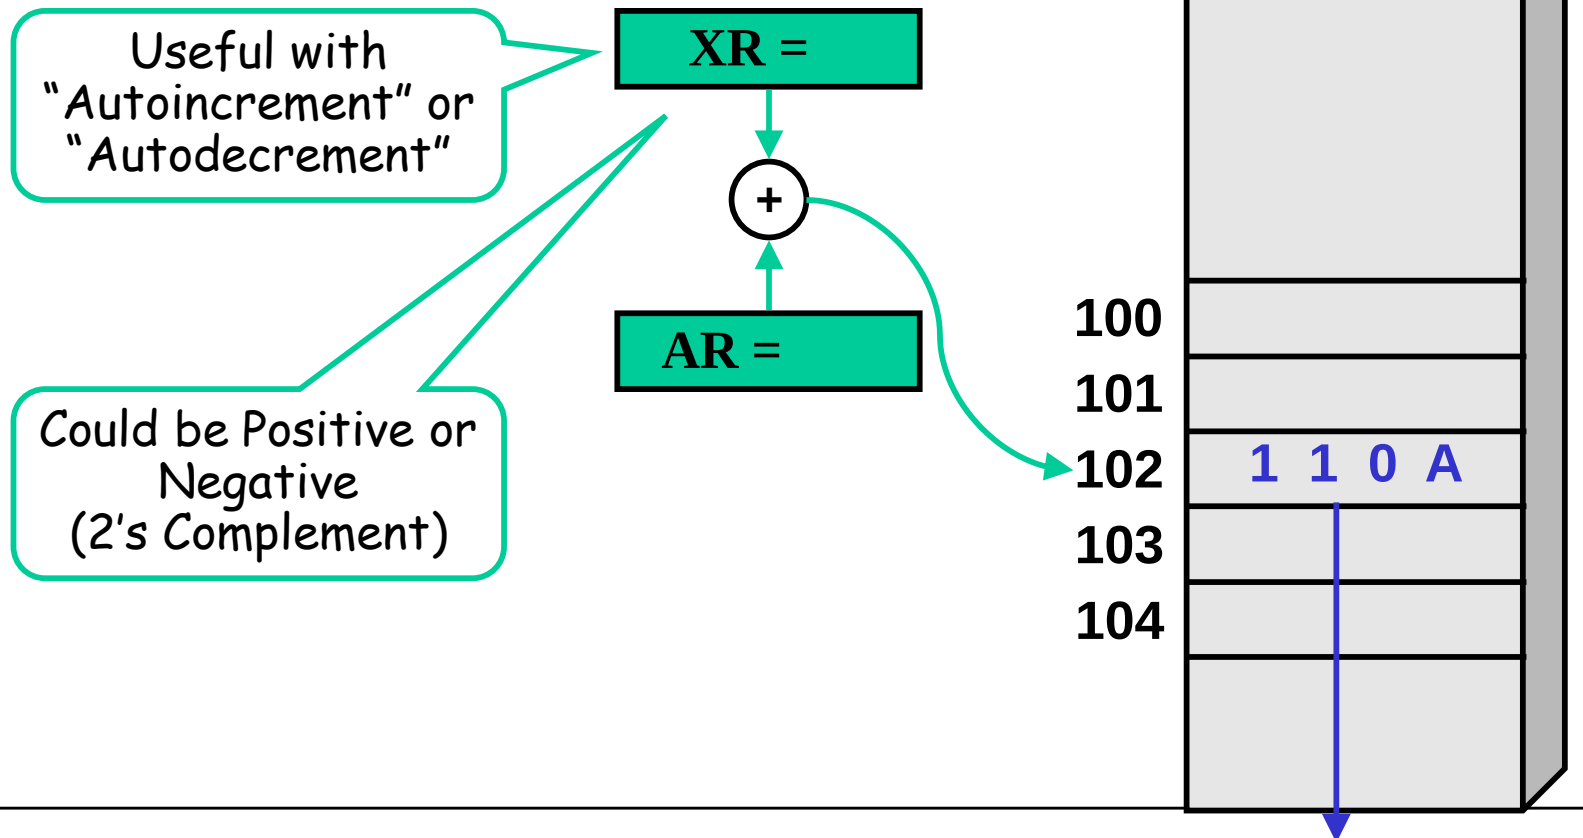




Addressing Modes

❑ Base Register

◆ $EA = \text{Base Register} + \text{Relative Addr}$

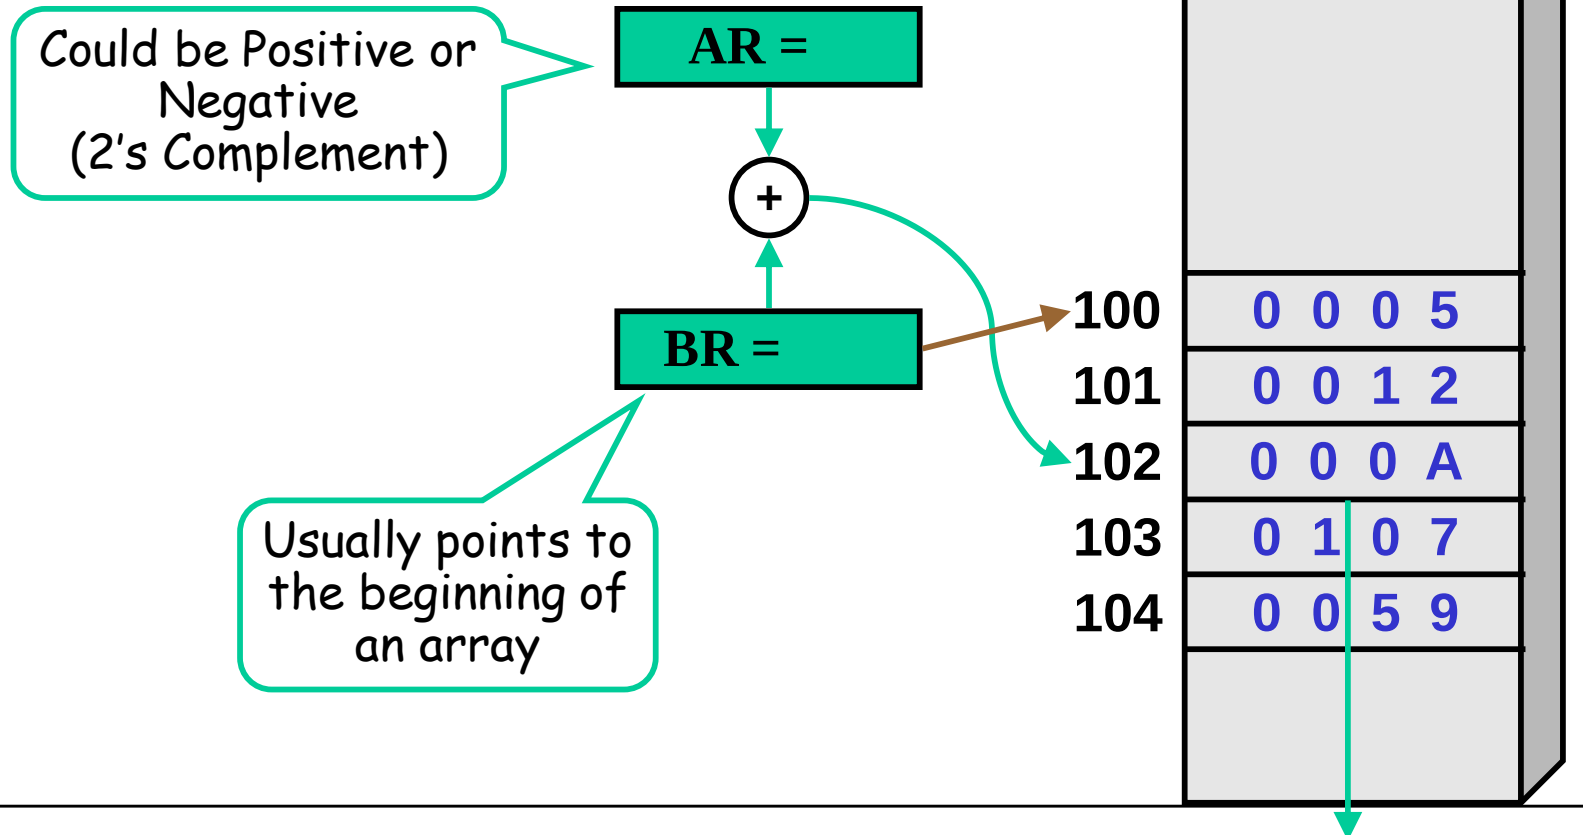



1. Immediate Addressing Mode

The operand is specified within the instruction.

Operand itself is provided in the instruction rather than its address

Instruction

Data

Move Immediate

MVI A, 15h ; $A \leftarrow 15 \text{ H}$; 15 h is the immediate operand

Add Immediate

ADI 3Eh ; $A \leftarrow A + 3E \text{ H}$; 3E h is the immediate operand



2. Register Addressing Mode

The operand is specified with in one of the processor registers.

Instruction specifies the register in which the operand is stored.

Move

MOV C, A ; $C \leftarrow A$ Here A is the operand specified

Add



ADD B ; $A \leftarrow A + B$



3. Register Indirect Addressing Mode

The instruction specifies the register in which the memory address of operand is placed.

MOV A , M

Move A ← [[H][L]]

It moves the data from memory location specified by HL register pair to A




EX 1. Register Indirect Addressing Mode

MOV A, M


$A \leftarrow [[H][L]]$

It moves the data from memory location specified by HL register pair to A.

Before

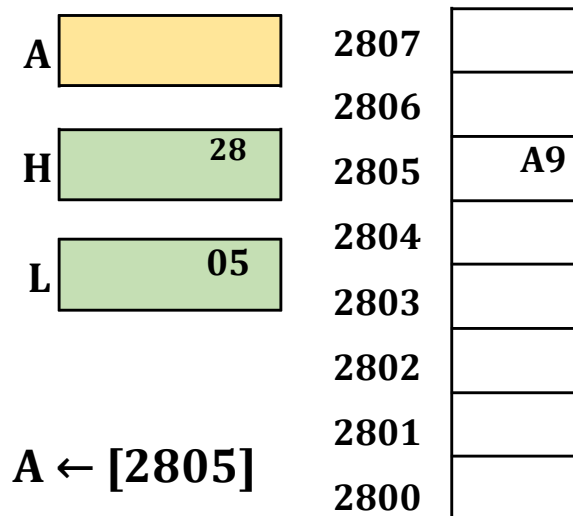

After

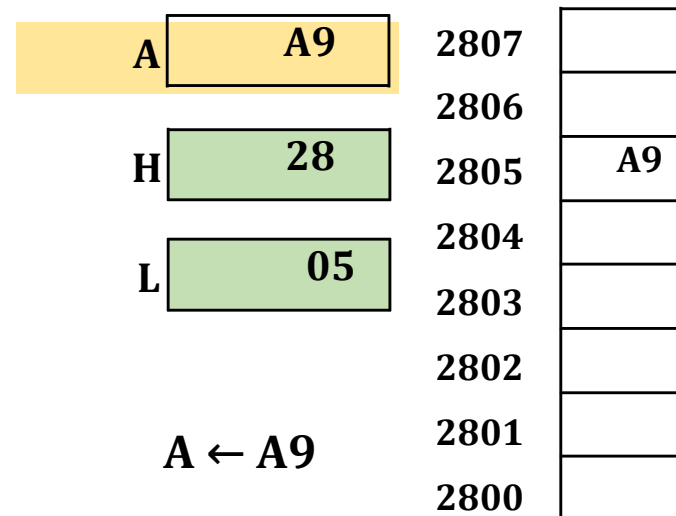



4. Direct Addressing Mode

The instruction specifies the direct address of the operand.

The memory address is specified where the actual operand is.



Load Accumulator

LDA 2805h $A \leftarrow [2805]$

It loads the data from memory location 2805 to A.

Store Accumulator

STA 2803h $[2803] \leftarrow A$

It stores the data from A to memory location 2803.



Ex 1. Direct Addressing Mode

LDA 2805 H

$A \leftarrow [2805]$

It loads the data from the memory location 2805 H to A

Before

A		2807	
		2806	
		2805	5C
	$A \leftarrow [2805]$	2804	
		2803	
		2802	
		2801	
		2800	

After

A		2807	
		2806	
		2805	5C
	$A \leftarrow 5C$	2804	
		2803	
		2802	
		2801	
		2800	



Ex 2. Direct Addressing Mode

STA 2803h $[2803] \leftarrow A$

It copies the data stored in Register A in memory location 2803.

Before

A	9B	2807	
		2806	
		2805	
		2804	
		2803	
		2802	
		2801	
		2800	
$[2803] \leftarrow A$			

After


A	9B	2807	
		2806	
		2805	
		2804	
		2803	9B
		2802	
		2801	
		2800	
$[2803] \leftarrow 9B$			



5. Indirect Addressing Mode

The instruction specifies the indirect address where the effective address of the operand is placed.

The memory address is specified where the actual address of operand is placed.

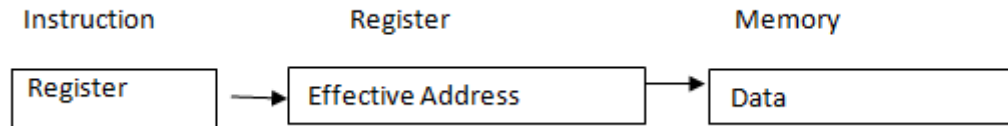

MOV A, 2802 H ; $A \leftarrow [[2802]]$

It moves the data from memory location specified by the location 2802 to A.



Ex. Indirect Addressing Mode

MOV A, [2802]h

$A \leftarrow [[280\ 2]]$

It transfer the data from memory specified memory location to A

Before

A		2807	
		2806	FF
		2805	
		2804	
		2803	06
		2802	28
		2801	
		2800	
	A ← [[2806]]		

After

A	FF	2807	
		2806	FF
A ← FF		2805	
		2804	
		2803	06
		2802	28
		2801	
		2800	



6. Implied Addressing Mode

It is also called inherent addressing mode.

The operand is implied by the instruction.

The operand is hidden/fixed inside the instruction.

Complement Accumulator : CMA

(Here accumulator A is implied by the instruction)

Complement Carry Flag : CMC

(Here Flags register is implied by the instruction)

Set Carry Flag : STC



7. Relative Addressing Mode

In relative addressing mode, contents of Program Counter PC is added to address part of instruction to obtain effective address.

The address part of the instruction is called as offset and it can +ve or -ve.

When the offset is added to the PC the resultant number is the memory location where the operand will be placed.

$X(PC)$ - note that X is a signed number

Branch > 0 LOOP

This location is computed by specifying it as an offset from the current value of PC.

Branch target may be either before or after the branch instruction, the offset is given as a signed num.



Ex. Relative Addressing mode

Offset = 04h		2807	22	2807	22	Actual Operand
		2806	FF	2806	FF	
		2805	6D	2805	6D	
		2804	59	2804	59	
		2803	08	2803	08	
		2802	2E	2802	2E	
		2801	F3	2801	F3	
		2800	9F	2800	9F	
PC		2801				

Effective address of operand = **PC + 01 + offset**

Effective address of operand = **2801 + 01 + 04**

Effective address of operand = **2806h**



Ex.Relative Addressing

Offset = 03h	PC	2807	22	2807	22	Actual Operand
		2806	FF	2806	FF	
		2805	6D	2805	6D	
		2804	59	2804	59	
		2803	08	2803	08	
		2802	2E	2802	2E	
		2801	F3	2801	F3	
		2800	9F	2800	9F	

Effective address of operand = **PC + 01 + offset**

Effective address of operand = **2803 + 01 + 03**

Effective address of operand = **2807h**



8. Indexed Addressing Mode

In index addressing mode, contents of Index register is added to address part of instruction to obtain effective address.

The address part of instruction holds the beginning/base address in the base register.

The index register hold the index value, which is +ve.

Base remains same, the index changes.

When the base is added to the index register the resultant number is the memory location where the operand will be placed.

the effective address of the operand is generated by adding a constant value to the contents of an index register.

$$X(R_i): EA = X + [R_i]$$

- The constant X may be given either as an explicit number or as a symbolic name representing a numerical value.
- ~~If X is shorter than a word, sign-extension is needed.~~



Ex. Indexed Addressing Mode

Base = 2800h

Effective address of operand = **Base + IX**

2807	22	2807	22	2807	22	2807	22
2806	FF	2806	FF	2806	FF	2806	FF
2805	6D	2805	6D	2805	6D	2805	6D
2804	59	2804	59	2804	59	2804	59
2803	08	2803	08	2803	08	2803	08
2802	2E	2802	2E	2802	2E	2802	2E
2801	F3	2801	F3	2801	F3	2801	F3
2800	9F	2800	9F	2800	9F	2800	9F

IX	0000	IX	0001	IX	0002	IX	0003
----	------	----	------	----	------	----	------

2800h + 0000h =	2800h + 0001h =	2800h + 0002h =	2800h + 0003h =
2800h	2801h	2802h	2803h



Ex. Indexed Addressing Mode

Base = 2802h

Effective address of operand = **Base + IX**

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

IX **0000**

$2802h + 0000h =$
~~2802h~~

IX **0001**

$2802h + 0001h =$
~~2803h~~

IX **0002**

$2802h + 0002h =$
~~2804h~~

IX **0003**

$2802h + 0003h =$
~~2805h~~



9. Base Register Addressing Mode

In base register addressing mode, contents of base register is added to the address part of instruction to obtain effective address.

It is similar to the indexed addressing, contents of base register is added to address part of instruction to obtain effective address

The base register hold the beginning/base address.

The address part of instruction holds the offset.

Offset remains same, the base changes.

When the offset is added to the base register the resultant Number is the Memory location where the operand will be placed.



Ex. Base Register Addressing

Offset= 0001h

Effective address of operand = Base Register + offset

2807	22	2807	22	2807	22	2807	22
2806	FF	2806	FF	2806	FF	2806	FF
2805	6D	2805	6D	2805	6D	2805	6D
2804	59	2804	59	2804	59	2804	59
2803	08	2803	08	2803	08	2803	08
2802	2E	2802	2E	2802	2E	2802	2E
2801	F3	2801	F3	2801	F3	2801	F3
2800	9F	2800	9F	2800	9F	2800	9F
Base	2800	Base	2801	Base	2802	Base	2803
2800h + 0001h =		2801h + 0001h =		2802h + 0001h =		2803h + 0001h =	
2801h		2802h		2803h		2804h	



Ex. Base Register Addressing

Offset= 0003h

Effective address of operand = **Base Register + offset**

2807	22	2807	22	2807	22	2807	22
2806	FF	2806	FF	2806	FF	2806	FF
2805	6D	2805	6D	2805	6D	2805	6D
2804	59	2804	59	2804	59	2804	59
2803	08	2803	08	2803	08	2803	08
2802	2E	2802	2E	2802	2E	2802	2E
2801	F3	2801	F3	2801	F3	2801	F3
2800	9F	2800	9F	2800	9F	2800	9F

Base **2800**

Base **2801**

Base **2802**

Base **2803**

$$2800h + 0003h = 2803h$$

$$2801h + 0003h = 2804h$$

$$2802h + 0003h = 2805h$$

$$2803h + 0003h = 2806h$$



10. Additional Modes

- Autoincrement mode - the effective address of the operand is the contents of a register specified in the instruction. After accessing the operand, the contents of this register are automatically incremented to point to the next item in a list.
- $(R_i)+$. The increment is 1 for byte-sized operands, 2 for 16-bit operands, and 4 for 32-bit operands.
- Autodecrement mode: $-(R_i)$ - decrement first

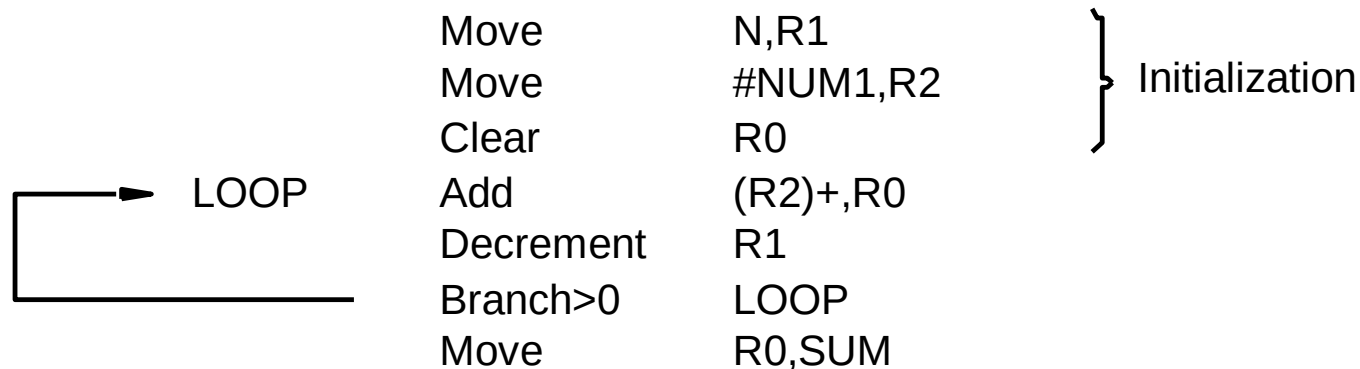


Figure 2.16. The Autoincrement addressing mode used in the program



10(a). Autoincrement Addressing

HL pair incremented after its value is used

At start: HL 2802

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

HL 2802

1st
Time

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

HL 2803

2nd
Time

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

HL 2804

3rd
Time

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

HL 2805

4th
Time



10(b). Autodecrement Addressing

HL pair decremented before its value is used

At start: HL 2807

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

HL 2804

1st
Time

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

HL 2805

2nd
Time

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F


HL 2806

3rd
Time

2807	22
2806	FF
2805	6D
2804	59
2803	08
2802	2E
2801	F3
2800	9F

HL 2807

4th
Time





Addressing modes

Mode	Assembly	Register Transfer
Direct address	LD ADR	$AC \leftarrow M[\text{ADR}]$
Indirect address	LD @ ADR	$AC \leftarrow M[M[\text{ADR}]]$
Immediate operand	LD # NBR	$AC \leftarrow \text{NBR}$
Relative address	LD \$ ADR	$AC \leftarrow M[PC + \text{ADR}]$
Index addressing	LD ADR (XR)	$AC \leftarrow M[\text{ADR} + XR]$
Base register addr	LD ADR (BR)	$AC \leftarrow M[\text{ADR} + BR]$
Register	LD R1	$AC \leftarrow R1$
Register indirect	LD (R1) / MOV A, @R1	$AC \leftarrow M[R1]$
Autoincrement	LD (R1) ⁺	$AC \leftarrow M[R1], R1 \leftarrow R1 + 1$
Autodecrement	LD -(R1)	$AC \leftarrow M[R1], R1 \leftarrow R1 - 1$





- The different ways in which the location of an operand is specified in an instruction are referred to as addressing modes.

Name	Assembler syntax	Addressingfunction
Immediate	#Value	Operand = Value
Register	R_i	$EA = R_i$
Absolute (Direct)	LOC	$EA = LOC$
Indirect	(R_i)	$EA = [R_i]$
	(LOC)	$EA = [LOC]$
Index	$X(R_i)$	$EA = [R_i] + X$
Base with index	(R_i, R_j)	$EA = [R_i] + [R_j]$
Base with index and offset	$X(R_i, R_j)$	$EA = [R_i] + [R_j] + X$
Relative	$X(PC)$	$EA = [PC] + X$
Autoincrement	$(R_i) +$	$EA = [R_i] ;$ Increment R_i
Autodecrement	$-(R_i)$	Decrement $R_i ;$ $EA = [R_i]$



problem-to find EA of the operand

	PC	R1	XR	AC	Address	Memory	
						Load to AC	Mode
	200	400	100		200	Address = 500	
					201	Next Instruction	
					202		
					399	450	
					400	700	
					500	800	
					600	900	
					702	325	
					800	300	

Find out the effective address of operand and operand value by considering different addressing modes.

- Memory is having first instruction to load AC.
- Mode will specify the addressing mode to get operand.
- Address field of instruction is 500.

PC = Program Counter

R1 = Register

XR = Index Register

AC = Accumulator



Problem-solution- immediate addressing mode

	Address	Memory
PC	200	Load to AC Mode
R1	400	Address = 500
XR	100	Next Instruction
AC		
	202	
	399	450
	400	700
	500	800
	600	900
	702	325
	800	300

1. Immediate Addressing Mode

LDI 500

➤ As instruction contains immediate number 500. It is stored as address 201.

Operand = 500

Effective Address = 201

AC

500



	Address	Memory
PC	200	Load to AC Mode
R1	201	Address = 500
XR	202	Next Instruction
AC	399	450
	400	700
	500	800
	600	900
	702	325
	800	300

2. Register Addressing Mode

- Register R1 contains 400.
- As operand is in register so no any memory location.

Effective Address = Nil
Operand = 400

AC **400**



solution -reg indirect mode

	Address	Memory
PC	200	Load to AC Mode
R1	400	Address = 500
XR	100	Next Instruction
AC	400	450
		700
		800
		900
		325
		300

3. Register Indirect Addressing Mode

- Register R1 contains 400.
- So effective address of operand is 400. The data stored at 400 is 700.

Effective Address = 400

Operand = 700

AC 700



	Address	Memory
PC	200	Load to AC Mode
R1	400	Address = 500
XR	100	Next Instruction
AC		
	399	450
	400	700
	500	800
	600	900
	702	325
	800	300

4. Direct Addressing Mode

Instruction contains the address 500.

So effective address of operand is 500. The data stored at 500 is 800.

Effective Address = 500

Operand = 800

AC 800



solution -indirect addressing

	Address	Memory
PC	200	Load to AC Mode
R1	400	Address = 500
XR	100	Next Instruction
AC		
	399	450
	400	700
	500	800
	600	900
	702	325
	800	300

5. Indirect Addressing Mode

- Instruction contains the address 500.
- Address at 500 is 800.
- So effective address of operand is 800. The data stored at 800 is 300.

Effective Address = 800
Operand = 300

AC 300



	Address	Memory
PC	200	Load to AC Mode
R1	400	Address = 500
XR	100	Next Instruction
AC		
	399	450
	400	700
	500	800
	600	900
	702	325
	800	300

6. Relative Addressing Mode

- PC = 200.
- Offset = 500.
- Instruction is of 2 bytes.
- So effective address = PC + 2 + offset = 200 + 500 + 2 = 702 .
- The data stored at 702 is 325.

Effective Address = 702

Operand = 325

AC 325



Problem-solution-index addressing

	Address	Memory
PC	200	Load to AC Mode
R1	400	Address = 500
XR	100	Next Instruction
AC		
	399	450
	400	700
	500	800
	600	900
	702	325
	800	300

7. Index Addressing Mode

- XR = 100.
- Base = 500.
- So effective address = Base + XR =
500 + 100 = 600 .
- The data stored at 600 is 900.

Effective Address = 600

Operand = 900

AC 900



solution -autoincrement addressing

PC	200	Address	Memory
		200	Load to AC Mode
R1	400	201	Address = 500
		202	Next Instruction
XR	100		
		396	450
AC		400	700
		404	
		500	800
		600	900
		702	325
		800	300

8. Autoincrement Addressing Mode

- It is same as register indirect addressing mode except
- the contents of R1 are incremented after the execution. R1 contains 400.
- So effective address of operand is 400. The data stored at 400 is 700.

Effective Address = 400

Operand = 700

R1 401

AC 700



PC	200	Address	Memory
R1	400	200	Load to AC Mode
XR	100	201	Address = 500
AC		202	Next Instruction
		399	450
		400	700
		500	800
		600	900
		702	325
		800	300

9. Autodecrement Addressing Mode

➤ It is same as register indirect addressing mode except the contents of R1 are decremented before the execution.

➤ R1 contains 400.

➤ R1 is first decremented to 399.

➤ So effective address of operand is 399.

➤ The data stored at 399 is 450.

Effective Address = 399

Operand = 450

R1 399

AC 450



Complete solution

Addressing Mode	EA	Operand
Immediate Addressing Mode	201	500
Register Addressing Mode	Nil	400
Register Indirect Addressing Mode	400	700
Direct Addressing Mode	500	800
Indirect Addressing Mode	800	300
Relative Addressing Mode	702	325
Indexed Addressing Mode	600	900
Autoincrement Addressing Mode	400	700
Autodecrement Addressing Mode	399	450



Problem 5- home assignment

Problem5: Consider a 16-bit processor in which the following appears in main memory, starting at location 200:

200	Load to AC	Mode
201	500	
202	Next instruction	

The first part of the first word indicates that this instruction loads a value into an accumulator. The Mode field specifies an addressing mode and, if appropriate, indicates a source register; assuming that when used, the source register is R1, which has a value of 400

There is also a base register that contains the value of 100. the value of 500 in location 201 may be part of the address calculation. Assume that location 399 contains the value 999, location 400 contains the value 1000, and so on. Determine the effective address and the operand to be loaded for the following addressing modes:



Solution (problem 5)-addressing modes

	Address	Memory
PC	200	Load to AC Mode
R1	201	Address = 500
	202	Next Instruction
BR		
	399	999
XR	400	1000
	500	1100
	600	1200
	702	1302
		1700
	11000	

Effective Address?
Operand In AC ?

AC



	EA	Operand	Mode ?
a	500	1100	
b	201	500	
c	1100	1700	
d	$201+1+500=702$	1302	
e	$500+100=600$	1200	
f	R1	400	
g	400	1000	
h	400	1000	

Note. Identify the addressing mode and fill the lost column



Problem 6 -Home assignment

		Addresses	Memory	
			Load to AC	Mode
PC	1000	200	Address = 1000	
R1	1000	202	Next Instruction	
XR	400	204		
AC		396	450	
		400	700	
		996		
		1000	1800	
		1004		
		1204	900	
		1400	800	
		1700	325	
		1800	625	
		2000	300	

Find out the effective address of operand and operand value by considering different addressing modes.

- The word length of the processor is 4 bytes.
- Memory is having first instruction to load AC.
- Mode will specify the addressing mode to get operand.
- Address field of instruction is 1000.

PC = Program Counter

R1 = Register

XR = Index Register

AC = Accumulator



Problem 7:

Register R1 and R2 contain values 1800 and 3800 respectively. The word length of the processor is 4 bytes. What is the effective address of the memory operand in each one of the following cases?

- 1) ADD 100 (R2), R6.
- 2) LOAD R6, 20 (R1,R2)
- 3) STORE -(R2), R6
- 4) SUBTRACT (R2)+, R6



Solution (problem 7)

- 1) Effective address = $100 + \text{Contents of R2} = 100 + 3800 = 3900.$
- 2) Effective address = $20 + \text{Contents of R1} + \text{Contents of R2}$
 $= 20 + 1800 + 3800 = 5620.$
- 3) Effective address = $\text{Contents of R2} - 4 = 3800 - 4 = 3796.$
- 4) Effective address = $\text{Contents of R2} = 3800.$



Problem: 8

Given the following memory values and a one-address machine with an accumulator:

- Word 20 contains 40
- Word 30 contains 50
- Word 40 contains 60
- Word 50 contains 70
- ❖ What values do the following instructions load into the Accumulator?
 - a) Load IMMEDIATE 20
 - b) Load DIRECT 20
 - c) Load INDIRECT 20
 - d) Load IMMEDIATE 30
 - e) Load DIRECT 30
 - f) Load INDIRECT 30



Solution(problem 8)

- a) 20
- b) 40
- c) 60
- d) 30
- e) 50
- f) 70



Problem: 9

Let the address stored in the program counter be designated by the symbol X1.

The instruction stored in X1 has an address part (operand reference) X2.

The operand needed to execute the instruction is stored in the memory word with address X3.

An index register contains the value X4.

❖ What is the relationship between these various quantities if the addressing mode of the instruction is
a) Direct. b) indirect. c) PC relative. d) indexed



Solution: (problem 9)

a) $X3 = X2$

b) $X3 = (X2)$

c) $X3 = X1 + X2 + 1$

d) $X3 = X2 + X4$



Problem: 10

An address field in an instruction contains decimal value 14.
Where is the corresponding operand located for:

- a) immediate addressing?
- b) direct addressing?
- c) indirect addressing?
- d) register addressing?
- e) register indirect addressing?



Solution (problem 10)

- a) 14 (The address field).
- b) Memory location 14.
- c) The memory location whose address is in memory location 14.
- d) Register 14.
- e) The memory location whose address is in register 14



Assembly Language



Machine instructions are represented by patterns of 0s and 1s. Such patterns are awkward to deal with when discussing or preparing programs. Therefore, we use symbolic names to represent the patterns. EX. Move, Add, Increment, and Branch, for the instruction operations to represent the corresponding binary code patterns. When writing programs for a specific computer, such words are normally replaced by acronyms called *mnemonics*, such as *MOV*, *ADD*, *INC*, and *BR*. Programs written in an assembly language can be automatically translated into a sequence of machine instructions by a program called an *assembler*. The assembler program is one of a collection of utility programs that are a part of the system software. The assembler, like any other program, is stored as a sequence of machine instructions in the memory of the computer. A user program is usually entered into the computer through a keyboard and stored either in the memory or on a magnetic disk. The user program is simply a set of lines of alphanumeric characters.



When the assembler program is executed, it reads the user program, analyzes it, and then generates the desired machine language program. The latter contains patterns of 0s and 1s specifying instructions that will be executed by the computer.

The user program in its original alphanumeric text format is called a *source program*, and the assembled machine language program is called an *object program*.



- ❑ Computers understand ones and zeros...

0001110010000110

- ❑ Humans like symbols...

ADD R6,R2,R6 ; increment index reg.

- ❑ **Assembler** is a program that turns symbols into machine instructions.

- ◆ ISA-specific:


- close correspondence between symbols and instruction set

- mnemonics for opcodes
 - labels for memory locations

- ◆ additional operations for allocating storage and initializing data
-



- ❑ Each line of a program is one of the following:
 - ◆ an instruction
 - ◆ an assembler directive (or pseudo-op) (SUM EQU 200)
 - ◆ a comment
- ❑ Whitespace (between symbols) and case are ignored.
- ❑ Comments (beginning with ";") are also ignored.
- ❑ An instruction has the following format:

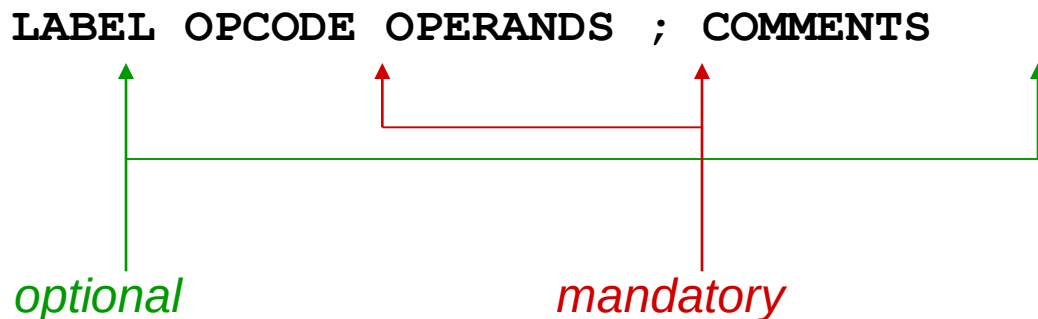



Opcodes and Operands

□ Opcodes

- ◆ reserved symbols that correspond to instructions
 - ex: ADD, AND, LD, LDR, ...

□ Operands

- ◆ registers -- specified by Rn, where n is the register number
 - ◆ numbers -- indicated by # (decimal) or x (hex)
 - ◆ label -- symbolic name of memory location
 - ◆ separated by comma
 - ◆ number, order, and type correspond to instruction format
 - ex:
ADD R1, R1, R3
ADD R1, R1, #3
LD R6, NUMBER
BRZ LOOP
-



Labels and Comments

❑ Label

- ◆ placed at the beginning of the line
- ◆ assigns a symbolic name to the address corresponding to line
 - ex:

```
LOOP  ADD  R1,R1,#-1  
      BRp  LOOP
```

❑ Comment

- ◆ anything after a semicolon is a comment
 - ◆ ignored by assembler
 - ◆ used by humans to document/understand programs
 - ◆ tips for useful comments:
 - avoid restating the obvious, as "decrement R1"
 - provide additional insight, as in "accumulate product in R6"
 - use comments to separate pieces of program
-



- ❑ Pseudo-operations
 - ◆ do not refer to operations executed by program
 - ◆ used by assembler
 - ◆ look like instruction, but "opcode" starts with dot

<i>Opcode</i>	<i>Operand</i>	<i>Meaning</i>
.ORIG	address	starting address of program
.END		end of program
.BLKW	n	allocate n words of storage
.FILL	n	allocate one word, initialize with value n
.STRINGZ	n-character string	allocate n+1 locations, initialize w/characters and null terminator




- ❑ Use the following style guidelines to improve the readability and understandability of your programs:
 1. Provide a program header, with author's name, date, etc., and purpose of program.
 2. Start labels, opcode, operands, and comments in same column for each line. (Unless entire line is a comment.)
 3. Use comments to explain what each register does.
 4. Give explanatory comment for most instructions.
 5. Use meaningful symbolic names.
 - Mixed upper and lower case for readability.
 - ASCIItoBinary, InputRoutine, SaveR1
 6. Provide comments between program sections.
 7. Each line must fit on the page -- no wraparound or truncations.
 - Long statements split in aesthetically pleasing manner.
-



Assembly Process

- ❑ Convert assembly language file (.asm) into an executable file (.obj)

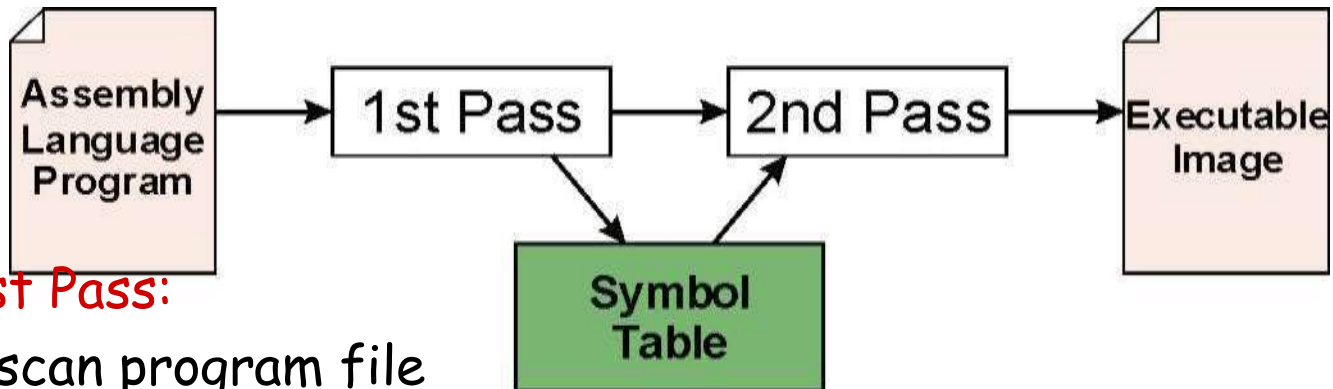

❑ First Pass:

- ◆ scan program file
- ◆ find all labels and calculate the corresponding addresses; this is called the symbol table

❑ Second Pass:

- ◆ convert instructions to machine language, using information from symbol table
-



First Pass: Constructing the Symbol Table

1. Find the `.ORIG` statement,
which tells us the address of the first instruction.
 - ◆ Initialize location counter (LC), which keeps track of the
current instruction.
 2. For each non-empty line in the program:
 - a) If line contains a label, add label and LC to symbol table.
 - b) Increment LC.
 - NOTE: If statement is `.BLKW` or `.STRINGZ`,
increment LC by the number of words allocated.
 3. Stop when `.END` statement is reached.
- NOTE: A line that contains only a comment is considered an empty line.
-



Practice


www.JntukMaterials.com

- ☐ Construct the symbol table

Symbol	Address



SYMBOL TABLE ORGANIZATION

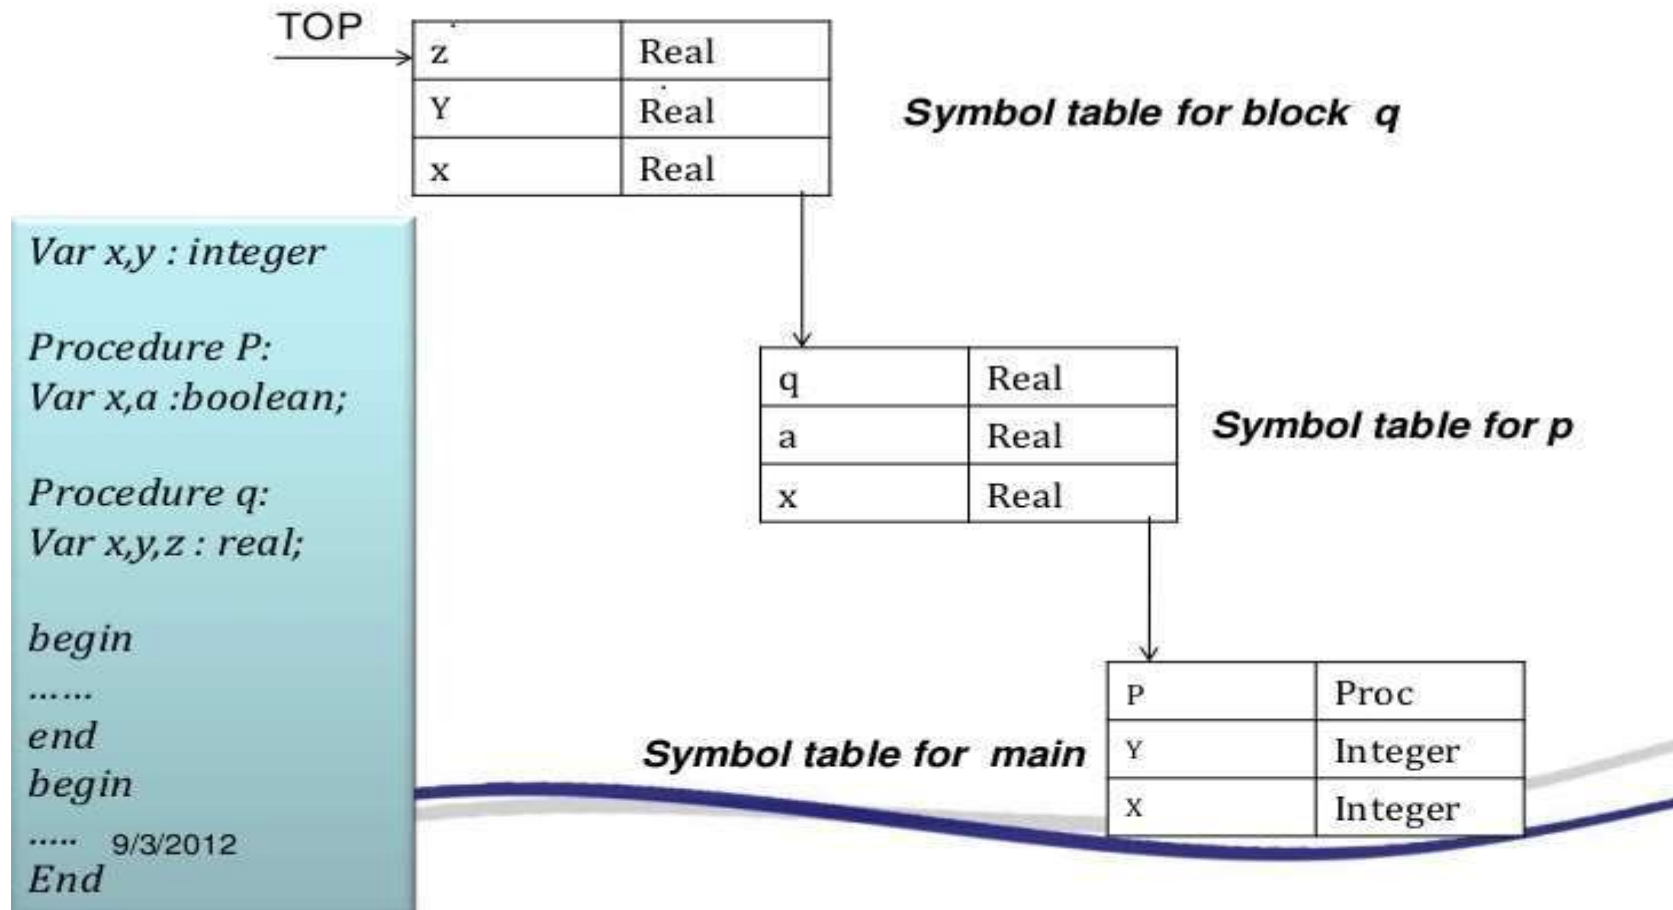



Second Pass: Generating Machine Language

- ❑ For each executable assembly language statement, generate the corresponding machine language instruction.
 - ◆ If operand is a label, look up the address from the symbol table.
-



Linking and Loading

- ❑ **Loading** is the process of copying an executable image into memory.
 - ◆ more sophisticated loaders are able to relocate images to fit into available memory
 - ◆ must readjust branch targets, load/store addresses

 - ❑ **Linking** is the process of resolving symbols between independent object files.
 - ◆ suppose we define a symbol in one module, and want to use it in another
 - ◆ some notation, such as `.EXTERNAL`, is used to tell assembler that a symbol is defined in another module
 - ◆ linker will search symbol tables of other modules to resolve symbols and complete code generation before loading
-



Types of Instructions

➤ Data Transfer Instructions

Name	Mnemonic
Load	LD
Store	ST
Move	MOV
Exchange	XCH
Input	IN
Output	OUT
Push	PUSH
Pop	POP

Data value is not modified





Data Transfer Instructions

Mode	Assembly	Register Transfer
Direct address	LD <i>ADR</i>	$AC \leftarrow M[ADR]$
Indirect address	LD @ <i>ADR</i>	$AC \leftarrow M[M[ADR]]$
Relative address	LD \$ <i>ADR</i>	$AC \leftarrow M[PC + ADR]$
Immediate operand	LD # NBR	$AC \leftarrow NBR$
Index addressing	LD <i>ADR</i> (X)	$AC \leftarrow M[ADR + XR]$
Register	LD <i>R1</i>	$AC \leftarrow R1$
Register indirect	LD (<i>R1</i>)	$AC \leftarrow M[R1]$
Autoincrement	LD (<i>R1</i>) ⁺	$AC \leftarrow M[R1], R1 \leftarrow R1 + 1$





Data Manipulation Instructions

- Arithmetic
- Logical & Bit Manipulation
- Shift

Name	Mnemonic
Clear	CLR
Complement	COM
AND	AND
OR	OR
Exclusive-OR	XOR
Clear carry	CLRC
Set carry	SETC
Complement carry	COMC
Enable interrupt	EI
Disable interrupt	DI



Data Manipulation Instructions

Name	Mnemonic
Increment	INC
Decrement	DEC
Add	ADD
Subtract	SUB
Multiply	MUL
Divide	DIV
Add with carry	ADDC
Subtract with borrow	SUBB
Negate	NEG



Data Manipulation Instructions

Name	Mnemonic
Logical shift right	SHR
Logical shift left	SHL
Arithmetic shift right	SHRA
Arithmetic shift left	SHLA
Rotate right	ROR
Rotate left	ROL
Rotate right through carry	RORC
Rotate left through carry	ROLC



Program Control Instructions

Name	Mnemonic
Branch	BR
Jump	JMP
Skip	SKP
Call	CALL
Return	RET
Compare (Subtract)	CMP
Test (AND)	TST

Subtract A - B but
don't store the result


Mask



1 0 1 1 0 0 0 1

0 0 0 0 1 0 0 0

0 0 0 0 0 0 0 0

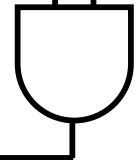



Conditional Branch Instructions

Mnemonic	Branch Condition	Tested Condition
BZ	Branch if zero	$Z = 1$
BNZ	Branch if not zero	$Z = 0$
BC	Branch if carry	$C = 1$
BNC	Branch if no carry	$C = 0$
BP	Branch if plus	$S = 0$
BM	Branch if minus	$S = 1$
BV	Branch if overflow	$V = 1$
BNV	Branch if no overflow	$V = 0$





Basic Input/output Operations



I/O


- The data on which the instructions operate are not necessarily already stored in memory.
- Data need to be transferred between processor and outside world (disk, keyboard, etc.)
- I/O operations are essential, the way they are performed can have a significant effect on the performance of the computer.



- ☐ Human readable
 - ◆ Screen, printer, keyboard
 - ☐ Machine readable
 - ◆ Monitoring and control
 - ☐ Communication
 - ◆ Modem
 - ◆ Network Interface Card (NIC)
-




Generic Model of I/O Module

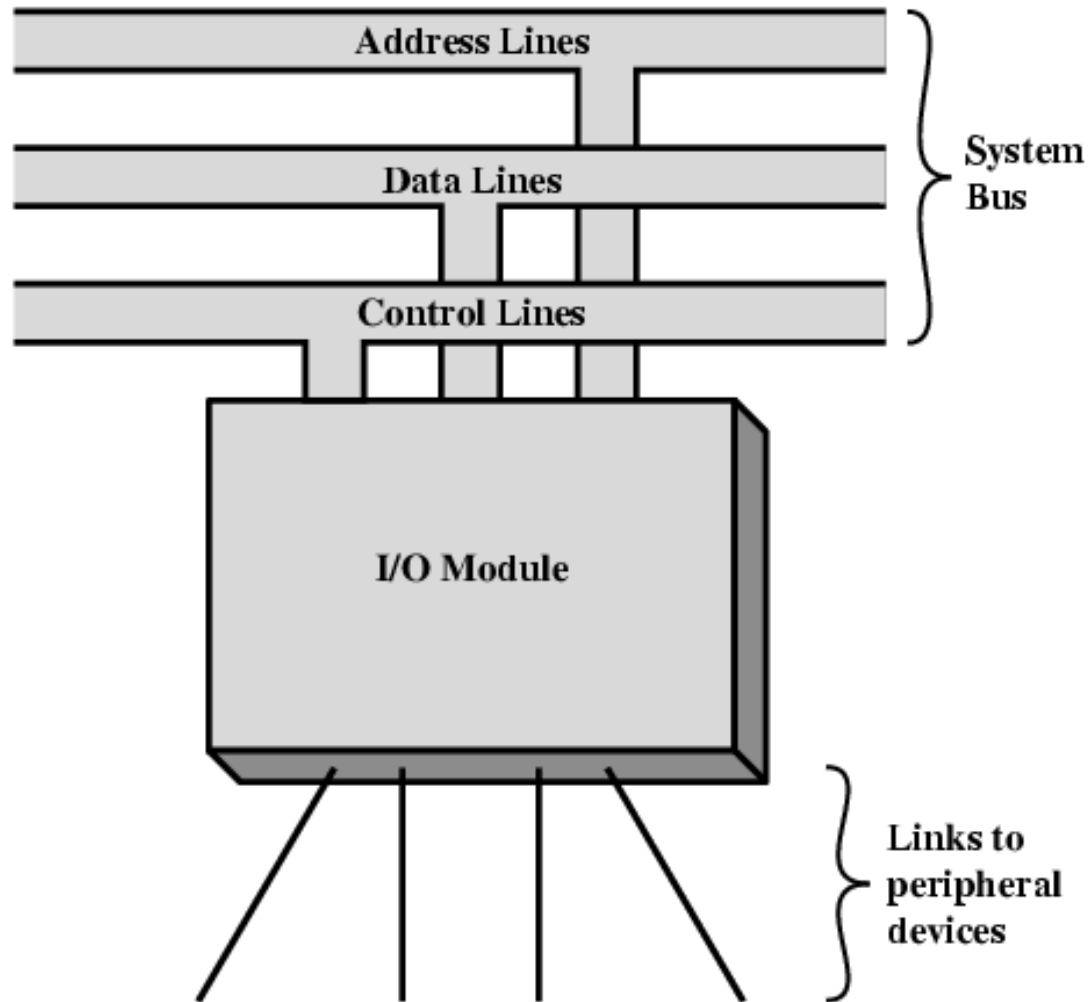




External Device Block Diagram

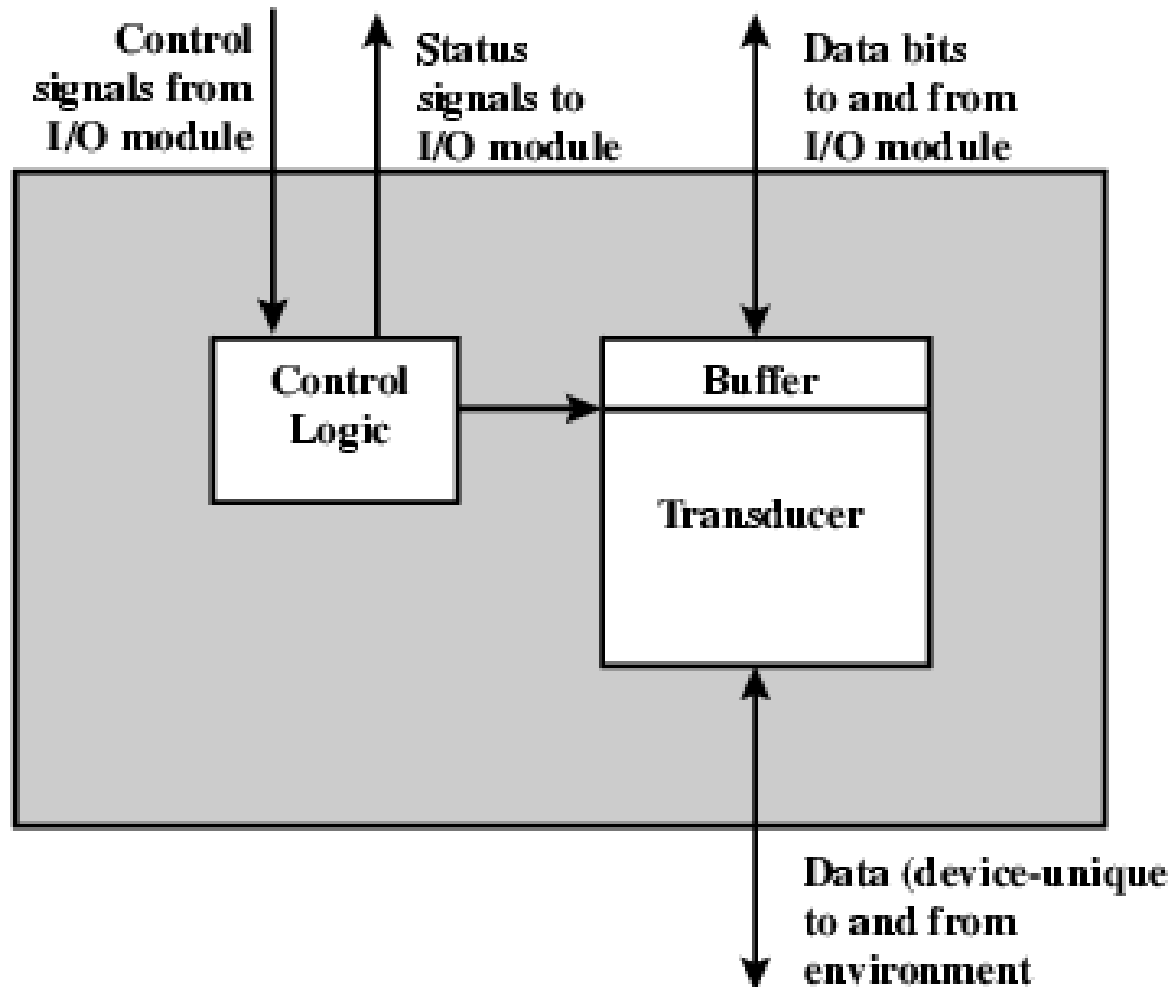



Typical I/O Data Rates

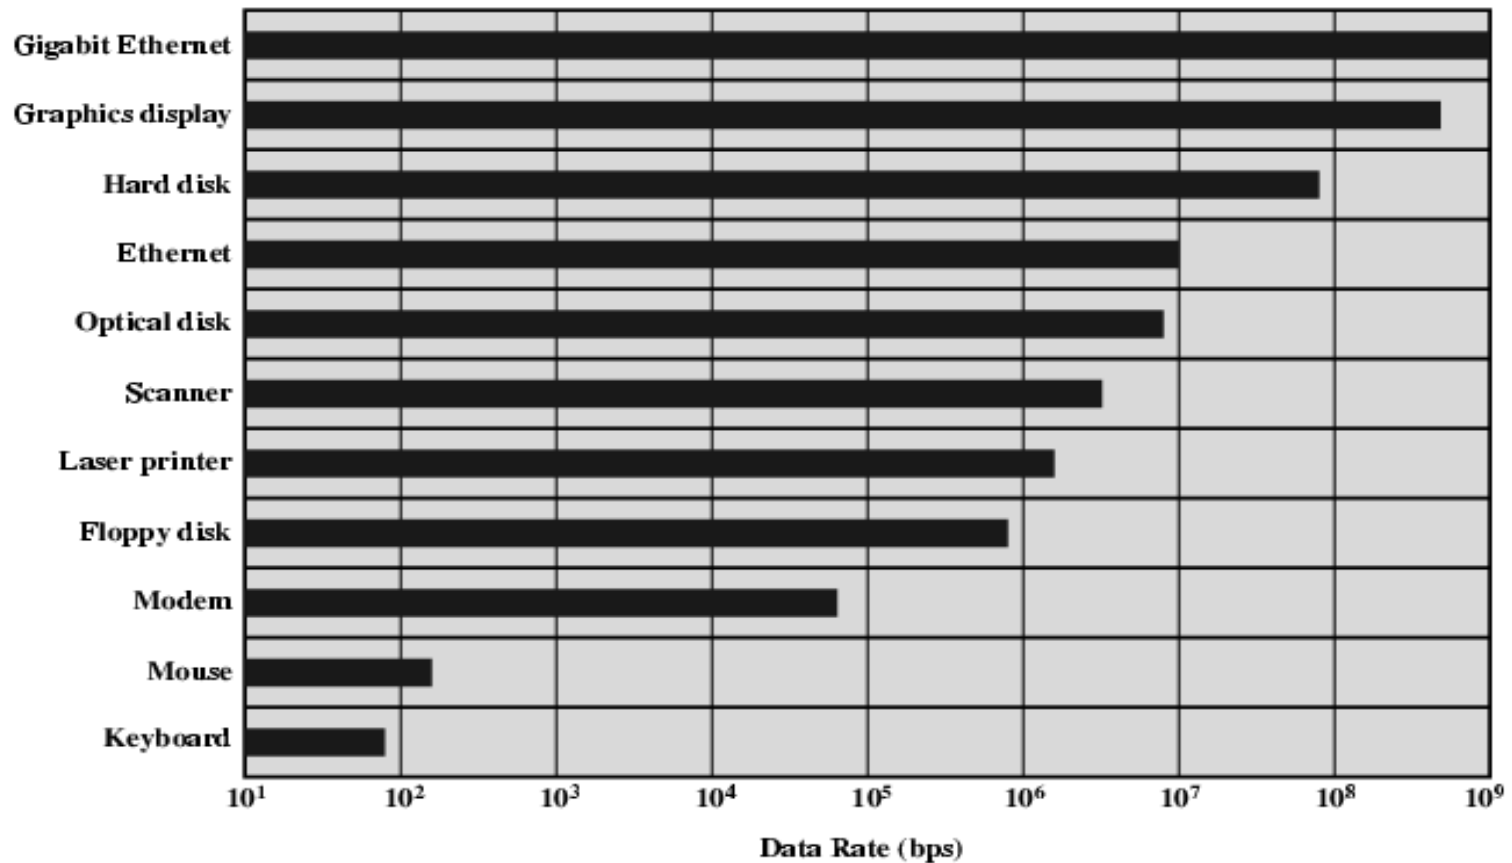



- ❖ Control & Timing
 - ❖ CPU Communication
 - ❖ Device Communication
 - ❖ Data Buffering
 - ❖ Error Detection
-



I/O Steps

- ❖ CPU checks I/O module device status
 - ❖ I/O module returns status
 - ❖ If ready, CPU requests data transfer
 - ❖ I/O module gets data from device
 - ❖ I/O module transfers data to CPU
 - ❖ Variations for output, DMA, etc.
-



- ❖ Programmed
 - ❖ Interrupt driven
 - ❖ Direct Memory Access (DMA)
-



- ❖ CPU has direct control over I/O
 - ◆ Sensing status
 - ◆ Read/write commands
 - ◆ Transferring data
 - ❖ CPU waits for I/O module to complete operation
 - ❖ Wastes CPU time
-



- ❖ CPU requests I/O operation
 - ❖ I/O module performs operation
 - ❖ I/O module sets status bits
 - ❖ CPU checks status bits periodically
 - ❖ I/O module does not inform CPU directly
 - ❖ I/O module does not interrupt CPU
 - ❖ CPU may wait or come back later
-



Program-Controlled I/O Example

- Read in character input from a keyboard and produce character output on a display screen.
- Rate of data transfer (keyboard, display, processor)
- Difference in speed between processor and I/O device creates the need for mechanisms to synchronize the transfer of data.
- A solution: on output, the processor sends the first character and then waits for a signal from the display that the character has been received. It then sends the second character. Input is sent from the keyboard in a similar way.
- On Input , the processor waits for a signal indicating that a character key has been struck and that its code is available in some buffer register associated with the keyboard. Then the processor proceeds to read that code.



- ☐ Under programmed I/O data transfer is very like memory access (CPU viewpoint)
 - ☐ Each device given unique identifier
 - ☐ CPU commands contain identifier (address)
-



Program-Controlled I/O Example

Status register

Status register

- Registers
- Flags (status register)
- Device interface



difference in speed between the processor and I/O devices creates the need for mechanisms to synchronize the transfer of data between them.

A solution to this problem is as follows; On output, the processor sends the first character and then waits for a signal from the display that the character has been received. It then sends the second character, and so on. Input is sent from the keyboard in a similar way; the processor waits for a signal indicating that a character key has been struck and that its code is available in some buffer register associated with the keyboard. Then the processor proceeds to read that code.



The keyboard and the display are separate devices as shown in Figure .

The action of striking a key on the key board does not automatically cause the corresponding character to be displayed on the screen.

One block of instructions in the I/O program transfers the character into the processor, and another associated block of instructions causes the character to be displayed.



Moving a character code from the keyboard to the processor.

- Striking a key stores the corresponding character code in an 8-bit buffer register associated with the keyboard.
- Let us call this register DATAIN, as shown in Figure.
- To inform the processor that a valid character is in DATAIN, a status control flag, SIN, is set to 1.
- A program monitors SIN, and when SIN is set to 1, the processor reads the contents of DATAIN.
- When the character is transferred to the processor, SIN is automatically cleared to 0.
- If a second character is entered at the keyboard, SIN is again set to 1 and the process repeats.



Characters transfer from the processor to the display

A buffer register, DATAOUT, and a status control flag, SOUT, are used for this transfer.

When SOUT equals 1, the display is ready to receive a character. Under program control, the processor monitors SOUT, and when SOUT is set to 1, the processor transfers a character code to DATAOUT.

The transfer of a character to DATAOUT clears SOUT to 0. If the display device is ready to receive a second character, SOUT is again set to 1.

The buffer registers DATAIN and DATAOUT and the status flags SIN and SOUT are part of circuitry commonly known as a device interface.

The circuitry for each device is connected to the processor via a bus.



Sequence of operations is used for transferring input to processor

In order to perform I/O transfers, we need machine instructions that can check the state of the status flags and transfer data between the processor and the I/O device.

These instructions are similar in format to those used for moving data between the processor and the memory.

For example, the processor can monitor the keyboard status flag **SIN** and transfer a character from **DATAIN** to register **R1** by the following sequence of operations:

READWAIT Branch to **READWAIT** if **SIN** = 0
 Input from **DATAIN** to **R1**



Sequence of operations for transferring output to the display

The Branch operation is usually implemented by two machine instructions.

The first instruction tests the status flag and the second performs the branch.

Although the details vary from computer to computer, the main idea is that the processor monitors the status flag by executing a short wait loop and proceeds to transfer the input data when SIN is set to 1 as a result of a key being struck.

The Input operation resets SIN to 0.

An analogous sequence of operations is used for transferring output to the display.

An example is

WRTTEWAIT	Branch to WRITEWATT if SOUT = 0
	Output from R1 to DATAOUT



Again, the Branch operation is normally implemented by two machine instructions.

- The wait loop is executed repeatedly until the status flag SOUT is set to 1 by the display when it is free to receive a character.
- The Output operation transfers a character from R1 to DATAOUT to be displayed, and it clears SOUT to 0.

We assume that the initial state of SIN is 0 and the initial state of SOUT is 1.

This initialization is normally performed by the device control circuits when the devices are placed under computer control before program execution begins.



Until now, we have assumed that the addresses issued by the processor to access instructions and operands always refer to memory locations. Many computers use an arrangement called memory-mapped I/O in which some memory address values are used to refer to peripheral device buffer registers, such as DATAIN and DATAOUT.

Thus, no special instructions are needed to access the contents of these registers; data can be transferred between these registers and the processor using instructions that we have already discussed, such as Move, Load, or Store.

For example, the contents of the keyboard character buffer DATAIN can be transferred to register R1 in the processor by the instruction

MoveByte DATAIN,R1



Similarly, the contents of register R1 can be transferred to DATAOUT by the instruction

`MoveByte R1,DATAOUT`

The status flags SIN and SOUT are automatically cleared when the buffer registers DATAIN and DATAOUT are referenced, respectively.



The MoveByte operation code signifies that the operand size is a byte, to distinguish it from the operation code Move that has been used for word operands.

the two data buffers in Figure may be addressed as if they were two memory locations.

It is possible to deal with the status flags SIN and SOUT in the same way, by assigning them distinct addresses.

However, it is more common to include SIN and SOUT in device status registers, one for each of the two devices.

Let us assume that bit in registers INSTATUS and OUTSTATUS corresponds to SIN and SOUT, respectively.

The read Operation just described may now be implemented by the machine instruction sequence



```
READWAIT Testbit    #3,INSTATUS  
          Branch=0   READWAIT  
          MoveByte   DATAIN,R1
```

The write operation may be implemented as

```
WRITEWAIT Testbit    #3.OUTSTATUS  
          Branch=0   WRITEWAIT  
          MoveByte   R1,DATAOUT
```



The Test bit instruction tests the state of one bit in the destination location, where the bit position to be tested is indicated by the first operand.

If the bit tested is equal to 0, then the condition of the branch instruction is true, and a branch is made to the beginning of the wait loop.

When the device is ready, that is, when the bit tested becomes equal to 1, the data are read from the input buffer or written into the output buffer.

The program shown ,uses these two operations to read a line of characters typed at a keyboard and send them out to a display device.

As the characters are read in, one by one, they are stored in a data area in the memory and then echoed back to display,



	Move	#LOC,RO	Initialize pointer register RO to point to the address of the first location in memory where the characters are to be stored.
READ	TestBit Branch=0 MoveByte	#3,INSTATUS READ DATAIN,(RO)	Wait for a character to be entered in the keyboard buffer DATAIN. Transfer the character from DATAIN into the memory (this clears SIN to 0).
ECHO	TestBit Branch=0 MoveByte	#3,OUTSTATUS ECHO (RO),DATAOUT	Wait for the display to become ready. Move the character just read to the display buffer register (this clears SOUT to 0).
	Compare	#CR,(RO)+	Check if the character just read is CR (carriage return). If it is not CR, then branch back and read another character.
	Branch/O	READ	Also, increment the pointer to store the next character.



The program finishes when the carriage return character, CR, is read, stored, and sent to the display .

The address of the first byte location of the memory data area where the line is to be stored is LOC.

Register RO is used to point to this area, and it is initially loaded with the address LOC by the first instruction in the program.

RO is incremented for each character read and displayed by the Auto increment addressing mode used in the Compare instruction.



Program -controlled I/O requires continuous involvement of the processor in the I/O activities. Almost all of the execution time for the program is accounted for in the two wait loops, while the processor waits for a character to be struck or for the display to become available.

It is desirable to avoid wasting processor execution time in this situation.

Other I/O techniques, based on the use of interrupts, may be used to improve the utilization of the processor.



Program-Controlled I/O Example

- Machine instructions that can check the state of the status flags and transfer data:

READWAIT Branch to READWAIT if SIN = 0
Input from DATAIN to R1

WRITEWAIT Branch to WRITEWAIT if SOUT = 0
Output from R1 to DATAOUT



Program-Controlled I/O Example

- **Memory-Mapped I/O** - some memory address values are used to refer to peripheral device buffer registers. No special instructions are needed. Also use device status registers.

```
READWAIT Testbit #3, INSTATUS  
          Branch=0 READWAIT  
          MoveByte DATAIN, R1
```



Program-Controlled I/O Example

- Assumption - the initial state of SIN is 0 and the initial state of SOUT is 1.
- Any drawback of this mechanism in terms of efficiency?
 - Two wait loops → processor execution time is wasted
- Alternate solution?
 - Interrupt



❑ Memory mapped I/O

- ◆ Devices and memory share an address space
- ◆ I/O looks just like memory read/write
- ◆ No special commands for I/O
 - Large selection of memory access commands available

❑ Isolated I/O

- ◆ Separate address spaces
 - ◆ Need I/O or memory select lines
 - ◆ Special commands for I/O
 - Limited set
-



- ❑ CPU issues address
 - ◆ Identifies module (& device if >1 per module)
 - ❑ CPU issues command
 - ◆ Control - telling module what to do
 - e.g. spin up disk
 - ◆ Test - check status
 - e.g. power? Error?
 - ◆ Read/Write
 - Module transfers data via buffer from/to device
-



Program-Controlled I/O Example

- Assumption - the initial state of SIN is 0 and the initial state of SOUT is 1.
- Any drawback of this mechanism in terms of efficiency?
 - Two wait loops → processor execution time is wasted
- Alternate solution?
 - Interrupt



Home Work

- For each Addressing modes mentioned before, state one example for each addressing mode stating the specific benefit for using such addressing mode for such an application.



Stacks



What is a stack?

In order to organize the control and information linkage between the main program and the subroutine, a data structure called a stack is used.

It is also used to describe this type of storage mechanism; the last data item placed on the stack is the first one removed when retrieval begins.

The terms *push* and *pop* are used to describe placing a new item on the stack and removing the top item from the stack, respectively.

- ❑ A stack is a list with the restriction

- ◆ that insertions and deletions can only be performed at the top of the list
- ◆ The other end is called bottom



- ❑ The structure is sometimes referred to as a *pushdown stack*
 - ❑ Stores a set of elements in a particular order
 - ❑ Stack principle: **LAST IN FIRST OUT (LIFO)**
 - ❑ Example
-




Push and Pop

- ❑ Primary operations: **Push** and **Pop**
- ❑ Push - Add an element to the top of the stack
- ❑ Pop - Remove the element at the top of the stack

When a stack is used in a program, it is usually allocated a fixed amount of space in the memory.


In this case, we must avoid pushing an item onto the stack when the stack has reached its maximum size.

Also, we must avoid attempting to pop an item off an empty stack, which could result from a programming error.

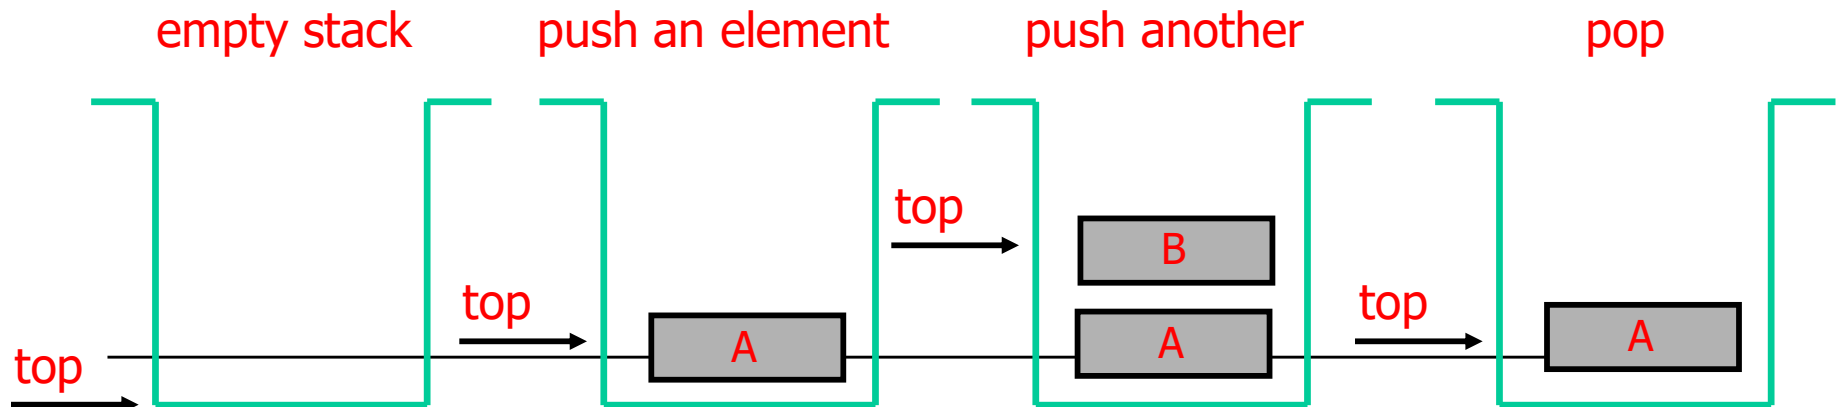



Last In First Out

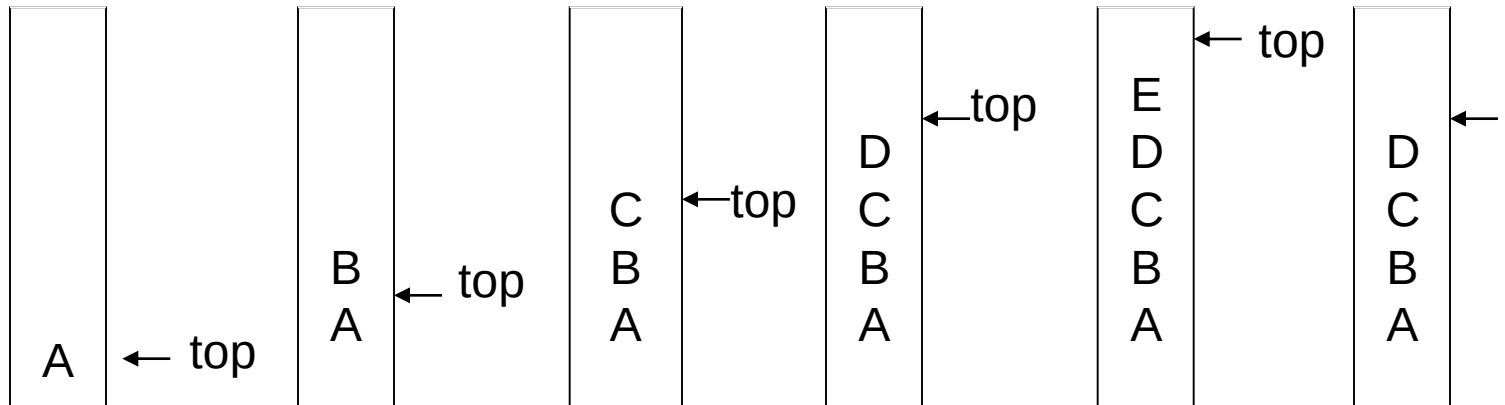



□ Real life

- ◆ Pile of books
- ◆ Plate trays

Imagine a pile of trays in a cafeteria; customers pick up new trays from the top of the pile, and clean trays are added to the pile by placing them onto the top of the pile

□ More applications related to computer science


- ◆ Program execution stack (read more from your text)
 - ◆ Evaluating expressions
 - ◆ conversion of infix to postfix
-



Stack Organization

□ LIFO

Last In First Out

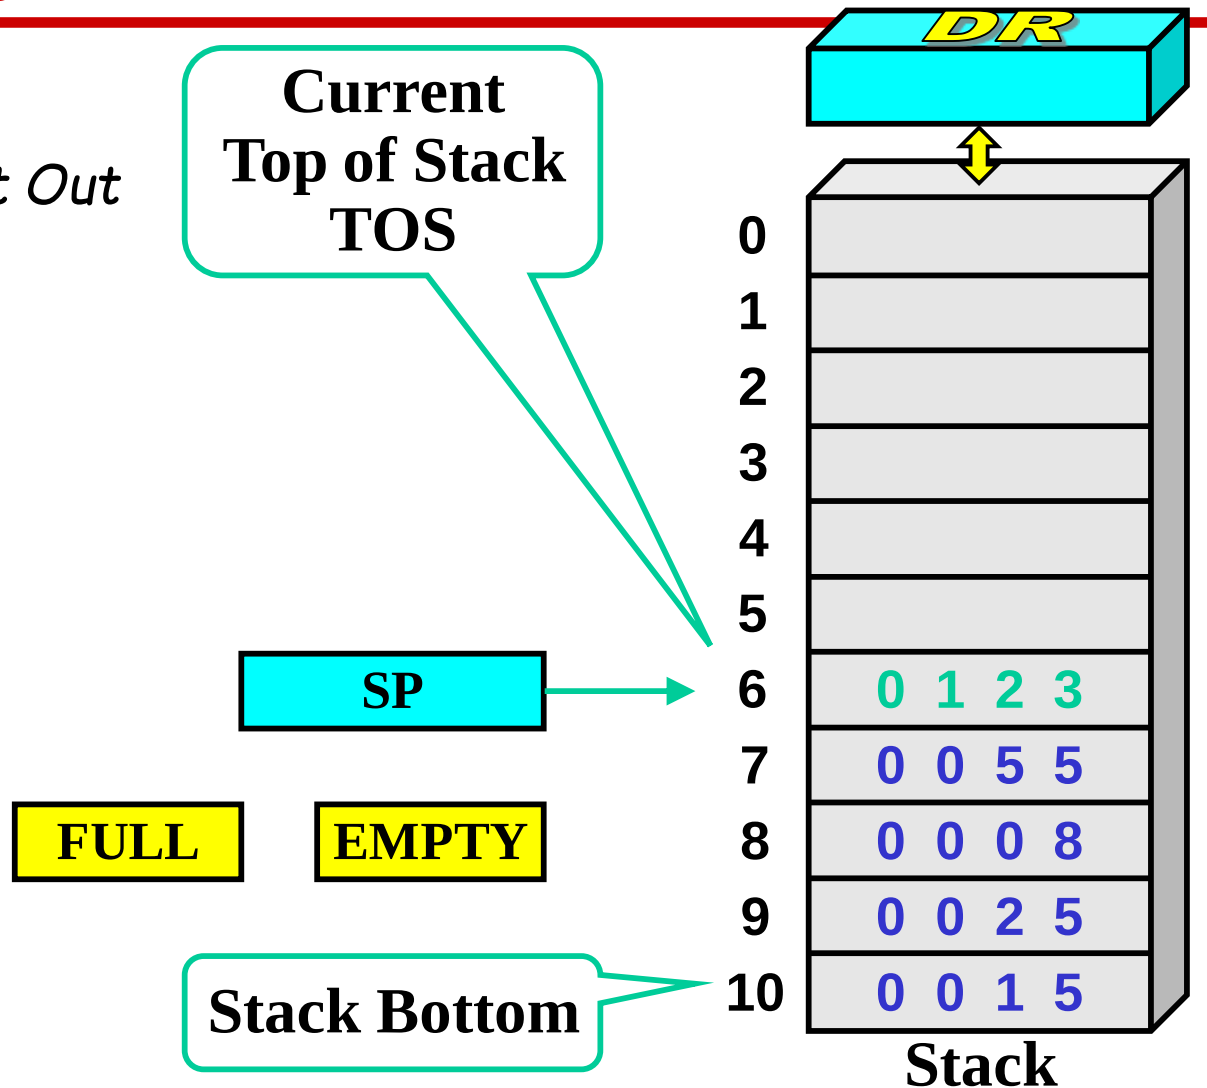




Stack Organization

➤ PUSH

- $SP \leftarrow SP - 1$
- $M[SP] \leftarrow DR$
- If $(SP = 0)$ then $(FULL \leftarrow 1)$
- $EMPTY \leftarrow 0$

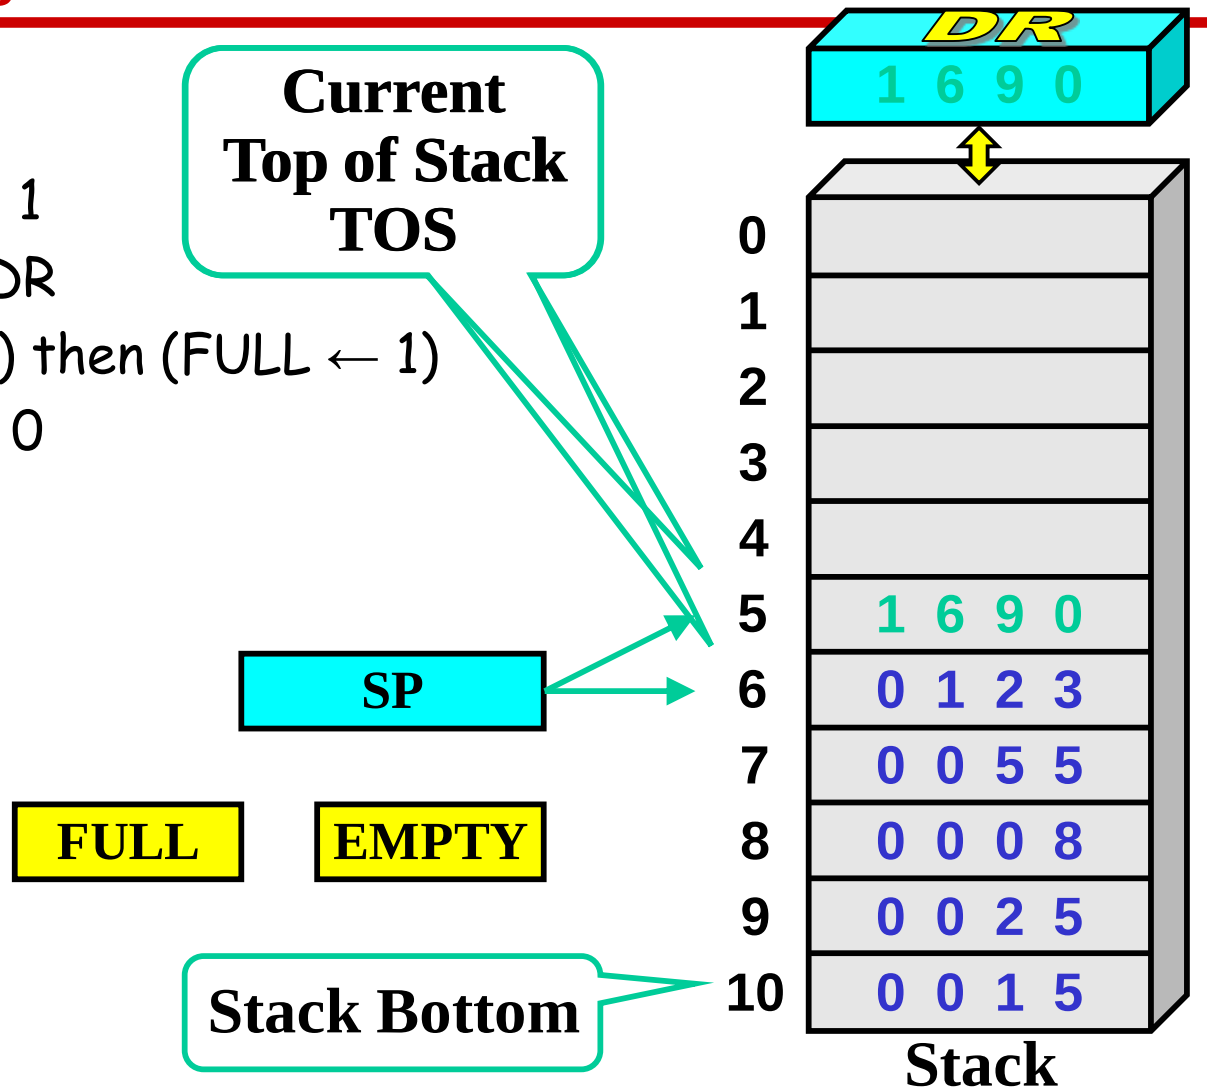




Stack Organization

➤ POP

- $DR \leftarrow M[SP]$
- $SP \leftarrow SP + 1$
- If $(SP = 11)$ then $(EMPTY \leftarrow 1)$
- $FULL \leftarrow 0$

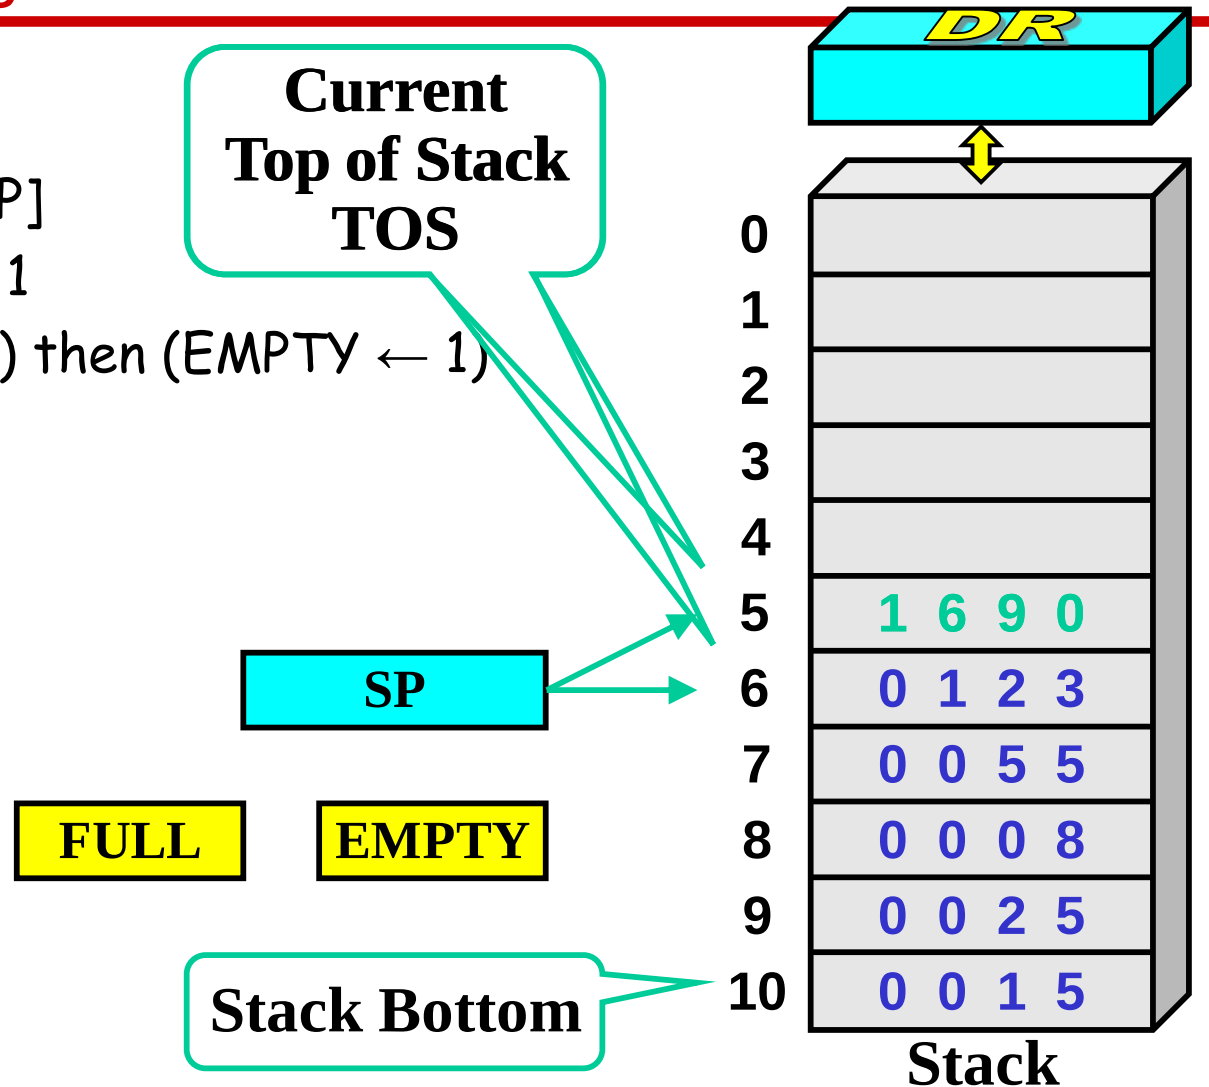



Stack Organization

➤ Memory Stack

➤ PUSH

➤ $SP \leftarrow SP - 1$

➤ $M[SP] \leftarrow DR$

➤ POP

➤ $DR \leftarrow M[SP]$

➤ $SP \leftarrow SP + 1$

PC

AR

SP

0

1

2

100

101

102

200

201

202

Memory

Program

Data

Stack



Reverse Polish Notation

- Infix Notation
 - $A + B$
- Prefix or Polish Notation
 - $+ A B$
- Postfix or Reverse Polish Notation (RPN)
 - $A B +$

$A * B + C * D$ $\xrightarrow{\text{RPN}}$ $A B * C D * +$


(2) (4) * (3) (3) * +
(8) (3) (3) * +
(8) (9) +
17



Reverse Polish Notation

□ Example

$$(A + B) * [C * (D + E) + F]$$

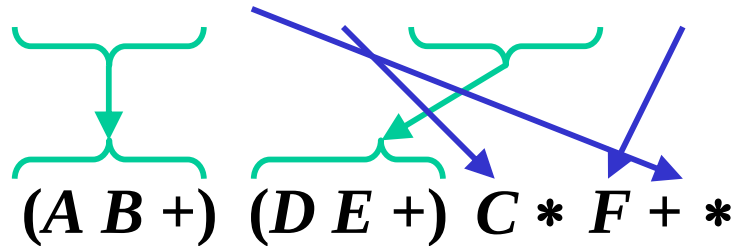



Reverse Polish Notation

➤ Stack Operation

➤ (3) (4) * (5) (6) * +

PUSH 3

PUSH 4


MULT

PUSH 5

PUSH 6

MULT


ADD

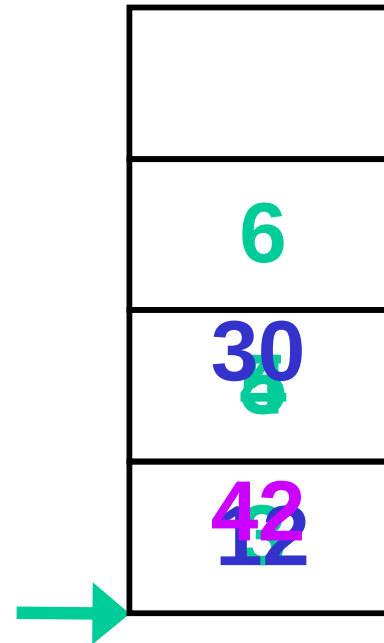



The Towers of Hanoi A Stack-based Application


- ◆ GIVEN: three poles
- ◆ a set of discs on the first pole, discs of different sizes, the smallest discs at the top
- ◆ GOAL: move all the discs from the left pole to the right one.
- ◆ CONDITIONS: only one disc may be moved at a time.
- ◆ A disc can be placed either on an empty pole or on top of a larger disc.

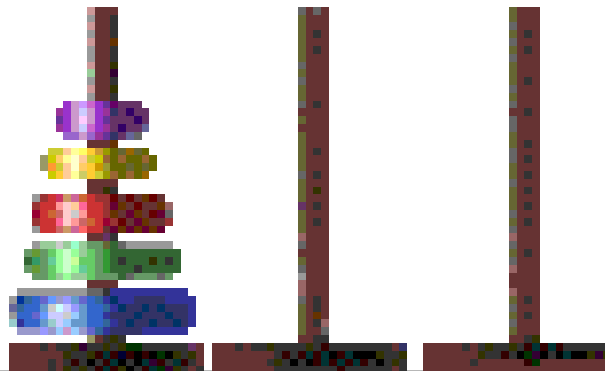



www.JntukMaterials.com


Towers of Hanoi

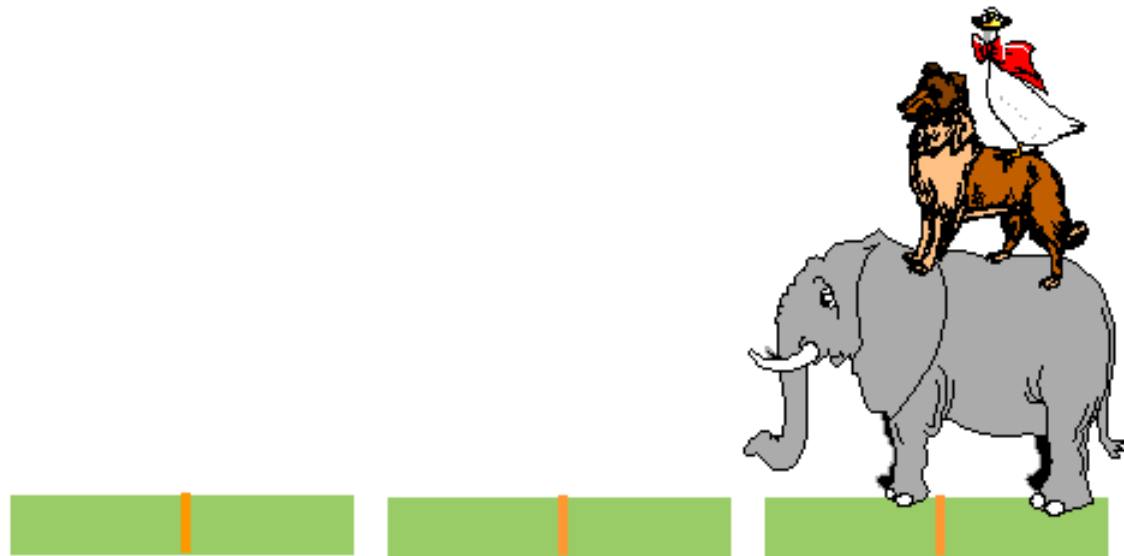



www.JntukMaterials.com


Towers of Hanoi

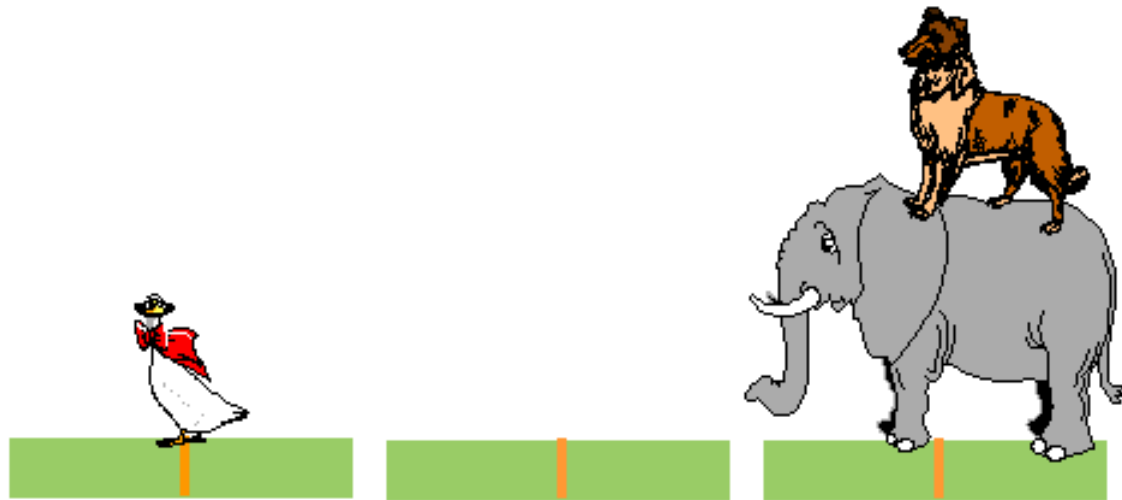



www.JntukMaterials.com

Towers of Hanoi

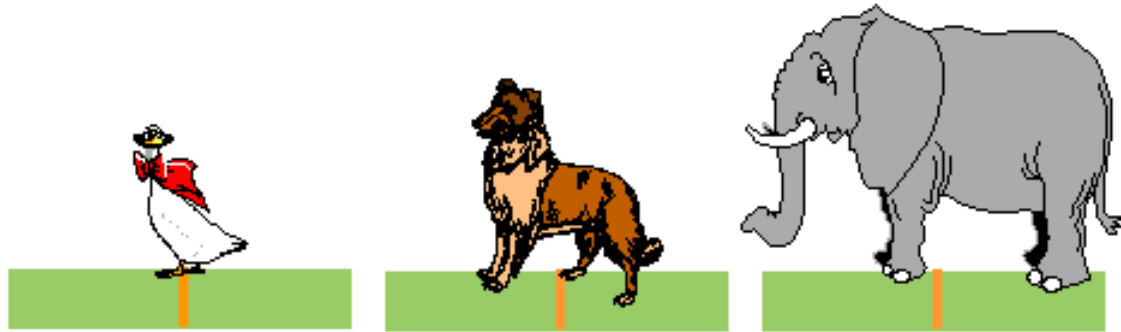



www.JntukMaterials.com

Towers of Hanoi





www.JntukMaterials.com

Towers of Hanoi





www.JntukMaterials.com


Towers of Hanoi





www.JntukMaterials.com


Towers of Hanoi

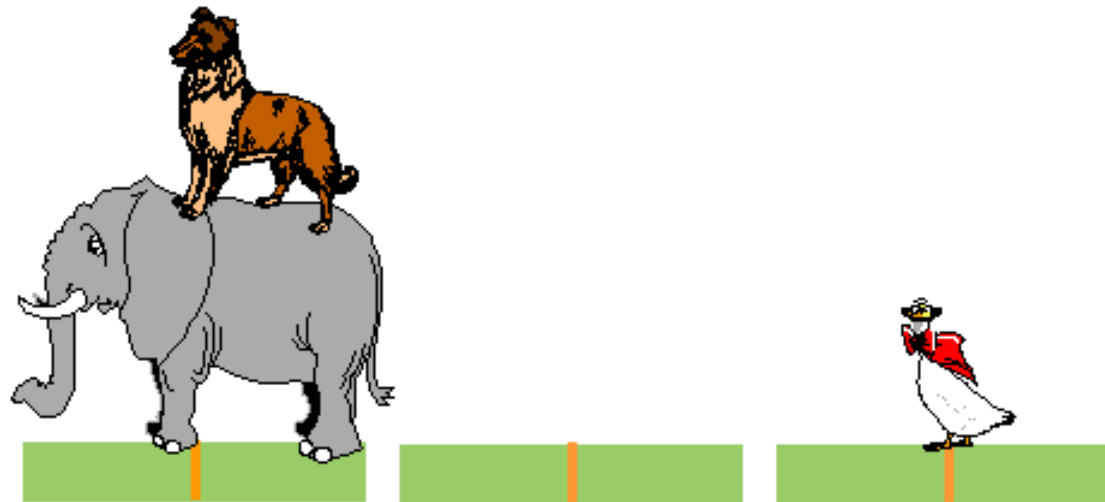



www.JntukMaterials.com

Towers of Hanoi

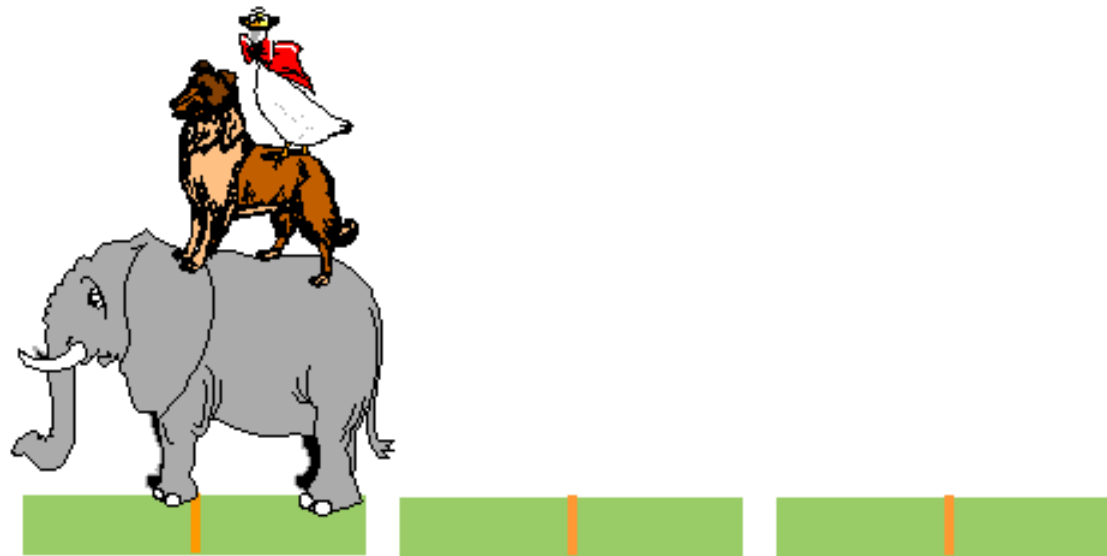




- ❖ subroutine is a group of instructions that will be used repeatedly in different locations of the program.
- ❖ Rather than repeat the same instructions several times, they can be grouped into a subroutine that is called from the different locations.
- ❖ In Assembly language, a subroutine can exist anywhere in the code.
- ❖ However, it is customary to place subroutines separately from the main program.
- ❖ The `CALL` instruction is used to redirect program execution to the subroutine.
- ❖ The `RET` instruction is used to return the execution to the calling routine.



Subroutines

- ❖ We should be able to call a subroutine from anywhere in our program. By "call" we mean being able to change control flow so that the routine is executed.
- ❖ We should be able to pass parameters that may take different values across different calls.
- ❖ A subroutine must be able to return a value.
- ❖ A subroutine must be able to change control flow so that execution continues immediately after the point where it was called.
- ❖ Since a subroutine can be called from many different places this suggests that the routine should be able to differentiate between them and "return" to the right spot depending on where it was called from.

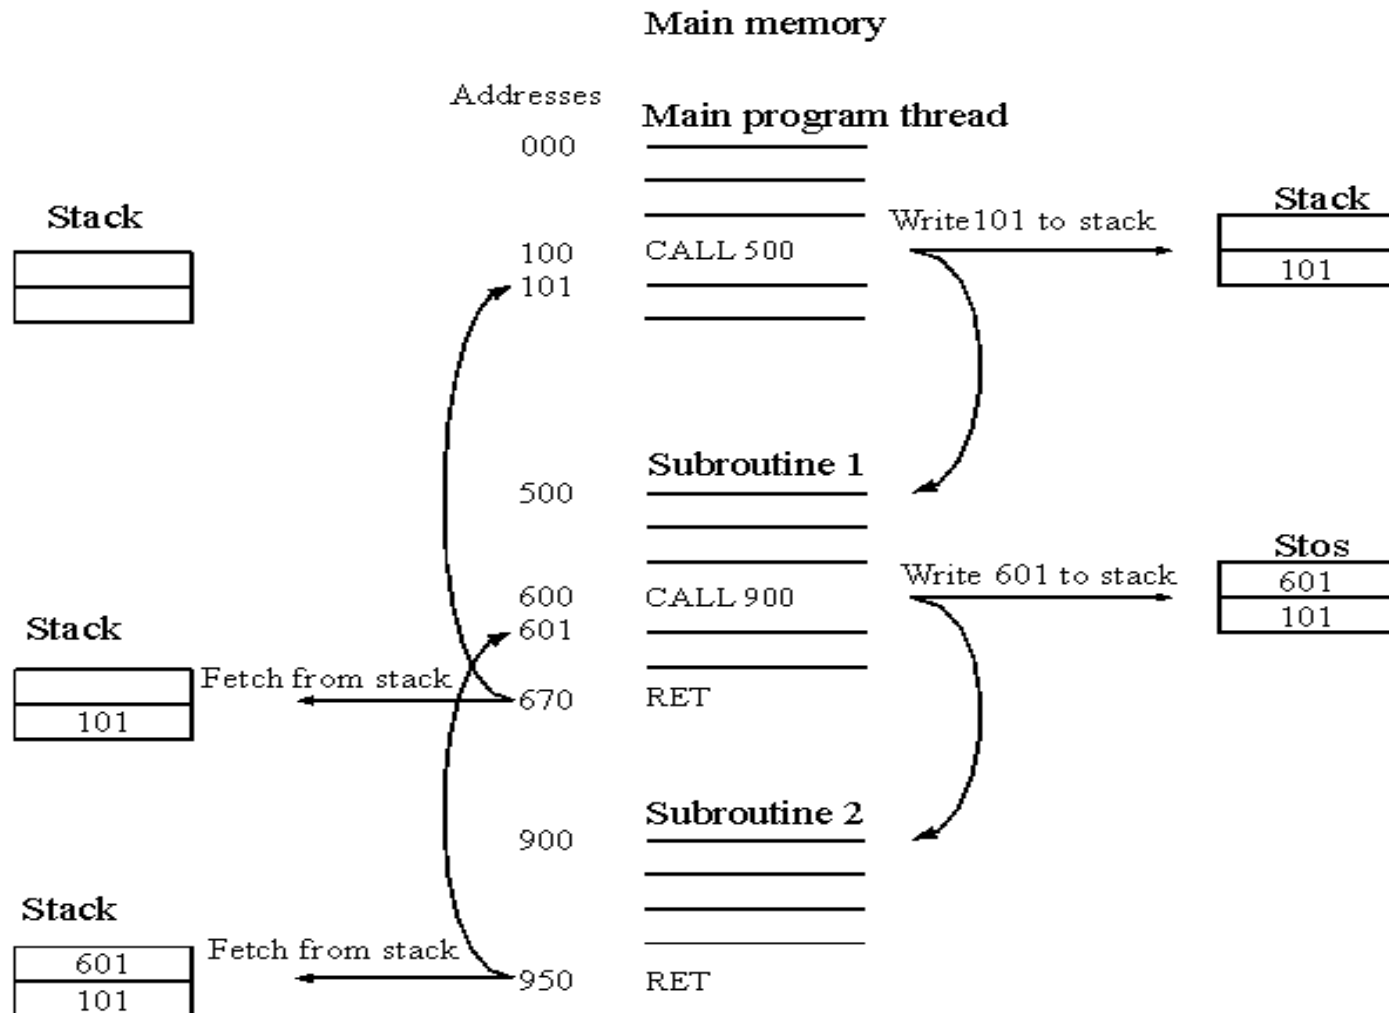



Subroutines

- ❖ A subroutine is a section of code which performs a specific task, usually a task which needs to be executed by different parts of the program.
- ❖ Example: **Math functions, such as square root (sqrt)**
- ❖ Because a subroutine can be called from different places in a program, you cannot get out of a subroutine with an instruction such as **jmp label**
- ❖ Because you would need to jump to different places depending upon which section of the code called the subroutine.
- ❖ When you want to call the subroutine your code has to save the address where the subroutine should return to. It does this by saving the return address on the stack.
- ❖ This is done automatically by using JSR (Jump to Subroutine) or BSR (Branch to Subroutine) .
- ❖ **This instruction pushes the address of the instruction** following the JSR (BSR) instruction on the stack
- ❖ After the subroutine is done executing its code, it needs to return to the address saved on the stack.
- ❖ This is done automatically when you return from the subroutine by
- ❖ using RTS (Return from Subroutine) instruction.
- ❖ This instruction pulls the return address off the stack and loads it into the PC.



Program using Subroutines

Modify Flag Content using
PUSH/POP

Problem: To Reset the Zero Flag

7 6 5 4 3 2 1 0

8085 Flag : S | Z | X | AC | X | P | X | Cy

□ Program:

MVI HL ,FF BF H

PUSH PSW

PUSH R

AND

POP

PSW (Program Status Word).

This register pair is made up of
the Accumulator
and the Flags registers

PUSH PSW

Decrement SP

Copy the contents of register A to the
memory location pointed to by SP

Decrement SP

Copy the contents of Flag register to the
memory
location pointed to by SP

POP PSW (1 Byte Instruction)

Copy the contents of the memory location
pointed to by the SP to Flag register
Increment SP.

Copy the contents of the memory location
pointed to by the SP to register A
-Increment SP



Delay subroutine

- ❑ Write a Program that will display FF and 11 repeatedly on the seven segment display. Write a 'delay' subroutine and
- ❑ Call it as necessary.

00: LXISP FFFF

03: MVIA FF

05: OUT 00

07: CALL 14 20

0A: MVIA 11

0C: OUT 00

0E: CALL 14 20

11: JMP 03 C0

DELAY: 14: MVIB FF

16: MVIC FF

18: DCR C

19: JNZ 18 C0

1C: DCR B

1D: JNZ 16 C0


20: RET



Queue

www.JntukMaterials.com

- ❑ Like a stack, a **queue** is also a list.
- ❑ Stores a set of elements in a particular order
- ❑ Stack principle: **FIRST IN FIRST OUT**
- ❑ = **FIFO**
- ❑ It means: the first element inserted is the first one to be removed
- ❑ Example
- ❑ The first one in line is the first one to be served

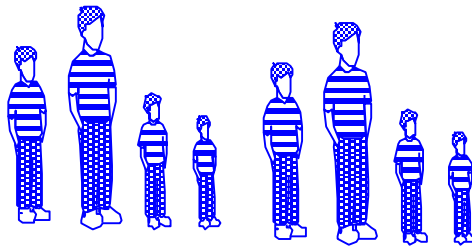



- ❑ Real life examples
 - ◆ Waiting in line
 - ◆ Waiting on hold for tech support
 - ❑ Applications related to Computer Science
 - ◆ Threads
 - ◆ Job scheduling (e.g. Round-Robin algorithm for CPU allocation)
-




Queue

-
- ❑ Like a stack, a *queue* is also a list.
 - ❑ With a queue, insertion is done at one end, while deletion is performed at the other end.
 - ❑ Accessing the elements of queues follows a **First In, First Out (FIFO)** order.
 - ◆ Like customers standing in a check-out line in a store, the first customer in is the first customer served.
-




First In First Out

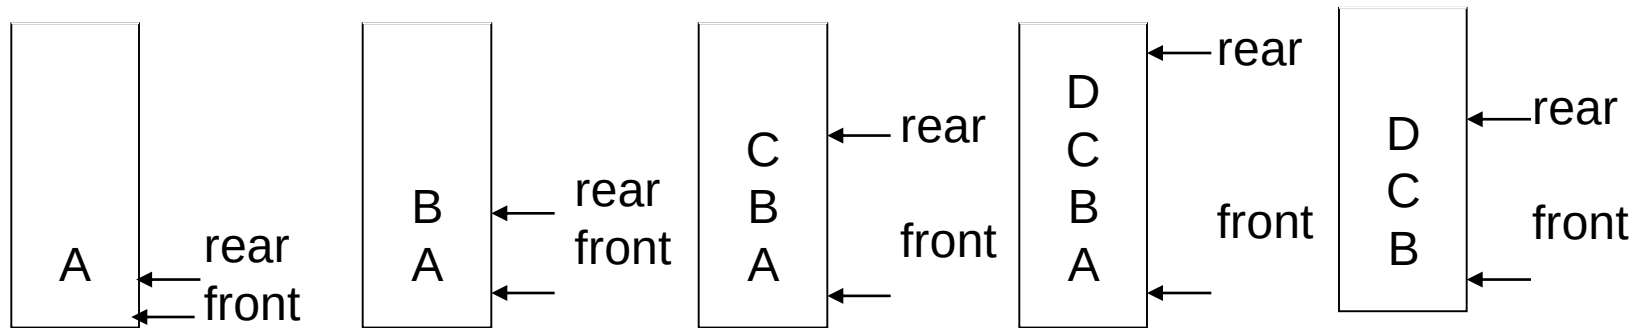



Queue

- ❑ Another form of restricted list
 - ◆ Insertion is done at one end, whereas deletion is performed at the other end
- ❑ Basic operations:
 - ◆ enqueue: insert an element at the rear of the list
 - ◆ dequeue: delete the element at the front of the list

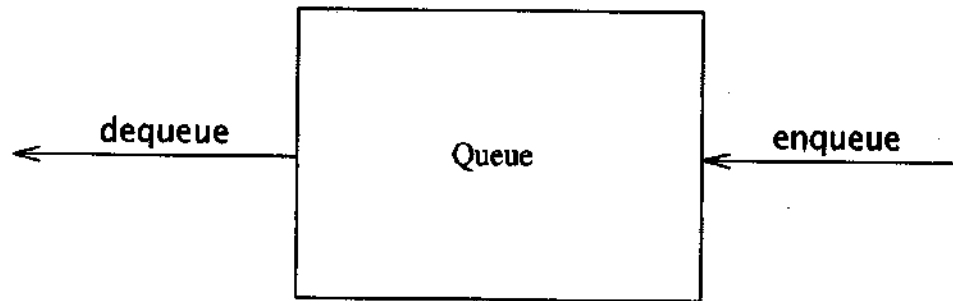


- ❑ First-in First-out (FIFO) list



Enqueue and Dequeue


- ❑ Primary queue operations: **Enqueue** and **Dequeue**
- ❑ Like check-out lines in a store, a queue has a **front** and a **rear**.
- ❑ Enqueue
 - ◆ Insert an element at the **rear** of the queue
- ❑ Dequeue
 - ◆ Remove an element from the **front** of the queue

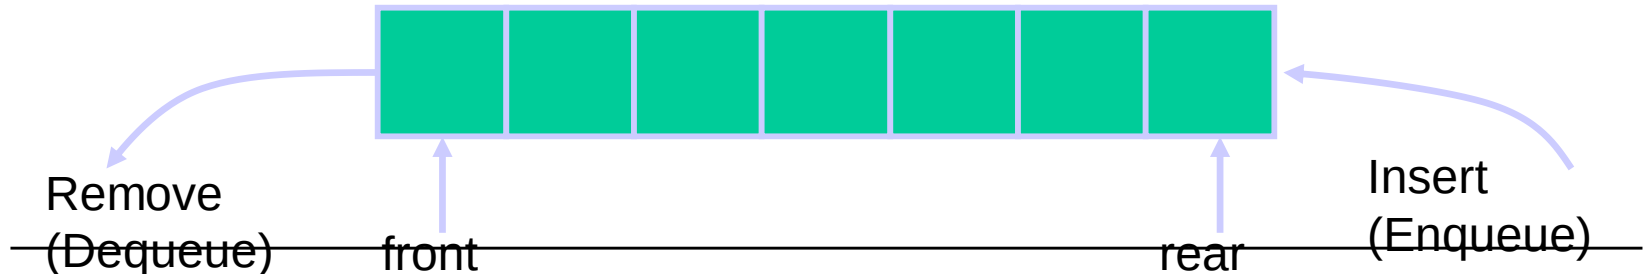




Queue Implementation of Array


- There are several different algorithms to implement **Enqueue** and **Dequeue**
 - ◆ When **enqueueing**, the front index is always fixed and the rear index moves forward in the array.

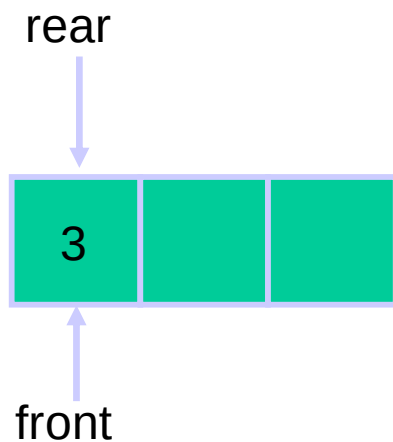

Enqueue(3)

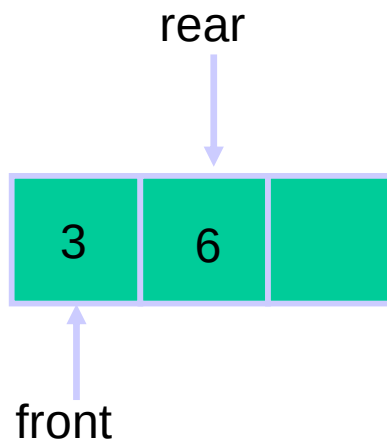

Enqueue(6)

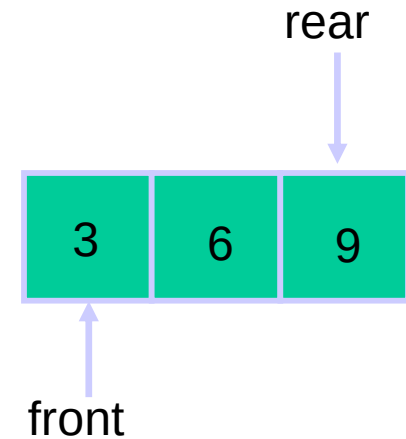


Enqueue(9)




Queue Implementation of Array


- ◆ When **enqueueing**, the front index is always fixed and the rear index moves forward in the array.
- ◆ When **dequeueing**, the element at the front the queue is removed. Move all the elements after it by one position (D1)
- ◆ When **dequeueing**, the element at the front the queue is removed. the rear index is always fixed. (D2)

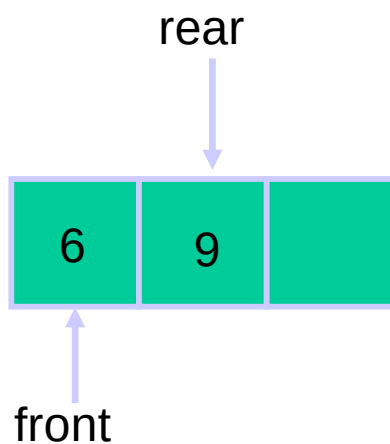

Dequeue()

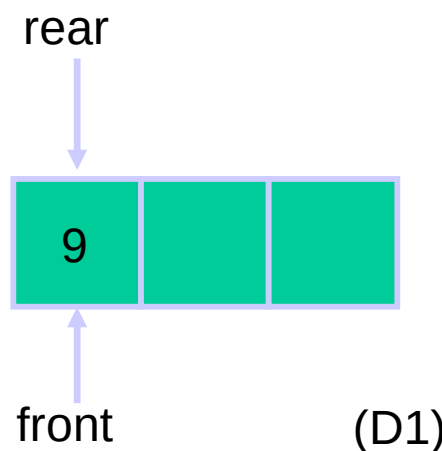

Dequeue()

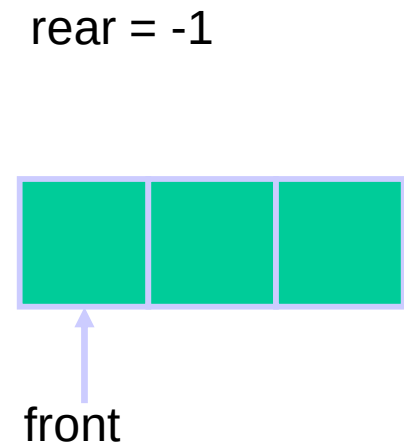

Dequeue()




front	rear	Q[0]	Q[1]	Q[2]	Q[3]	Comments
-1	-1					queue is empty
-1	0	J1				Job 1 is added
-1	1	J1	J2			Job 2 is added
-1	2	J1	J2	J3		Job 3 is added
0	2		J2	J3		Job 1 is deleted
1	2			J3		Job 2 is deleted




Circular queue

EMPTY QUEUE

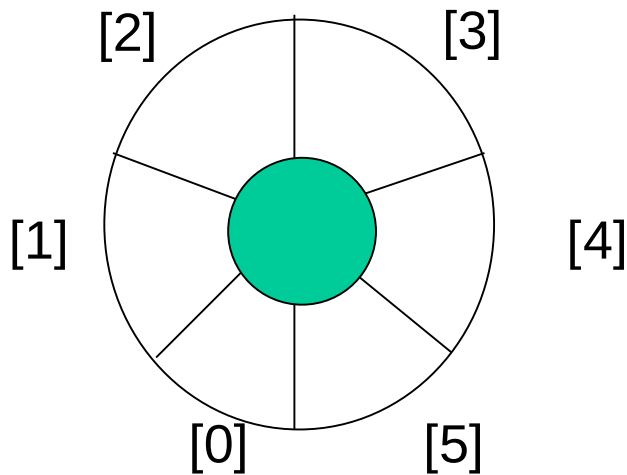

front = 0
rear = 0

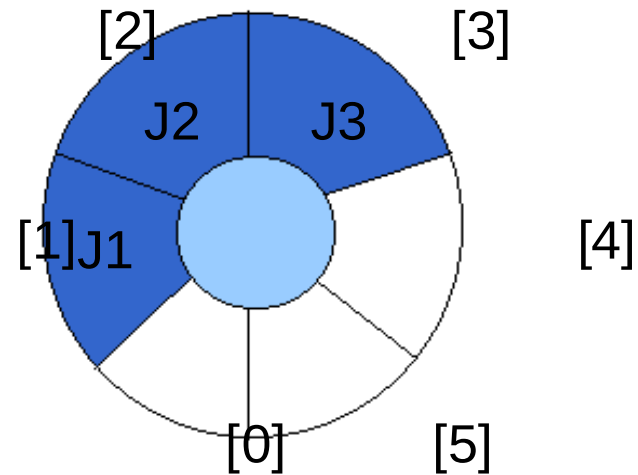


front = 0
rear = 3

Can be seen as a circular queue




Leave one empty space when queue is full Why?

FULL QUEUE

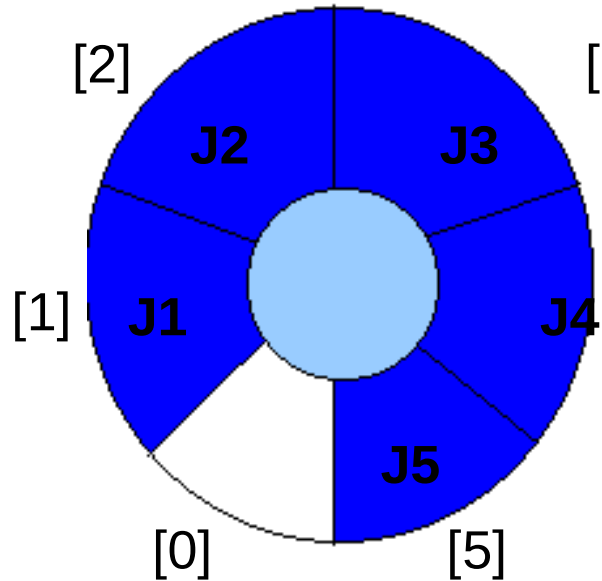

front = 0
rear = 5

FULL QUEUE

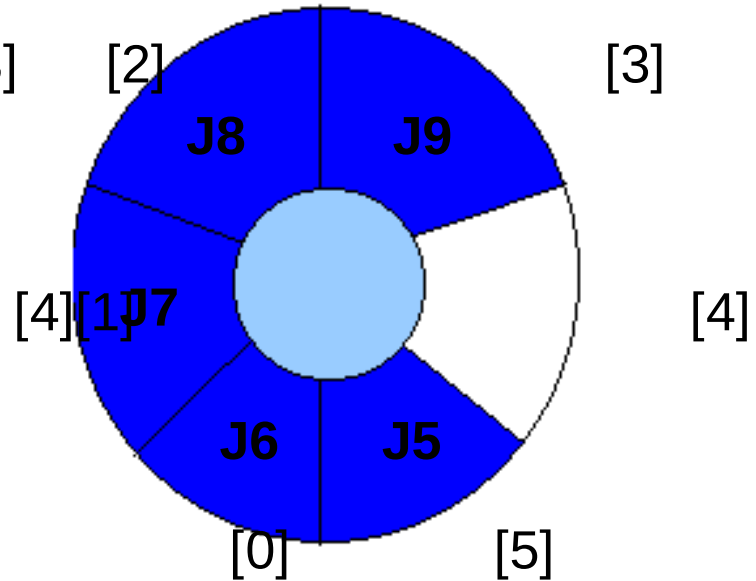

front = 4
rear = 3

How to test when queue is empty?

How to test when queue is full?



Queues vs stacks

1. One end of the stack is fixed (the bottom), while the other end rises and falls as data are pushed and popped. A single pointer is needed to point to the top of the stack at any given time.

On the other hand, both ends of a queue move to higher addresses as data are added at the back and removed from the front. So two pointers are needed to keep track of the two ends of the queue.

2. Without further control, a queue would continuously move through the memory of a computer in the direction of higher addresses.

One way to limit the queue to a fixed region in memory is to use a *circular Q*.

Let us assume that memory addresses from BEGINNING to

END are assigned to the queue. The first entry in the queue is entered into location BEGINNING, and successive entries are appended to the queue by entering them at successively higher addresses.



By the time the back of the queue reaches END, space will have been created at the beginning if some items have been removed from the queue.

Hence, the back pointer is reset to the value BEGINNING and the process continues. As in the case of a stack, care must be taken to detect when the region assigned to the data structure is either completely full or completely empty.



Logical Shifts

- Logical shift - shifting left (LShiftL) and shifting right (LShiftR)

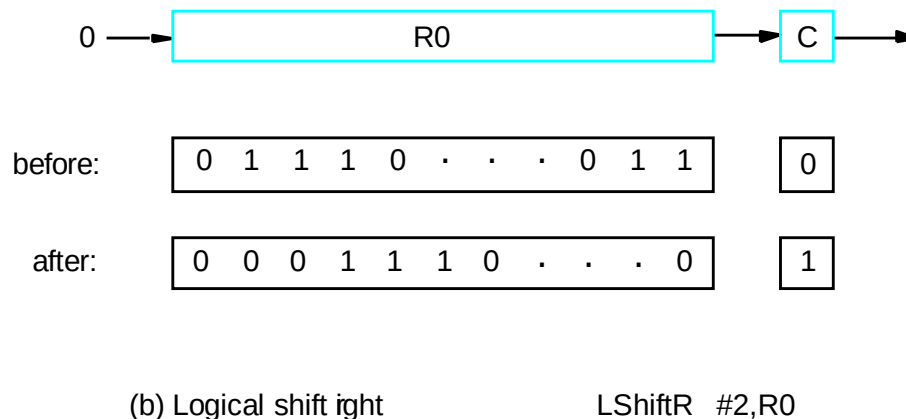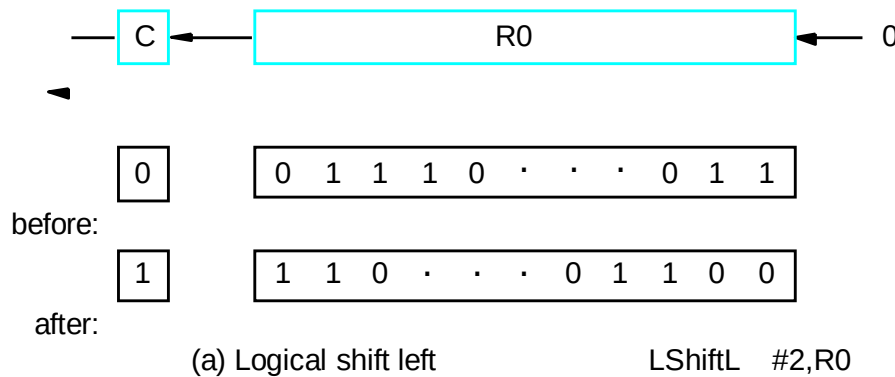




Multiplication and Division-Arithmetic Shifts

An arithmetic shift is a microoperation that shifts signed binary number to the left or right.

An arithmetic shift left multiplies a signed binary number by 2 and shift right divides by 2.

The signed bit remains unchanged whether it is divided or multiplied by 2.

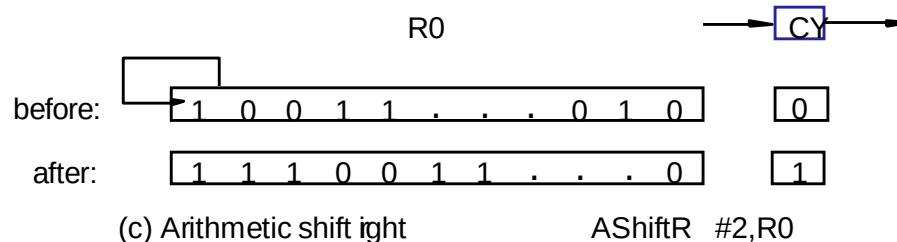

Arithmetic left Shift:

The first (or sign) bit (bit 0) does not participate in the shift.


Arithmetic right Shift

If the number is positive, the leftmost bits will be filled with zero.



If the number is negative, the leftmost bits will be filled with ones.



Arithmetic Shifts

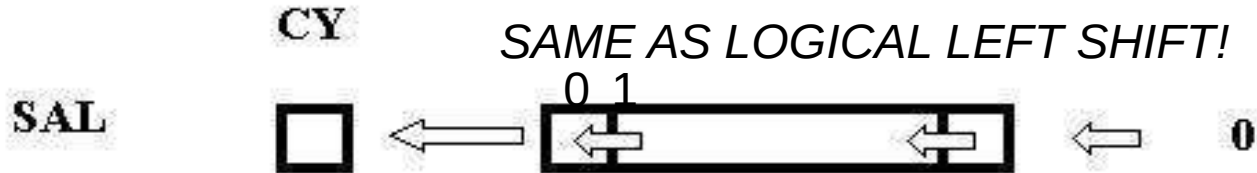

If the bit shifted out of position 1 does not match the sign bit, overflow will occur.

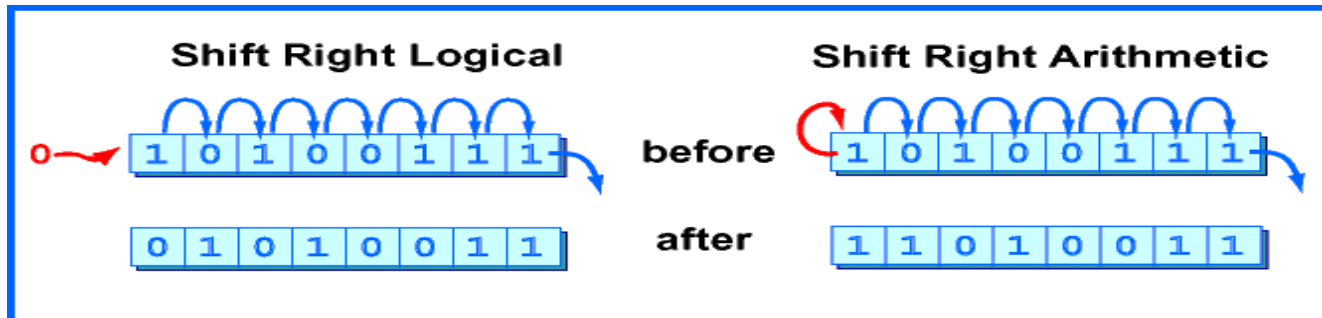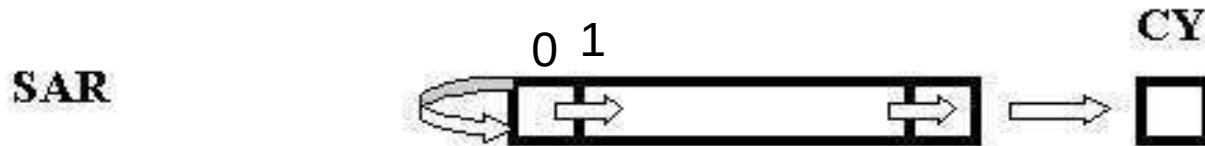



Arithmetic Right Shift :1 bit

1) Before: 00001000 (= 8 decimal)

After: 00000100 (= 4 decimal)

Before: 10000011 (= -125 decimal in two's complement)

After: 11000001 (= -63 decimal - one bit is "lost" off the bottom)

After: 11100000 (= -32 decimal - one bit is "lost" off the bottom)

After: 11110000 (= -16 decimal) After: 11111000 (= -8 decimal)

After: 11111100 (= -4 decimal) After: 11111110 (= -2 decimal)

After: 11111111 (= -1 decimal) After: 11111111

(= -1 decimal - one bit is "lost" off the bottom)




Look at the 8-bit binary bit patterns below and note the differences between Arithmetic Right Shift and Logical Right Shift:

11110111 (-9)	arithmetic-right-shifted gives 1111011 (-5)
11110111	logical-right-shifted gives 0111011 (+123)
1111011 (-5)	arithmetic-right-shifted gives 1111101 (-3)
1111011	logical-right-shifted gives 0111101 (+125)
1111101 (-3)	arithmetic-right-shifted gives 1111110 (-2)
1111101	logical-right-shifted gives 0111110 (+126)
1111110 (-2)	arithmetic-right-shifted gives 1111111 (-1)
1111110	logical-right-shifted gives 0111111 (127)
1111111 (-1)	arithmetic-right-shifted gives 1111111 (-1)
1111111	logical-right-shifted gives 0111111 (+127)
0111111 (+127)	arithmetic-right-shifted gives 0011111(+63)
0111111	logical-right-shifted gives 0011111 (+63)
00000001 (+1)	arithmetic-right-shifted gives 00000000 (0)
00000001	logical-right-shifted gives 00000000 (0)



Rotate

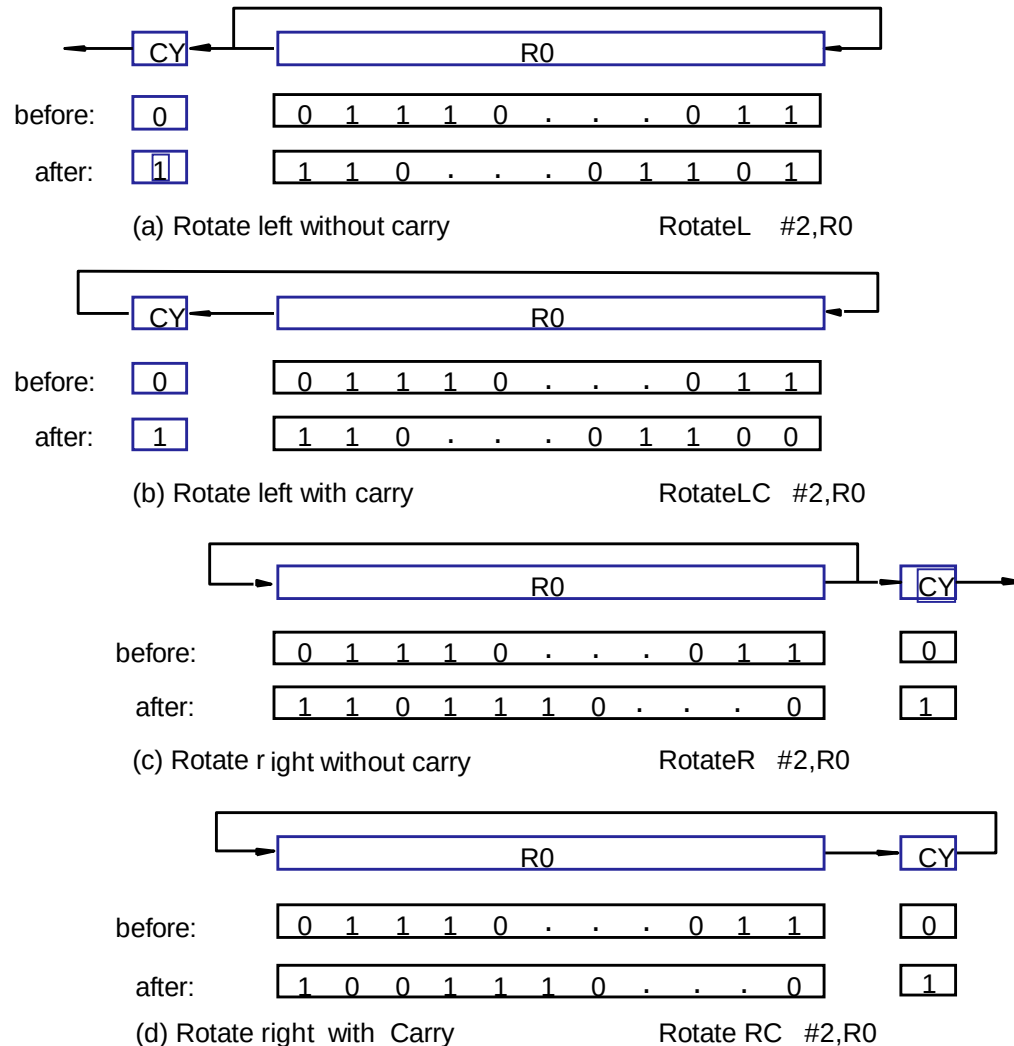



Multiplication and Division

- Not very popular (especially division)
- Multiply R_i, R_j
 $R_j \leftarrow [R_i] \times [R_j]$
- $2n$ -bit product case: high-order half in $R(j+1)$
- Divide R_i, R_j
 $R_j \leftarrow [R_i] / [R_j]$
- Quotient is in R_j , remainder may be placed in $R(j+1)$




Encoding of Machine Instructions

(NOT IN SYLLABUS)



Encoding of Machine Instructions

- Assembly language program needs to be converted into machine instructions. (ADD = 0100 in ARM instruction set)
- In the previous section, an assumption was made that all instructions are one word in length.
- OP code: the type of operation to be performed and the type of operands used may be specified using an encoded binary pattern
- Suppose 32-bit word length, 8-bit OP code (how many instructions can we have?), 16 registers in total (how many bits?), 3-bit addressing mode indicator.
- Add R1, R2
- Move 24(R0), R5
- LshiftR #2, R0
- Move #\$3A, R1
- Branch>0 LOOP

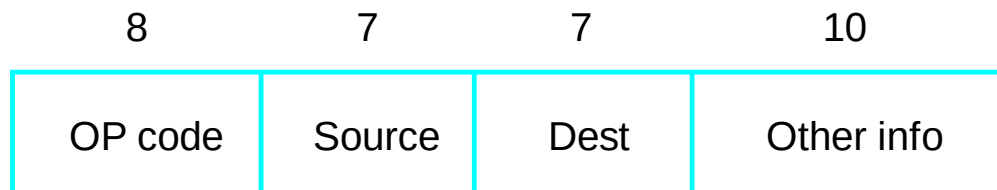


(a) One-word instruction



Encoding of Machine Instructions

- What happens if we want to specify a memory operand using the Absolute addressing mode?
- Move R2, LOC
- 14-bit for LOC - insufficient
- Solution - use two words

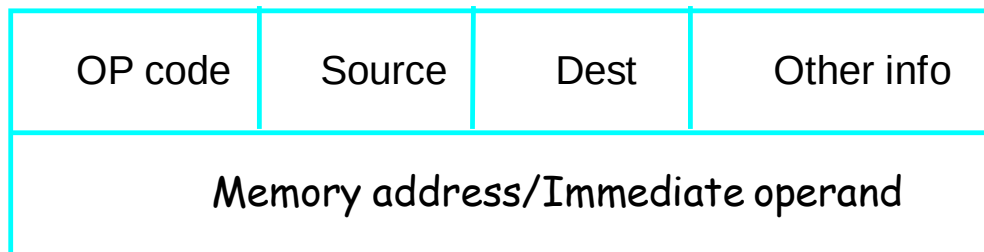

(b) Two-word instruction



Encoding of Machine Instructions

- Then what if an instruction in which two operands can be specified using the Absolute addressing mode?
- `Move LOC1, LOC2`
- Solution - use two additional words
- This approach results in instructions of variable length. Complex instructions can be implemented, closely resembling operations in high-level programming languages - Complex Instruction Set Computer (CISC)



Encoding of Machine Instructions

- If we insist that all instructions must fit into a single 32-bit word, it is not possible to provide a 32-bit address or a 32-bit immediate operand within the instruction.
- It is still possible to define a highly functional instruction set, which makes extensive use of the processor registers.
- Add R1, R2 ----- yes
- Add LOC, R2 ---- no
- Add (R3), R2 ---- yes



The difference in speed between the processor and I/O devices creates the need for mechanisms to synchronize the transfer of data between them.

A solution to this problem is as follows; On output, the processor sends the first character and then waits for a signal from the display that the character has been received. It then sends the second character, and so on. Input is sent from the keyboard in a similar way; the processor waits for a signal indicating that a character key has been struck and that its code is available in some buffer register associated with the keyboard. Then the processor proceeds to read that code.

The keyboard and the display are separate devices as shown in Figure 2.19. The action of striking a key on the keyboard does not automatically cause the corresponding character to be displayed on the screen. One block of instructions in the I/O program transfers the character into the processor, and another associated block of instructions causes the character to be displayed.

Consider the problem of moving a character code from the keyboard to the processor. Striking a key stores the corresponding character code in an 8-bit buffer register associated with the keyboard. Let us call this register DATAIN, as shown in Figure 2.19. To inform the processor that a valid character is in DATAIN, a status control flag, SIN, is set to 1. A program monitors SIN, and when SIN is set to 1, the processor reads the contents of DATAIN. When the character is transferred to the processor, SIN is automatically cleared to 0. If a second character is entered at the keyboard, SIN is again set to 1 and the process repeats.

An analogous process takes place when characters are transferred from the processor to the display. A buffer register, DATAOUT, and a status control flag, SOUT, are used for this transfer. When SOUT equals 1, the display is ready to receive a character. Under program control, the processor monitors SOUT, and when SOUT is set to 1, the processor transfers a character code to DATAOUT. The transfer of a character to DATAOUT clears SOUT to 0; when the display device is ready to receive a second character, SOUT is again set to 1. The buffer registers DATAIN and DATAOUT and the status flags SIN